



# CURB EV450

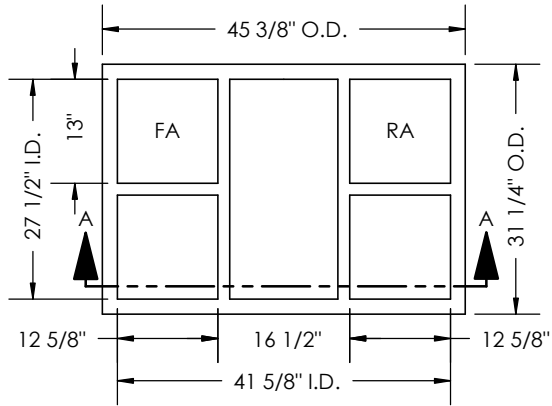


TOP VIEW

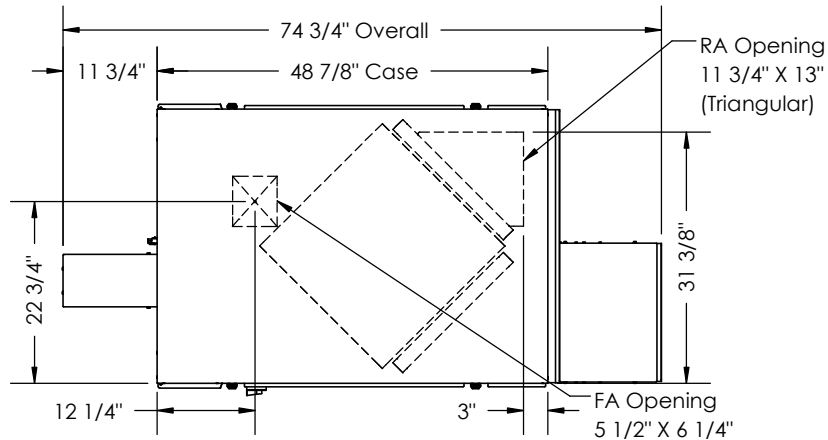


TOP VIEW


## CURB CROSS-SECTION A-A (TYP.)

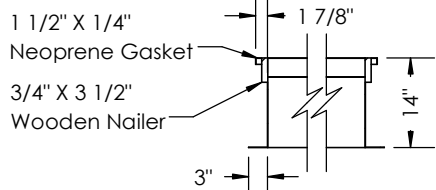


SECTION A-A

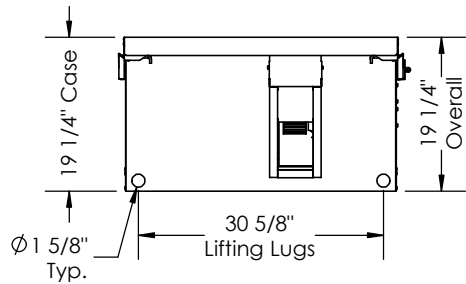

LEFT VIEW

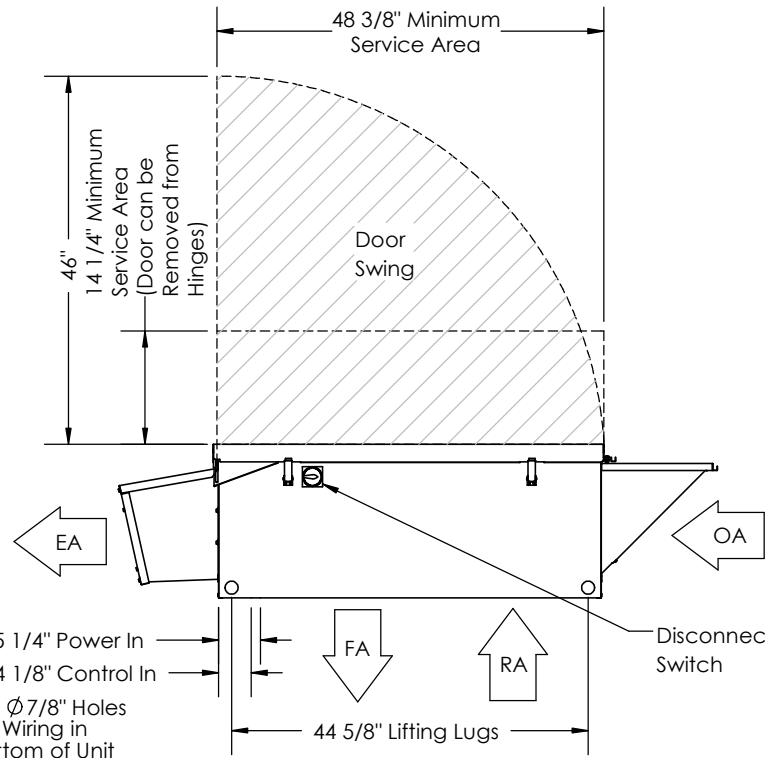

FRONT VIEW

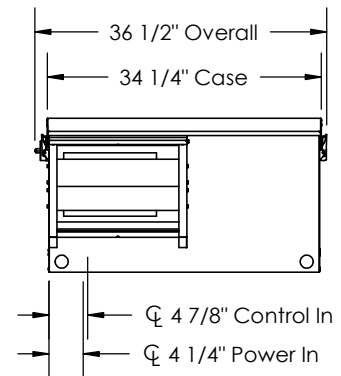

RIGHT VIEW

### ABBREVIATION

EA: Exhaust Air to outside  
 OA: Outside Air intake  
 RA: Room Air to be exhausted  
 FA: Fresh Air to inside

### INSTALLATION ORIENTATION

Unit must be installed in orientation shown.

### NOTE:

- UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE ROUNDED TO THE NEAREST EIGHTH OF AN INCH.
- SPECIFICATIONS MAY BE SUBJECT TO CHANGE WITHOUT NOTICE.