

FRONT VIEW

ABBREVIATION

EA: Exhaust Air to outside OA: Outside Air intake RA: Room Air to be exhausted FA: Fresh Air to inside


INSTALLATION ORIENTATION

Unit must be installed in orientation shown.

NOTE:

1. UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE ROUNDED TO THE NEAREST EIGHTH OF AN INCH.

2. SPECIFICATIONS MAY BE SUBJECT TO CHANGE WITHOUT NOTICE.

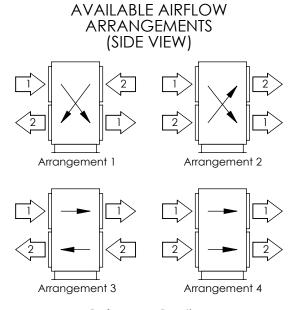

Performance Derating: Airflow Arrangements 3 & 4 result in lower energy transfer. Reduce sensible effectiveness by 2 percentage points. Reduce total effectiveness by 1 percentage point.

RenewAire Energy Recovery Ventilation

Model: PA8X Drawing Type: Unit Dimension Version: AUG18

LEFT VIEW