


DN SERIES DOAS

Installation, Operation and Maintenance Manual

DN2RT

DN3RT

DN5RT

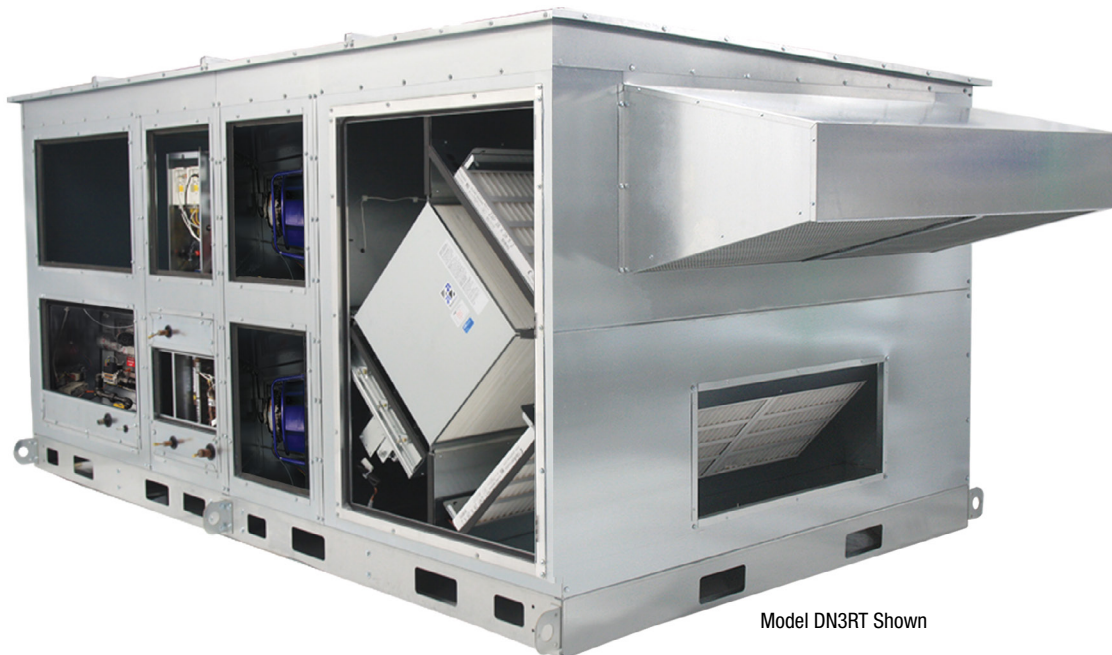

Model DN3RT Shown

⚠ WARNING**ARC FLASH AND ELECTRIC SHOCK HAZARD**

Arc flash and electric shock hazard. Disconnect all electric power supplies, verify with a voltmeter that electric power is off and wear protective equipment per NFPA 70E before working within electric control enclosure. Failure to comply can cause serious injury or death.

Customer must provide earth ground to unit, per NEC, CEC and local codes, as applicable.

Before proceeding with installation, read all instructions, verifying that all the parts are included and check the nameplate to be sure the voltage matches available utility power.

The line side of the disconnect switch contains live high-voltage.

The only way to ensure that there is NO voltage inside the unit is to install and open a remote disconnect switch and verify that power is off with a volt meter. Refer to unit electrical schematic.

Follow all local codes.

⚠ CAUTION**RISK OF ELECTRIC SHOCK OR EQUIPMENT DAMAGE**

Whenever electrical wiring is connected, disconnected or changed, the power supply to the DOAS and its controls must be disconnected. Lock and tag the disconnect switch or circuit breaker to prevent accidental reconnection of electric power.

⚠ CAUTION**RISK OF DAMAGE TO ENTHALPIC CORES**

Whenever working within the DOAS cabinet, protect the enthalpic cores from accidental damage. The core media is subject to damage from dropped tools or other foreign objects.

Low air flow can cause fouling of the enthalpic cores. The DOAS must never be operated without clean filters in place and minimum airflow must be greater than 250 CFM per full-sized core.

IMPORTANT

This unit is intended for general ventilating only. Do not use to exhaust hazardous or explosive materials and vapors. Do not connect this equipment to range hoods, fume hoods or collection systems for toxics.

IMPORTANT

This unit is for ventilating finished structures only. It is not to be used until after all construction has been completed and construction debris and dust are cleaned from the Occupied Space.

⚠ WARNING**FIRE OR EXPLOSION HAZARD**

This unit may include a gas heater.

Read and comply with all safety information and warnings in the *RenewAire Indirect Gas-Fired Heater User Manual* that is included with the unit.

⚠ CAUTION**RISK OF ELECTRIC SHOCK**

Optional VFDs use capacitors that will retain a high voltage charge even after power is disconnected. After fans come to a complete stop, wait for five minutes for the capacitors to discharge themselves.

⚠ CAUTION**RISK OF CONTACT WITH HIGH SPEED MOVING PARTS.**

Disconnect all local and remote power supplies, verify with a voltmeter that electric power is off and all fan blades have stopped rotating before working on the unit.

Do not operate this unit with any cabinet panels removed.

⚠ CAUTION**RISK OF CONTACT WITH HOT SURFACES**

The blower motor and other electrical components are extremely hot during operation. Allow sufficient time for them to cool before working within the unit cabinet. Use extreme caution and wear protective gloves and arm protection when working on or near hot blower motors and electrical components.

IMPORTANT

Do not release refrigerant into the atmosphere! If required service procedures include the adding or removal of refrigerant, the service technician must comply with all federal, state and local laws. The procedures discussed in this manual should only be performed by a qualified, EPA Certified technician.

IMPORTANT

This equipment is to be installed by following Industry Best Practices and all applicable codes. Any damage to components, assemblies, subassemblies or the cabinet which is caused by improper installation practices will void the warranty.

READ AND SAVE THIS MANUAL/LIRE ET CONSERVER CE MANUEL

NOTICE

This manual contains space for maintaining written records of unit maintenance and/or repairs. See Section 7.2 Maintenance Records. At the time the DOAS is commissioned, a maintenance schedule should be developed by the user to incorporate monthly and seasonal maintenance and include start-up maintenance tasks as described in this manual.

UNIT INFORMATION


Record information as shown below.

In the unlikely event that factory assistance is ever required, information located on the unit label will be needed.

Locate the RenewAire unit label found on the outside of the unit.

NOTE: This information is for purposes of identifying the unit-specific option data from the Option Code.



 **NOTE:** This page is to be completed by the installing contractor. The completed document is to be turned over to the owner after start-up.

OPTION CODE:


D	N	-		-	J	R	T							-	-							-	-								
---	---	---	--	---	---	---	---	--	--	--	--	--	--	---	---	--	--	--	--	--	--	---	---	--	--	--	--	--	--	--	--

SERIAL NUMBER:

--	--	--	--	--	--	--	--


SO #:

--	--	--	--	--	--



UL LISTED
CONFORMS TO
UL 1812
CANADA TO
CAN/CSA C22.2
No. 113

Energy Recovery Ventilator



RenewAir
Energy Recovery Ventilation

Toll Free: 800-627-4499

⚠ WARNING

Danger of electric shock.
Always disconnect power source before servicing.
Not For Use In Cooking Area.
Use Copper Supply Wires Only.

⚠ AVERTISSEMENT

Danger de choc électrique. Toujours déconnecter la source d'alimentation avant les réparations.
Ne Pas Utiliser Dans Une Zone De Cuisson.
Utiliser des Fils D'Alimentation En Cuivre.

Motors Thermally Protected / Moteurs protégés thermiquement

POWER SUPPLY TO UNIT / Alimentation d'énergie à l'unité					MOTOR/MOTEUR SPEC.		
Voltage	Minimum Circuit Amps	Max Over current Protection Device			Voltage	Qty & kW/HP	FLA
575V	14.3	15			575	2@5.0 HP	5.3
60 Hz 3-Phase	Amp. Minimales de Circuit	Dispositif de protection maximum contre les surintensités				Qty & kW/CV	APC
Coil	Type	Rows	FPI	Max Pressure (psi)	Motors Protected by Variable Frequency Drives / Les moteurs protégés par fréquence variable continue		
Dehumidification	-	-	-	-	Voltage	Qty & kW/HP	FLA
Re-heat	-	-	-	-	575	2@5.0 HP	6.1
Heat	-	-	-	-		Qty & kW/CV	APC
Coil					Gas Heater/Chauffage à Gaz		
					Voltage/Phase	Amps	Input MBH
					115V/1-Ph	2.4	100
					Natural Gas	Label No: 133987-000	

Option Code: DN-3-JRTBV138---G3VN2--L

MODEL/MODELE: DN-3-JRT Serial Number: L18 0020D

SO#: 068519 JO#: 39377-0000

UNIT LABEL (TYPICAL)


DN 2RT

Dedicated Outdoor Air System Standard



ROOFTOP UNIT

Dedicated Outside Air System
Unit with Energy Recovery

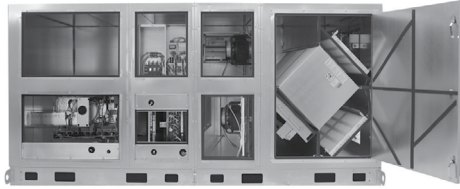

DN3IN, ERV + CC + HGRH + GH (BT) shown

Energy Recovery Core is AHRI Certified®



ERV - Energy Recovery Ventilator

EH - Electric Heater

CC - Cooling Coil

HC - Heating Coil

GH - Gas Heat Module

HGRH - Hot Gas Reheat Coil

BT - Blow Thru

DT - Draw Thru

SPECIFICATIONS

Energy Recovery Type:

Static plate total energy transfer

Typical Airflow Range: 375-1,650 CFM

AHRI 1060 Certified Core:

One L-62-G5 and one L-125-G5

ETL Certification:

Tested to UL standards 1812 and 1995

Standard Features:

EC Motors for both airstreams

Direct Drive backward inclined plenum

Higher ESP of up to 2" w.g. at 1,500 CFM

Integrated programmable controls

True 100% Face and bypass enthalpy based modulating economizer

Class 1 low leakage motorized isolation dampers

Stainless steel double-sloped drain pan with cooling option

1", 20 gauge galvanized double wall foam-injected

R6.5 insulation

Modbus RTU or IP Integration

Inlets/Outlets:

OA & RA Inlets: 24" x 16"

SA Outlet: 24" x 16"

EA Outlet: 20" x 16"

Filters:

Total qty. 4, MERV 8:

16" x 20" x 2"

Unit Weight for 1" Cabinets: 1500-2700 lbs.

Max. Shipping Dimensions & Weight for 1" Cabinets (on pallet):

140" L x 90" W x 79" H

1700-2900 lbs.

Unit Weight for 2" Cabinets: 1600-2825 lbs.

Max. Shipping Dimensions & Weight for 2" Cabinets (on pallet):

140" L x 90" W x 81" H

1800-3025 lbs.

Motor(s):

Qty. 2, Direct drive motorized impeller packages

Options:

DX, heat pump, or chilled water cooling coil

Modulating hot gas reheat

Steam or hot water coil, gas heat module or electric heater

Onboard variable frequency drives (VFDs) - both airstreams

Fused disconnect

Spring isolators (VFDs only)

2", 20 gauge galvanized double wall foam-injected

R13 insulation with thermal break construction

Exterior paint - grey, white, custom color

Salt spray - 2500 hour

BACNET factory activation

GFCI convenience outlet

Recirculation damper

Drain overflow switch

Mist eliminator

Electrofin coating for coils

Accessories:

Filters - MERV 13, 2" and 4" (shipped loose),

MERV 14, 2" and 4" (shipped loose)

Additional filters available upon request

Roof curb - standard 14"

Custom hurricane or seismic rated curbs

Curb clip kit

Carbon dioxide sensor/control -

wall mount (CO2-W), duct mount (CO2-D)

IAQ sensor - wall mount (IAQ-W),

duct mount (IAQ-D)

Motion occupancy sensor/control -

ceiling mount (MC-C), wall mount (MC-W)

Smoke detector

Room temperature and humidity sensor

Duct static pressure sensor with display to 10",

without display 0-2"

Room pressure sensor with display to 1",

 
without display 0-1"

Waterless trap negative pressure


Waterless trap positive pressure

Remote display


INTERNAL OPTIONS FOR HEATING AND COOLING




ERV only

 


ERV + EH (BT)

 


ERV + GH (BT)

 


ERV + CC/HC (BT)

 


ERV + CC + HGRH (BT)

 


ERV + CC/HC (DT)

 


ERV + CC + HGRH (DT)

 


ERV + CC + EH (BT)

 


ERV + CC + HGRH + EH (BT)

 


ERV + CC + GH (BT)

 


ERV + CC + HGRH + GH (BT)

 


ERV + CC + HC (BT)

 


ERV + CC + HGRH + HC (BT)

 


ERV + CC + EH (DT)

 


ERV + CC + HGRH + EH (DT)

 


ERV + CC + GH (DT)

 

ERV + CC + HGRH + GH (DT)

 

ERV + CC + HC (DT)

 





ERV + CC + HGRH + HC (DT)

ELECTRICAL DATA

Electrical Specifications							
	Motor Qty/kW or HP	Volts	Frequency	Phase	Min. Cir. Amps.	Max. Overcurrent Protection Device	FLA per motor
EC	2 @ 1.35 kW ea.	200-277	50/60 Hz	Single	15.1	20	6.7-4.8
	2 @ 2.70 kW ea.	200-240	50/60 Hz	Three	19.4	25	8.6-7.2
	2 @ 3.70 kW ea.	380-480	50/60 Hz	Three	13.5	15	6.0-4.6
VFD	2 @ 3HP ea.	208-230	50/60 Hz	Three	20.3	25	9-8.4/4.2
	2 @ 3HP ea.	460	50/60 Hz	Three	9.5	15	4.2
	2 @ 3HP ea.	575	50/60 Hz	Three	7.4	15	3.3

Note: Electrical data shown is for a standard unit without cooling and heating. Refer to cores.renewaire.com for project specific submittal for electrical data for the specific unit with all included options.

AIRFLOW PERFORMANCE

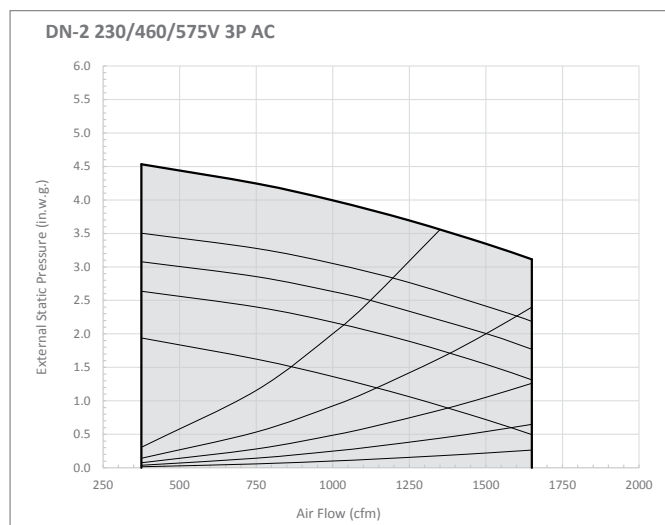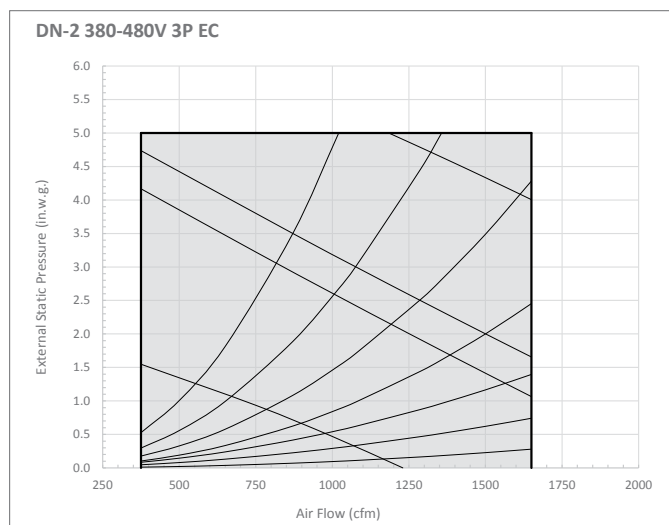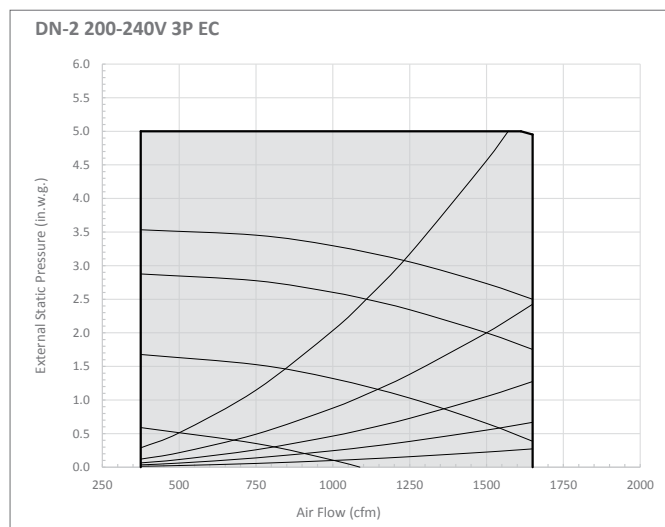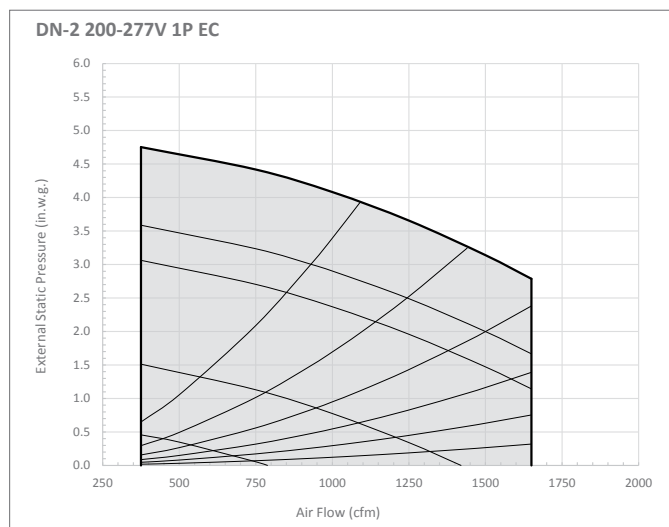

DN2RT Dedicated Outdoor Air System Standard 1" Cabinet

ABBREVIATIONS

EA: Exhaust Air to outside
OA: Outside Air intake
RA: Room Air to be exhausted
SA: Supply Air to inside

INSTALLATION ORIENTATION


Unit must be installed in orientation shown.

NOTE

1. UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE ROUNDED TO THE NEAREST EIGHTH OF AN INCH.
2. SPECIFICATIONS MAY BE SUBJECT TO CHANGE WITHOUT NOTICE.
3. FOR PIPE CONNECTION DETAILS REFER TO CORES OR UNIT SELECTION SUBMITTAL.
4. UNIT, UNIT DOORS, AND COILS CANNOT BE MIRRORRED.
5. FOR CURB DETAILS REFER TO CURB DRAWING.
6. FOR PROJECT SPECIFIC DRAWINGS REFER TO PROJECT SUBMITTAL.

Dimension drawings for the DN depict largest cabinet size available. Refer to CORES.RenewAir.com for project specific unit drawings.


NOTE: This drawing represents the DN-2-RT with 1" thick wall panels, coils and heat module. Dimensioned drawings for other configurations are found on the RenewAir website.

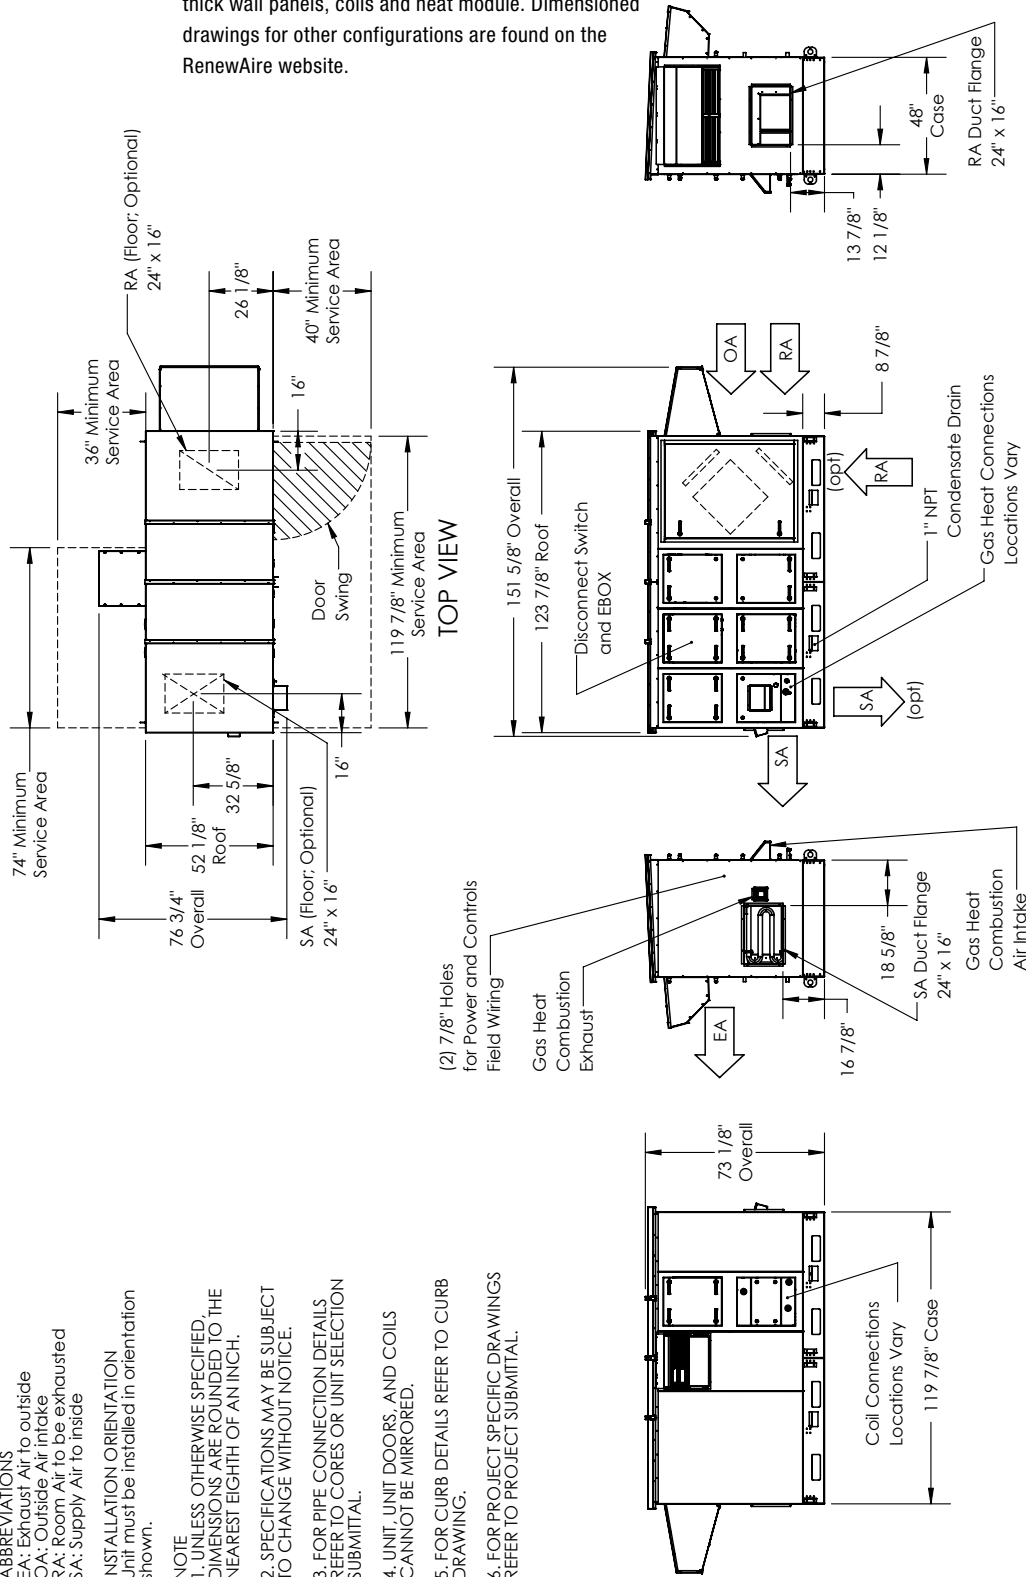

AIRFLOW ORIENTATION
Available as shown:



UNIT MOUNTING & APPLICATION
Must be mounted as shown. Airstreams can not be switched.

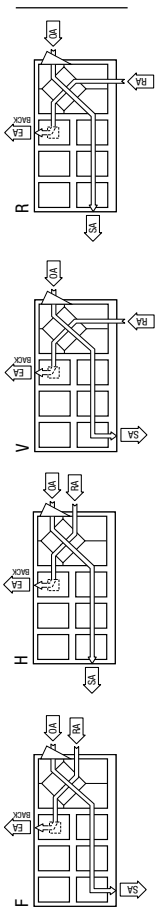

DN2RT Dedicated Outdoor Air System Standard 2" Cabinet

ABBREVIATIONS

EA: Exhaust Air to outside
OA: Outside Air intake
RA: Room Air to be exhausted
SA: Supply Air to inside



INSTALLATION ORIENTATION
Unit must be installed in orientation shown.

NOTE

1. UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE ROUNDED TO THE NEAREST EIGHTH OF AN INCH.
2. SPECIFICATIONS MAY BE SUBJECT TO CHANGE WITHOUT NOTICE.
3. FOR PIPE CONNECTION DETAILS REFER TO CORES OR UNIT SELECTION SUBMITTAL.
4. UNIT, UNIT DOORS, AND COILS CANNOT BE MIRRORRED.
5. FOR CURB DETAILS REFER TO CURB DRAWING.
6. FOR PROJECT SPECIFIC DRAWINGS REFER TO PROJECT SUBMITTAL.





Dimension drawings for the DN depict largest cabinet size available. Refer to CORES.RenewAire.com for project specific unit drawings.

NOTE: This drawing represents the DN-2-RT with 2" thick wall panels, coils and heat module. Dimensioned drawings for other configurations are found on the RenewAire website.

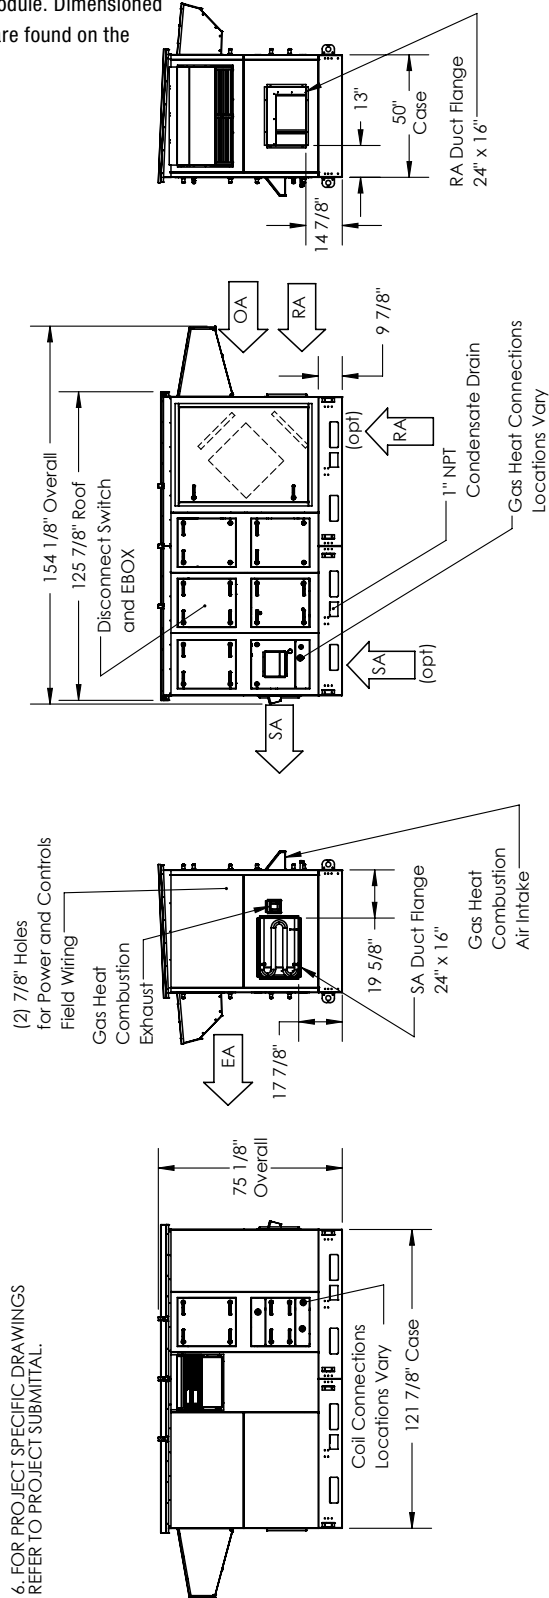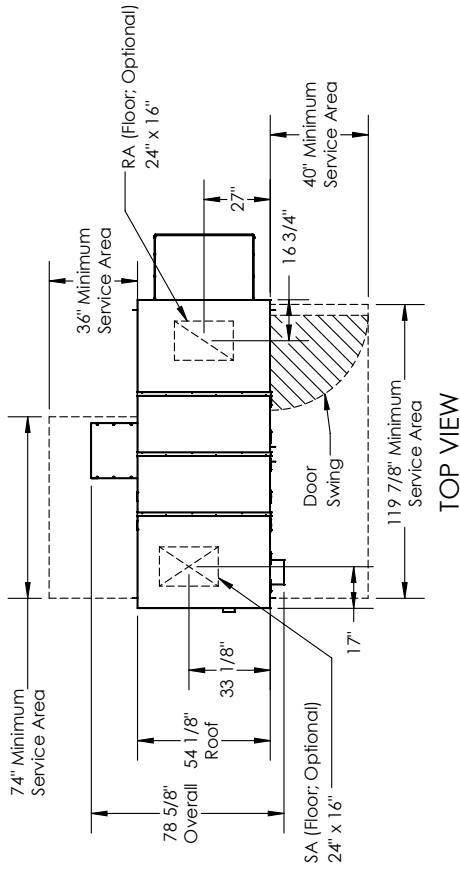

AIRFLOW ORIENTATION

Available as shown:

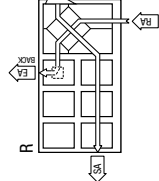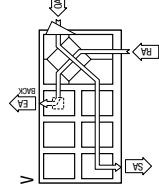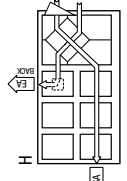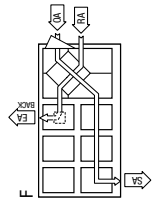


UNIT MOUNTING & APPLICATION
Must be mounted as shown. Airstreams can not be switched.

DN2RT Dedicated Outdoor Air System Curbs

DUCT SUPPORT DIMENSIONS
WIDTH: 1 1/2" DEPTH: 3"


RA: Room Air to be exhausted
SA: Supply Air to inside

DN2RT
CURB DN2-ERV+C+H

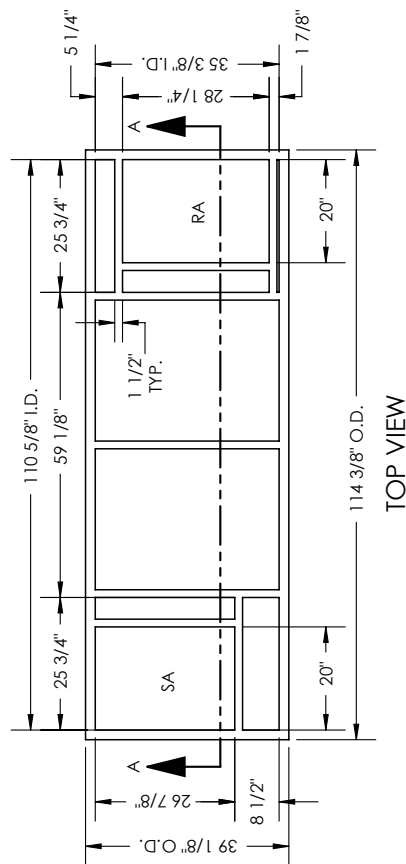

END VIEW

CURB CROSS-SECTION A-A (TYP.)

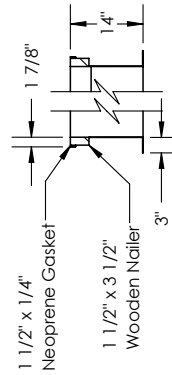


FRONT VIEW

SECTION A-A

AIRFLOW ORIENTATION
Available as shown:



UNIT MOUNTING & APPLICATION
This universal DN Series curb can be used in conjunction with RTE, RTH, RTV and RTR models.

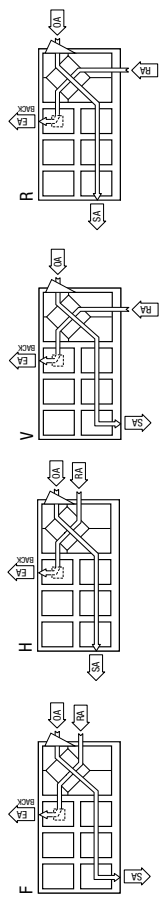


THIS PAGE IS INTENTIONALLY LEFT BLANK.



DN 3RT

ROOFTOP UNIT Dedicated Outside Air System Unit with Energy Recovery

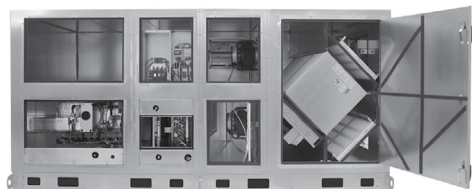

DN3IN, ERV + CC + HGRH + GH (BT) shown

Energy Recovery Core is AHRI Certified®



ERV - Energy Recovery Ventilator

EH - Electric Heater

CC - Cooling Coil

HC - Heating Coil

GH - Gas Heat Module

HGRH - Hot Gas Reheat Coil

BT - Blow Thru

DT - Draw Thru

Dedicated Outdoor Air System Standard



SPECIFICATIONS

Energy Recovery Type:

Static plate total energy transfer

Typical Airflow Range: 750-3,300 CFM

AHRI 1060 Certified Core:

Three L-125-G5

ETL Certification:

Tested to UL standards 1812 and 1995

Standard Features:

EC Motors for both airstreams

Direct Drive backward inclined plenum

Higher ESP of up to 2.5" w.g. at 3,000 CFM

Integrated programmable controls

True 100% Face and bypass enthalpy based modulating economizer

Class 1 low leakage motorized isolation dampers

Stainless steel double-sloped drain pan with cooling option

1", 20 gauge galvanized double wall foam-injected

R6.5 insulation

Modbus RTU or IP Integration

Inlets/Outlets:

OA & RA Inlets: 36" x 16"

SA Outlet: 24" x 16"

EA Outlet: 20" x 16"

Filters:

Total qty. 6, MERV 8:

20" x 20" x 2"

Unit Weight for 1" Cabinets: 2000-3950 lbs.

Max. Shipping Dimensions & Weight for 1" Cabinets (on pallet):

160" L x 90" W x 81" H

2225-4175 lbs.

Unit Weight for 2" Cabinets: 2125-4150 lbs.

Max. Shipping Dimensions & Weight for 2" Cabinets (on pallet):

160" L x 90" W x 83" H

2350-4375 lbs.

Motor(s):

Qty. 2, Direct drive motorized impeller packages

Options:

DX, heat pump, or chilled water cooling coil

Modulating hot gas reheat

Steam or hot water coil, gas heat module or electric heater

Onboard variable frequency drives (VFDs) - both airstreams

Fused disconnect

Spring isolators (VFDs only)

2", 20 gauge galvanized double wall foam-injected

R13 insulation with thermal break construction

Exterior paint - grey, white, custom color

Salt spray - 2500 hour

BACNET factory activation

GFCI convenience outlet

Recirculation damper

Drain overflow switch

Mist eliminator

Electrofin coating for coils

Accessories:

Filters - MERV 13, 2" and 4" (shipped loose),

MERV 14, 2" and 4" (shipped loose)

Additional filters available upon request

Roof curb - standard 14"

Custom hurricane or seismic rated curbs

Curb clip kit

Carbon dioxide sensor/control -

wall mount (CO2-W), duct mount (CO2-D)

IAQ sensor - wall mount (IAQ-W),

duct mount (IAQ-D)

Motion occupancy sensor/control -

ceiling mount (MC-C), wall mount (MC-W)

Smoke detector

Room temperature and humidity sensor

Duct static pressure sensor with display to 10",

without display 0-2"

Room pressure sensor with display to 1",

 
without display 0-1"

Waterless trap negative pressure


Waterless trap positive pressure

Remote display


INTERNAL OPTIONS FOR HEATING AND COOLING




ERV only

 


ERV + EH (BT)

 


ERV + GH (BT)

 


ERV + CC/HC (BT)

 


ERV + CC + HGRH (BT)

 


ERV + CC/HC (DT)

 


ERV + CC + HGRH (DT)

 


ERV + CC + EH (BT)

 


ERV + CC + HGRH + EH (BT)

 


ERV + CC + GH (BT)

 


ERV + CC + HGRH + GH (BT)

 


ERV + CC + HC (BT)

 


ERV + CC + HGRH + HC (BT)

 


ERV + CC + EH (DT)

 


ERV + CC + HGRH + EH (DT)

 


ERV + CC + GH (DT)

 

ERV + CC + HGRH + GH (DT)

 

ERV + CC + HC (DT)

 




ERV + CC + HGRH + HC (DT)

ELECTRICAL DATA

Electrical Specifications							
	Motor Qty/kW or HP	Volts	Frequency	Phase	Min. Cir. Amps.	Max. Overcurrent Protection Device	FLA per motor
EC	2 @ 2.70 kW ea.	200-240	50/60 Hz	Three	19.4	25	8.6-7.2
	2 @ 3.70 kW ea.	380-480	50/60 Hz	Three	13.5	15	6.0-4.6
VFD	2 @ 5HP ea.	208-230	50/60 Hz	Three	31.3	45	13.9-13.4/6.7
	2 @ 5HP ea.	460	50/60 Hz	Three	15.1	20	6.7
	2 @ 5HP ea.	575	50/60 Hz	Three	11.9	15	5.3

Note: Electrical data shown is for a standard unit without cooling and heating. Refer to cores.renewaire.com for project specific submittal for electrical data for the specific unit with all included options.

AIRFLOW PERFORMANCE

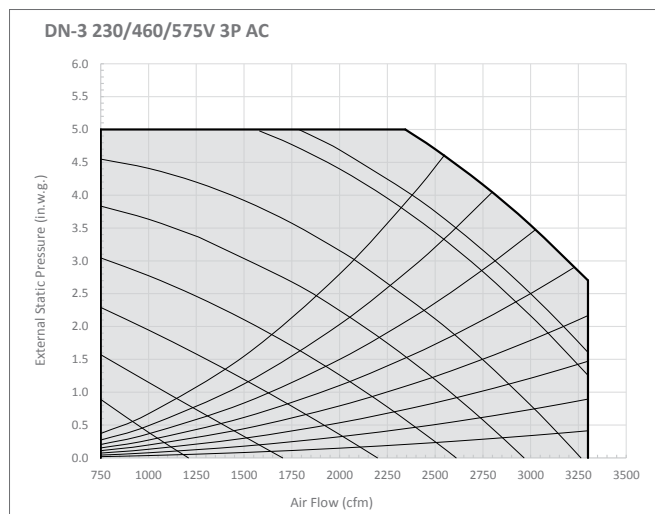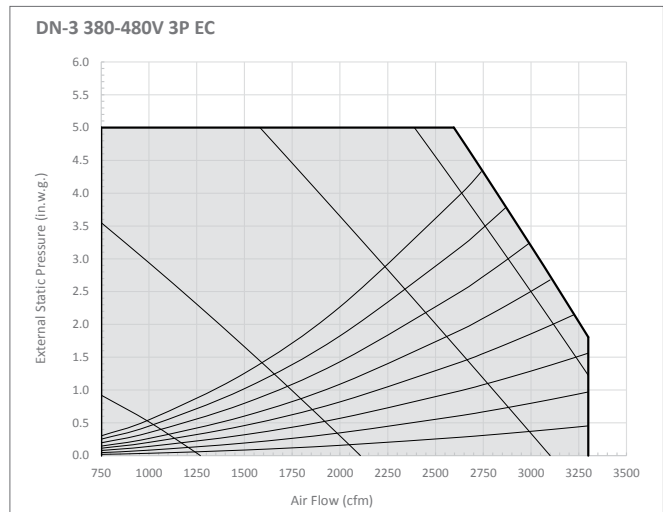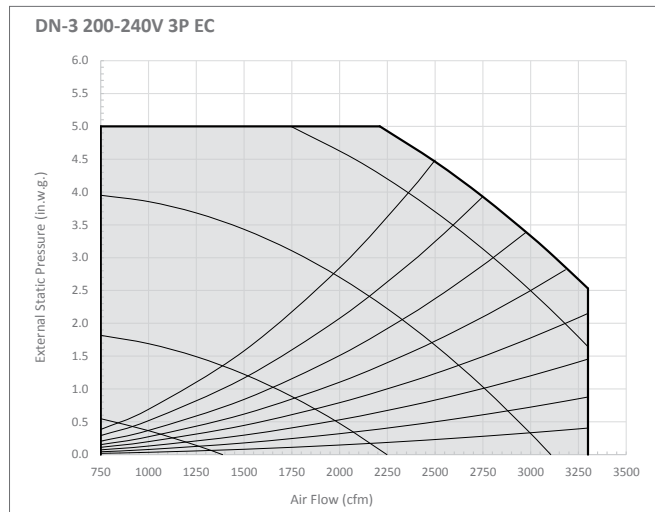

DN3RT Dedicated Outdoor Air System Standard 1" Cabinet

ABBREVIATIONS

EA: Exhaust Air to outside
OA: Outside Air Intake
RA: Room Air to be exhausted
SA: Supply Air to inside





INSTALLATION ORIENTATION

Unit must be installed in orientation shown.





NOTE

1. UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE ROUNDED TO THE NEAREST EIGHTH OF AN INCH.
2. SPECIFICATIONS MAY BE SUBJECT TO CHANGE WITHOUT NOTICE.
3. FOR PIPE CONNECTION DETAILS REFER TO CORES OR UNIT SELECTION SUBMITTAL.
4. UNIT, UNIT DOORS, AND COILS CANNOT BE MIRRORED.
5. FOR CURB DETAILS REFER TO CURB DRAWING.
6. FOR PROJECT SPECIFIC DRAWINGS REFER TO PROJECT SUBMITTAL.

Dimension drawings for the DN depict largest cabinet size available. Refer to CORES.RenewAire.com for project specific unit drawings.
NOTE: This drawing represents the DN-3-RT with 1" thick wall panels, coils and heat module. Dimensioned drawings for other configurations are found on the RenewAire website.

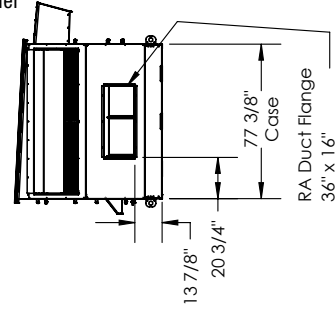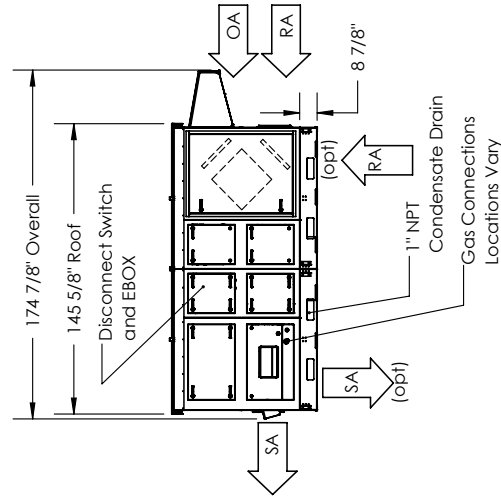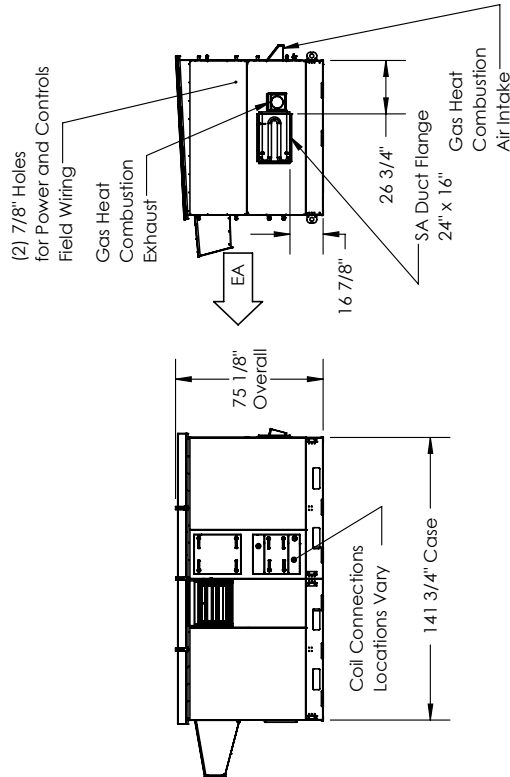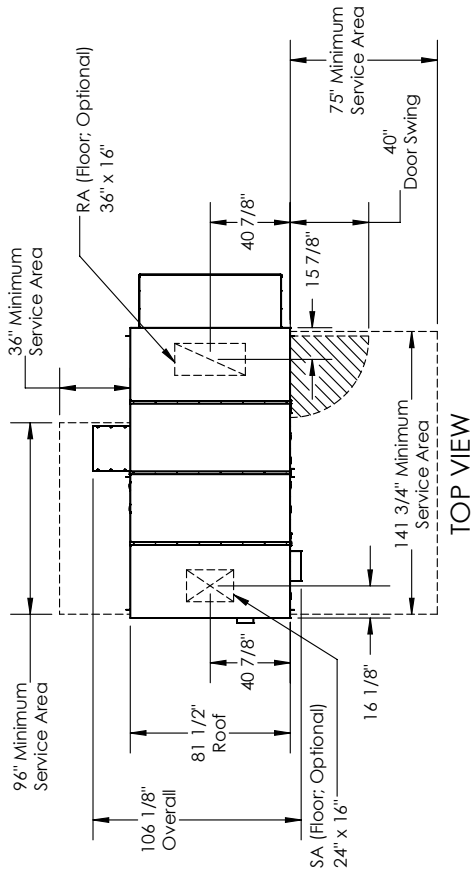

BACK VIEW

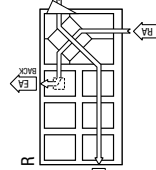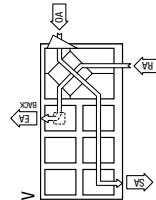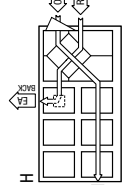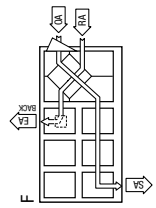

UNIT MOUNTING & APPLICATION
Must be mounted as shown. Airstreams can not be switched.



AIRFLOW ORIENTATION
Available as shown:

DN3RT Dedicated Outdoor Air System Standard 2" Cabinet

ABBREVIATIONS

EA: Exhaust Air to outside
OA: Outside Air Intake
RA: Room Air to be exhausted
SA: Supply Air to inside


INSTALLATION ORIENTATION

Unit must be installed in orientation shown.

NOTE

1. UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE ROUNDED TO THE NEAREST EIGHTH OF AN INCH.
2. SPECIFICATIONS MAY BE SUBJECT TO CHANGE WITHOUT NOTICE.
3. FOR PIPE CONNECTION DETAILS REFER TO CORES OR UNIT SELECTION SUBMITTAL.
4. UNIT, UNIT DOORS, AND COILS CANNOT BE MIRRORRED.
5. FOR CURB DETAILS REFER TO CURB DRAWING.
6. FOR PROJECT SPECIFIC DRAWINGS REFER TO PROJECT SUBMITTAL.


Dimension drawings for the DN depict largest cabinet size available. Refer to CORES.RenewAire.com for project specific unit drawings.
NOTE: This drawing represents the DN-3-RT with 2" thick wall panels, coils and heat module. Dimensioned drawings for other configurations are found on the RenewAire website.

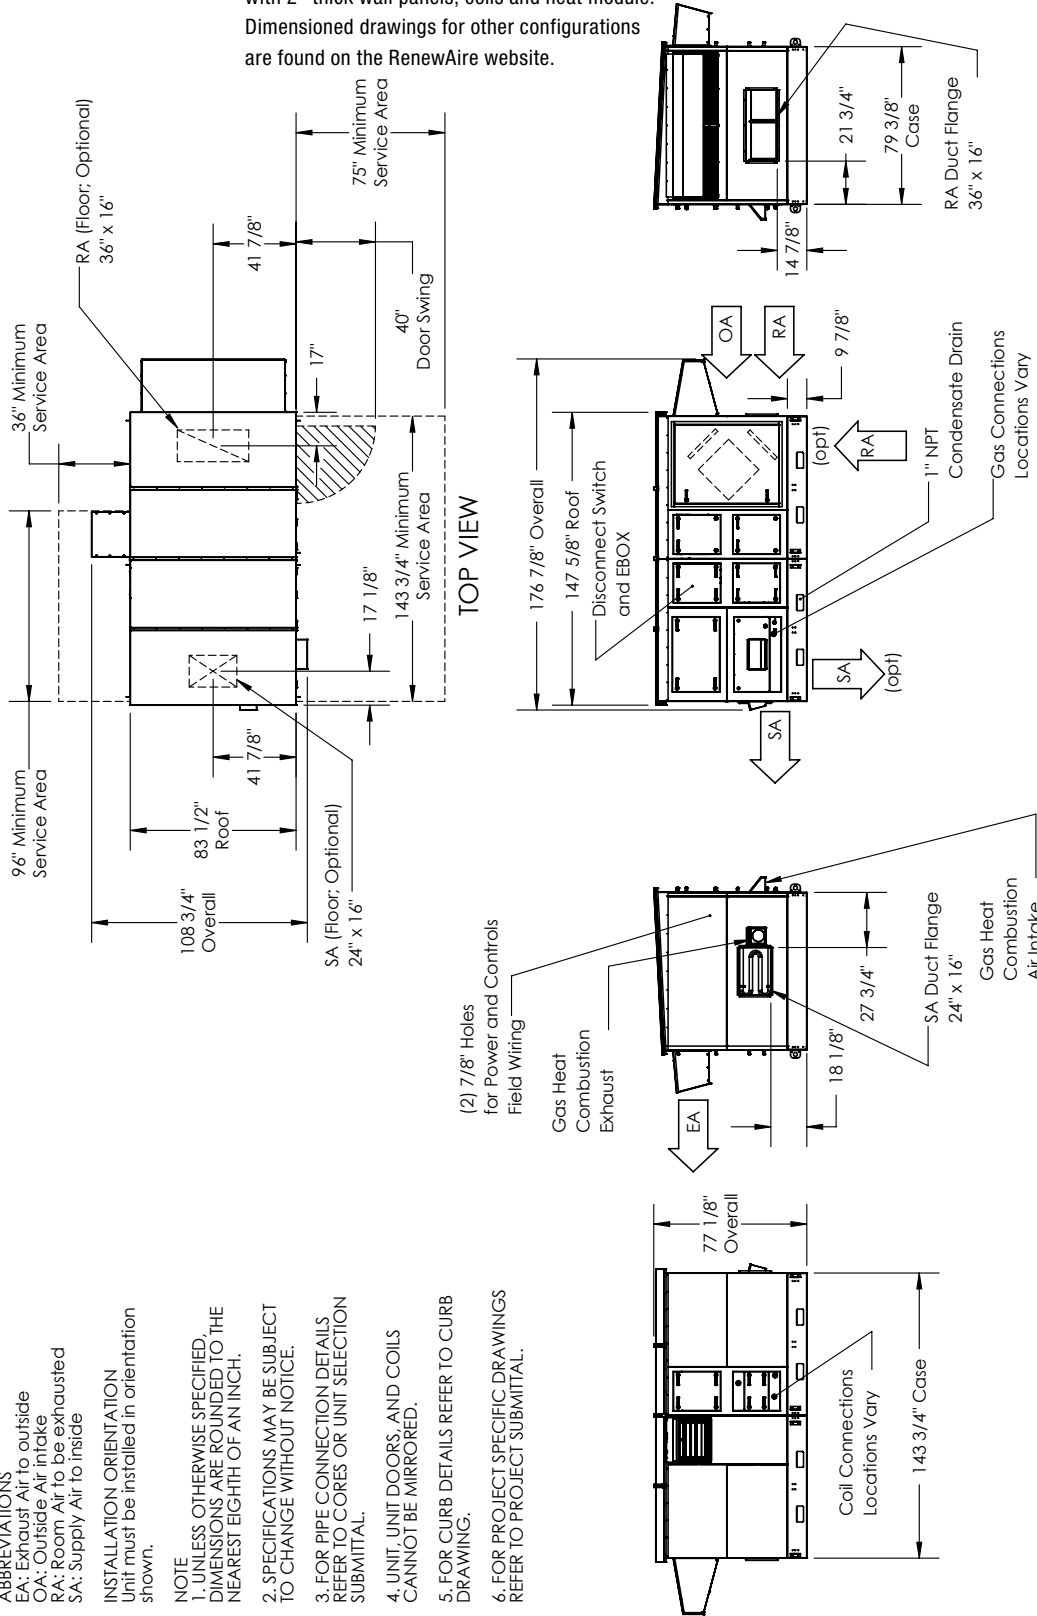

AIRFLOW ORIENTATION
Available as shown:



UNIT MOUNTING & APPLICATION
Must be mounted as shown. Airstreams can not be switched.

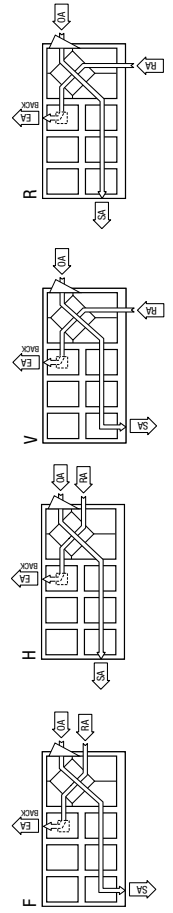


DN3RT Dedicated Outdoor Air System Curbs

DUCT SUPPORT DIMENSIONS
WIDTH: 1 1/2" DEPTH: 3"


RA: Room Air to be exhausted
SA: Supply Air to inside

DN3RT
CURB DN3-ERV+C+H

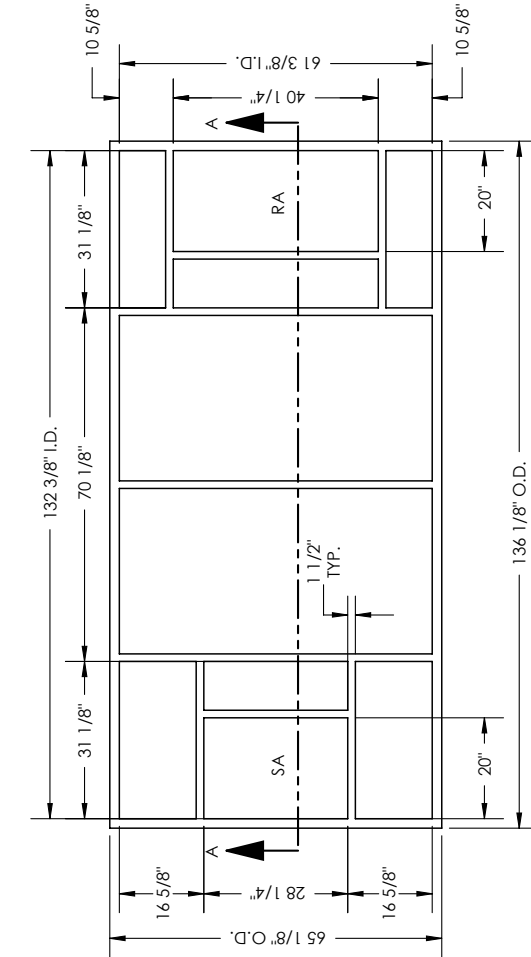

TOP VIEW

CURB CROSS-SECTION A-A (TYP.)

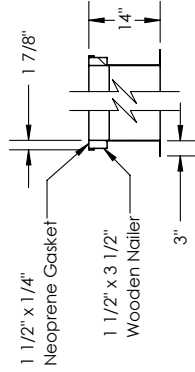


SECTION A-A

FRONT VIEW

END VIEW

Dimension drawings for the DN depict largest cabinet size available.
Refer to CORES.RenewAire.com for project specific unit drawings.
NOTE: This drawing represents the DN-3-RT with coils and heat module. Dimensioned drawings for other configurations are found on the RenewAire website.

AIRFLOW ORIENTATION
Available as shown:

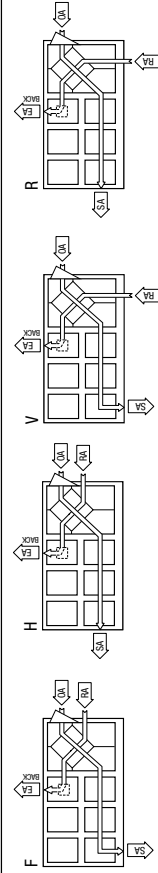

UNIT MOUNTING & APPLICATION
This universal DN Series curb can be used in conjunction with RTF, RTH, RTV and RTR models.


THIS PAGE IS INTENTIONALLY LEFT BLANK.



DN 5RT

ROOFTOP UNIT

Dedicated Outside Air System
Unit with Energy Recovery

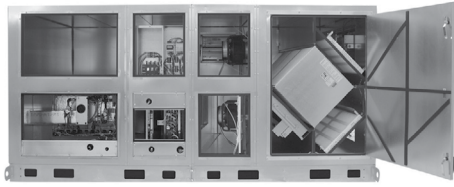

DN3IN, ERV + CC + HGRH + GH (BT) shown

Energy Recovery Core is AHRI Certified®



ERV - Energy Recovery Ventilator

EH - Electric Heater

CC - Cooling Coil

HC - Heating Coil

GH - Gas Heat Module

HGRH - Hot Gas Reheat Coil

BT - Blow Thru

DT - Draw Thru

Dedicated Outdoor Air System Standard



SPECIFICATIONS

Energy Recovery Type:

Static plate total energy transfer

Typical Airflow Range: 1,125-4,950 CFM

AHRI 1060 Certified Core:

One L-62-G5 and four L-125-G5

ETL Certification:

Tested to UL standards 1812 and 1995

Standard Features:

EC Motors for both airstreams

Direct Drive backward inclined plenum

Higher ESP of up to 3" w.g. at 4,500 CFM

Integrated programmable controls

True 100% Face and bypass enthalpy based modulating economizer

Class 1 low leakage motorized isolation dampers

Stainless steel double-sloped drain pan with cooling option

1", 20 gauge galvanized double wall foam-injected

R6.5 insulation

Modbus RTU or IP Integration

Inlets/Outlets:

OA & RA Inlets: 60" x 16"

SA Outlet: 24" x 16"

EA Outlet: 20" x 32"

Filters:

Total qty. 10, MERV 8:

16" x 20" x 2"

Bypass Filters:

Total qty. 4, MERV 8:

16" x 20" x 2"

Unit Weight for 1" Cabinets: 2975-5500 lbs.

Max. Shipping Dimensions & Weight for 1" Cabinets (on pallet):

180" L x 101 1/2" W x 98" H

3225-5750 lbs.

Unit Weight for 2" Cabinets: 3100-5700 lbs.

Max. Shipping Dimensions & Weight for 2" Cabinets (on pallet):

180" L x 101 1/2" W x 100" H

3350-5950 lbs.

Motor(s):

Qty. 4, Direct drive motorized impeller packages

Options:

DX, heat pump, or chilled water cooling coil

Modulating hot gas reheat

Steam or hot water coil, gas heat module or electric heater

Onboard variable frequency drives (VFDs) - both airstreams

Fused disconnect

Spring isolators (VFDs only)

2", 20 gauge galvanized double wall foam-injected R13 insulation with thermal break construction

Exterior paint - grey, white, custom color

Salt spray - 2500 hour

BACNET factory activation

GFCI convenience outlet

Recirculation damper

Drain overflow switch

Mist eliminator

Electrofin coating for coils

Accessories:

Filters - MERV 13, 2" and 4" (shipped loose),

MERV 14, 2" and 4" (shipped loose)

Additional filters available upon request

Roof curb - standard 14"

Custom hurricane or seismic rated curbs

Curb clip kit

Carbon dioxide sensor/control -

wall mount (CO2-W), duct mount (CO2-D)

IAQ sensor - wall mount (IAQ-W),

duct mount (IAQ-D)

Motion occupancy sensor/control -

ceiling mount (MC-C), wall mount (MC-W)

Smoke detector

Room temperature and humidity sensor

Duct static pressure sensor with display to 10",

without display 0-2"

Room pressure sensor with display to 1",

 
without display 0-1"

Waterless trap negative pressure


Waterless trap positive pressure

Remote display


INTERNAL OPTIONS FOR HEATING AND COOLING




ERV only

 


ERV + EH (BT)

 


ERV + GH (BT)

 


ERV + CC/HC (BT)

 


ERV + CC + HGRH (BT)

 


ERV + CC/HC (DT)

 


ERV + CC + HGRH (DT)

 


ERV + CC + EH (BT)

 


ERV + CC + HGRH + EH (BT)

 


ERV + CC + GH (BT)

 


ERV + CC + HGRH + GH (BT)

 


ERV + CC + HC (BT)

 


ERV + CC + HGRH + HC (BT)

 


ERV + CC + EH (DT)

 


ERV + CC + HGRH + EH (DT)

 


ERV + CC + GH (DT)

 

ERV + CC + HGRH + GH (DT)

 

ERV + CC + HC (DT)

 




ERV + CC + HGRH + HC (DT)

ELECTRICAL DATA

Electrical Specifications							
	Motor Qty/kW or HP	Volts	Frequency	Phase	Min. Cir. Amps.	Max. Overcurrent Protection Device	FLA per motor
EC	4 @ 2.70 kW ea.	200-240	50/60 Hz	Three	36.6	45	8.6-7.2
	4 @ 3.70 kW ea.	380-480	50/60 Hz	Three	25.5	30	6.0-4.6
VFD	4 @ 5HP ea.	208-230	50/60 Hz	Three	59.1	70	13.9-13.4/6.7
	4 @ 5HP ea.	460	50/60 Hz	Three	28.5	35	6.7
	4 @ 5HP ea.	575	50/60 Hz	Three	22.5	25	5.3

Note: Electrical data shown is for a standard unit without cooling and heating. Refer to cores.renewaire.com for project specific submittal for electrical data for the specific unit with all included options.

AIRFLOW PERFORMANCE

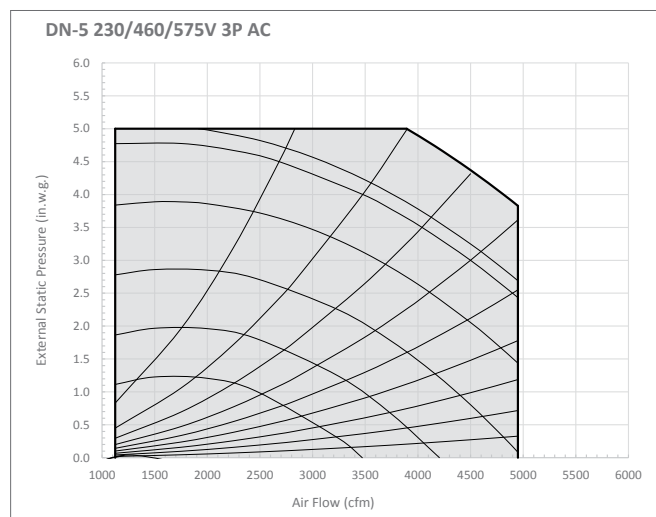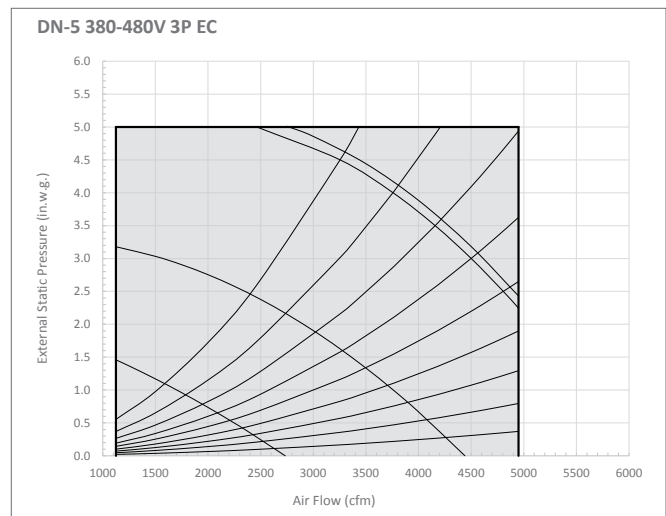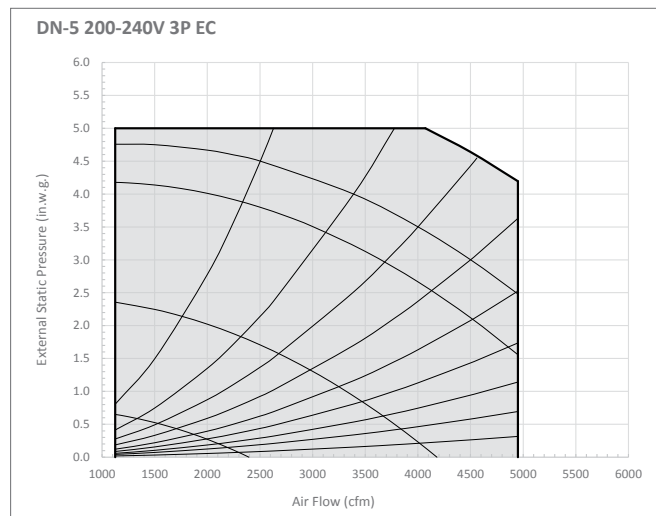

DN5RT Dedicated Outdoor Air System Standard 1" Cabinet

ABBREVIATIONS


EA: Exhaust Air to outside
OA: Outside Air Intake
RA: Room Air to be exhausted
SA: Supply Air to inside

INSTALLATION ORIENTATION Unit must be installed in orientation shown.

NOTE

1. UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE ROUNDED TO THE NEAREST EIGHTH OF AN INCH.
2. SPECIFICATIONS MAY BE SUBJECT TO CHANGE WITHOUT NOTICE.
3. FOR PIPE CONNECTION DETAILS REFER TO CORES OR UNIT SELECTION SUBMITTAL.
4. UNIT DOORS AND COILS CANNOT BE MIRRORRED.
5. FOR CURB DETAILS REFER TO CURB DRAWING.
6. FOR PROJECT SPECIFIC DRAWINGS REFER TO PROJECT SUBMITTAL.

Dimension drawings for the DN depict largest cabinet size available. Refer to CORES.RenewAire.com for project specific unit drawings.
NOTE: This drawing represents the DN-5-RT with 1" thick wall panels, coils and heat module. Dimensioned drawings for other configurations are found on the RenewAire website.

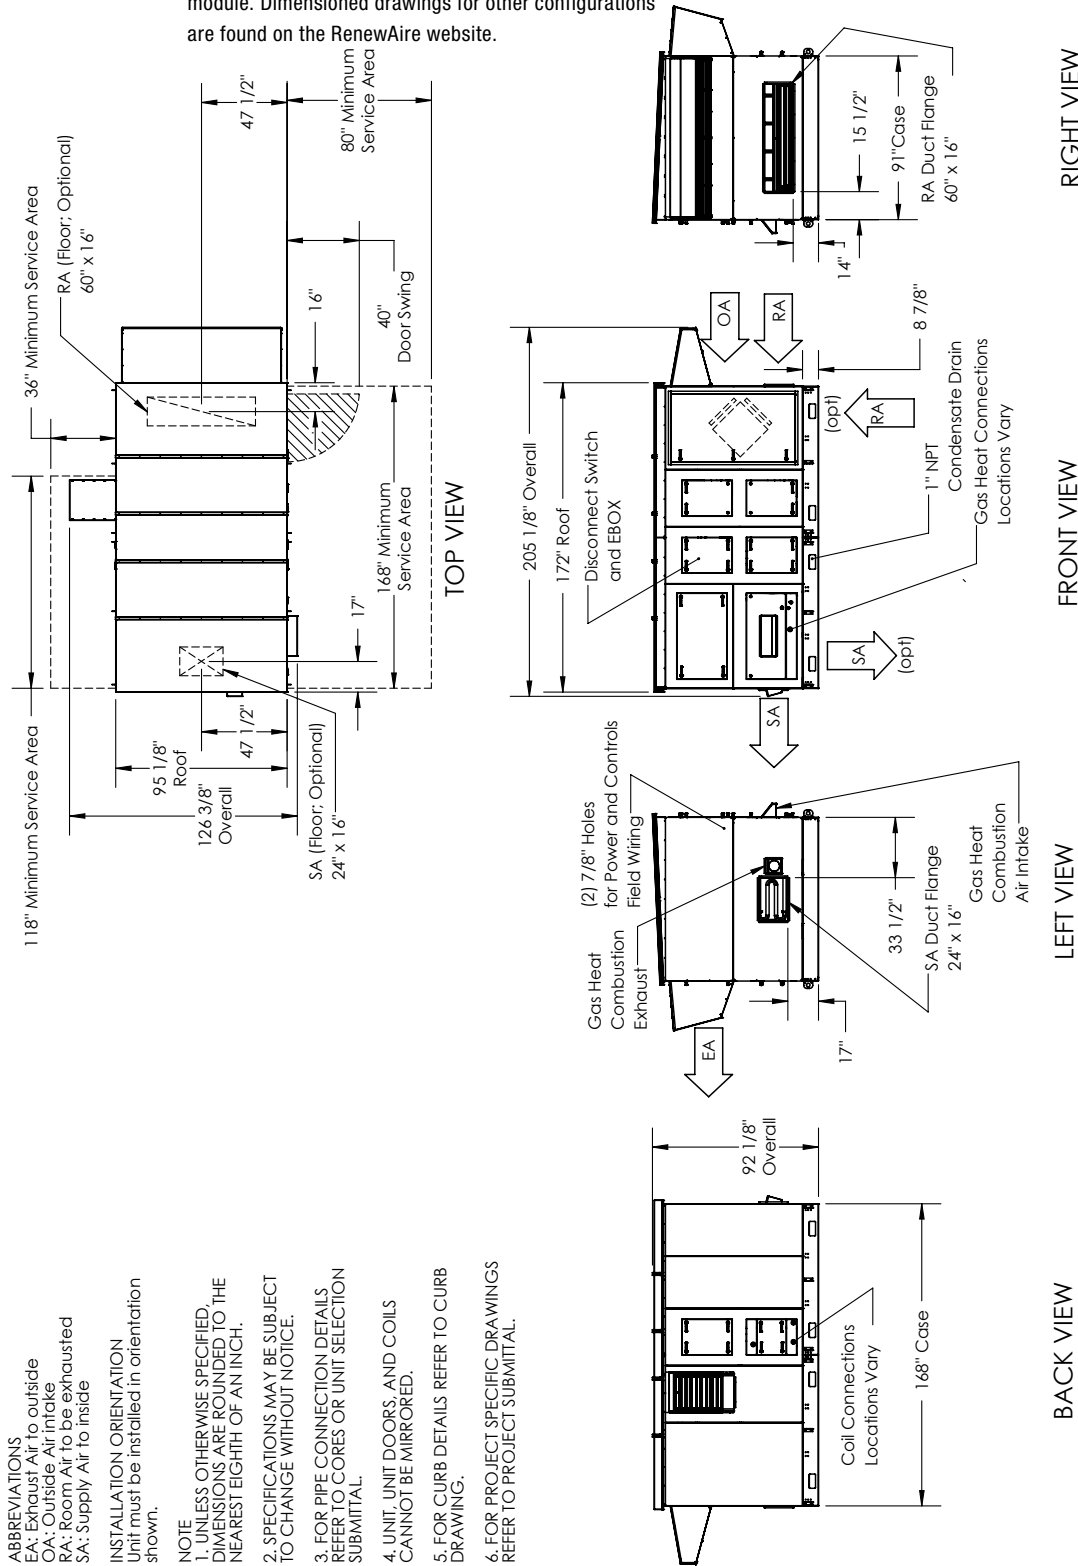

DN5RT Dedicated Outdoor Air System Standard 2" Cabinet

ABBREVIATIONS
 EA: Exhaust Air to outside
 OA: Outside Air intake
 RA: Room Air to be exhausted
 SA: Supply Air to inside


INSTALLATION ORIENTATION
 Unit must be installed in orientation shown.

NOTE





1. UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE ROUNDED TO THE NEAREST EIGHTH OF AN INCH.
2. SPECIFICATIONS MAY BE SUBJECT TO CHANGE WITHOUT NOTICE.
3. FOR PIPE CONNECTION DETAILS REFER TO CORES OR UNIT SELECTION SUBMITTAL.
4. UNIT, UNIT DOORS, AND COILS CANNOT BE MIRRORRED.
5. FOR CURB DETAILS REFER TO CURB DRAWING.
6. FOR PROJECT SPECIFIC DRAWINGS REFER TO PROJECT SUBMITTAL.

Dimension drawings for the DN depict largest cabinet size available.
 Refer to CORES.RenewAire.com for project specific unit drawings.


NOTE: This drawing represents the DN-5-RT with 2" thick wall panels, coils and heat module. Dimensioned drawings for other configurations are found on the RenewAire website.

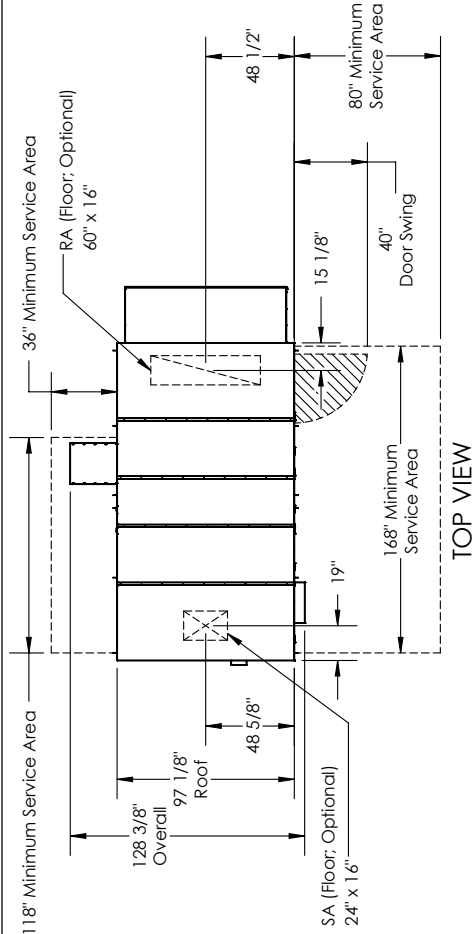

(2) 7/8" Holes for Power and Controls Field Wiring

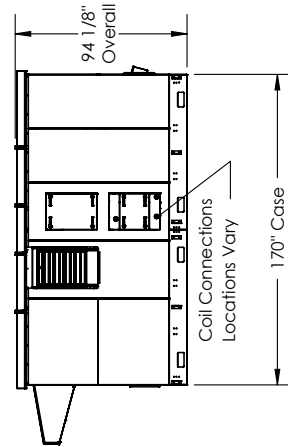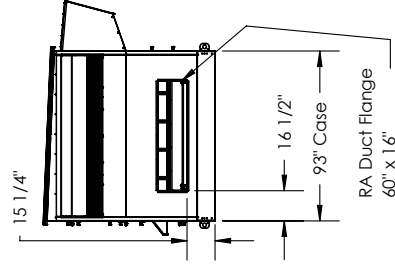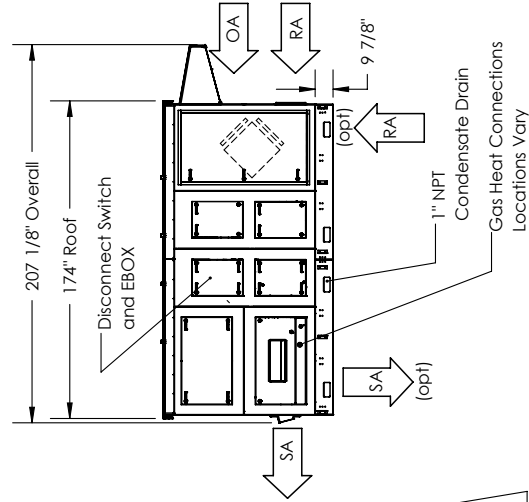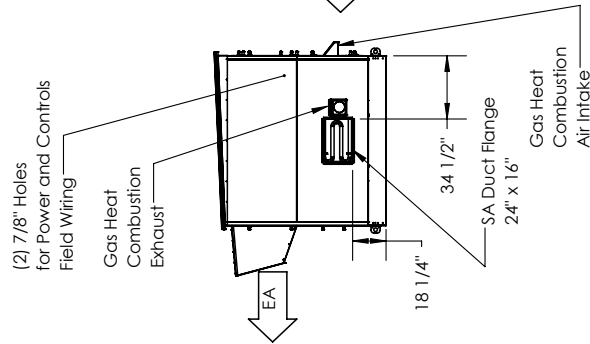

AIRFLOW ORIENTATION
 Available as shown:

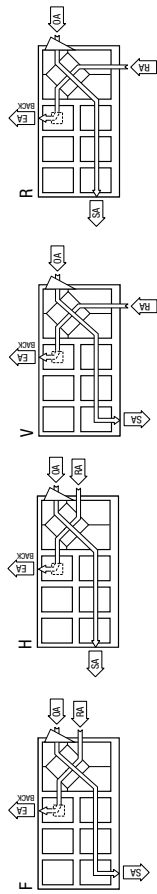

UNIT MOUNTING & APPLICATION
 Must be mounted as shown. Airstreams can not be switched.

DN5RT Dedicated Outdoor Air System Curbs


DUCT SUPPORT DIMENSIONS
WIDTH: 1 1/2" DEPTH: 3"

DN5RT
CURB DN5-ERV+C+H

RA: Room Air to be exhausted
SA: Supply Air to inside


Dimension drawings for the DN depict largest cabinet size available.
Refer to CORES.RenewAire.com for project specific unit drawings.

NOTE: This drawing represents the DN-5-RT coils and heat module. Dimensioned drawings for other configurations are found on the RenewAire website.

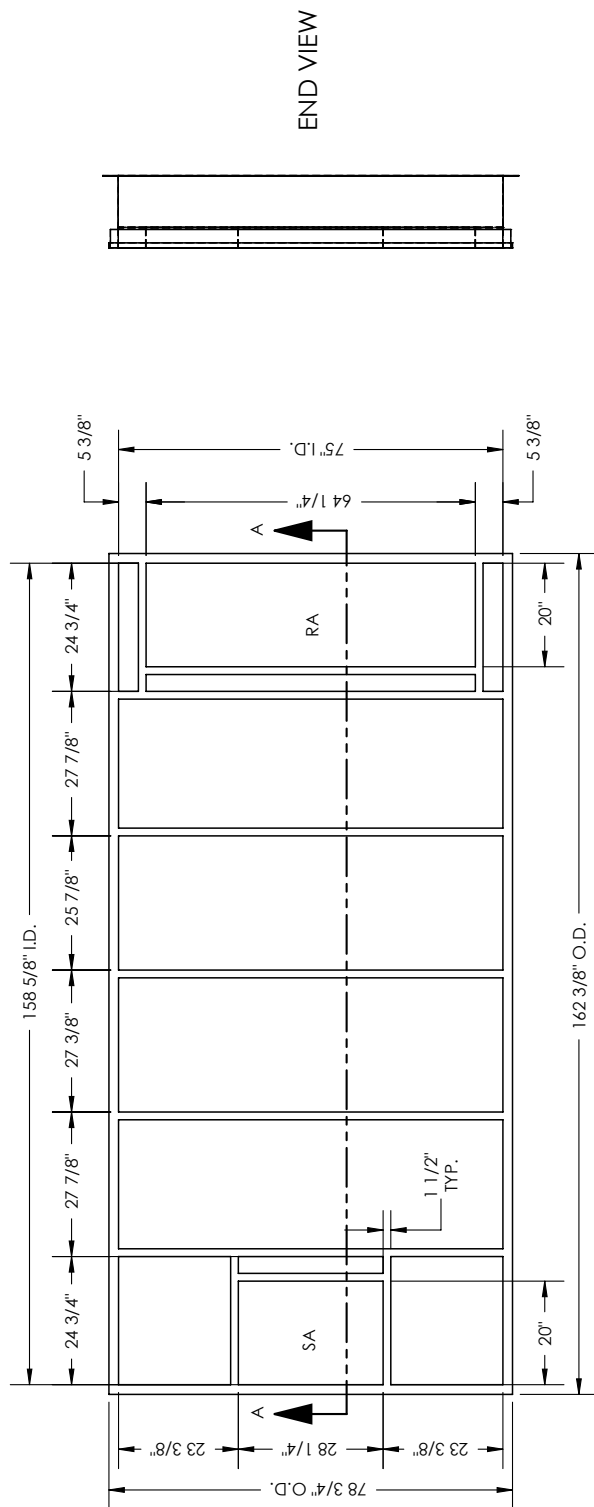


TOP VIEW

CURB CROSS-SECTION A-A (TYP.)

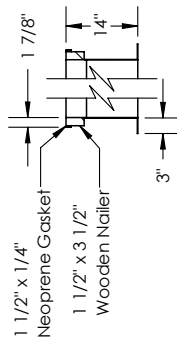

FRONT VIEW

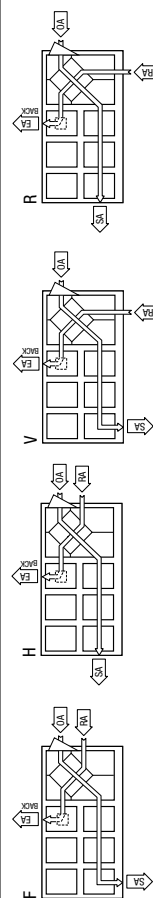

AIRFLOW ORIENTATION
Available as shown:



UNIT MOUNTING & APPLICATION
This universal DN Series curb can be used in conjunction with RTF, RTH, RTV and RTR models.

1.0 OVERVIEW	28	3.0 SHIPPING/RECEIVING/HANDLING	40
1.1 DESCRIPTION	28	3.1 UNIT WEIGHTS/DIMENSIONS	40
1.1.1 Energy Recovery	28	3.1.1 Unit Dimensions and Weight	40
1.1.2 Ventilation Air	28	3.1.2 Shipping Dimensions and Weight	41
1.1.3 Heating	28	3.1.3 DN-2-RT CORNER WEIGHTS	41
1.1.4 Cooling	28	3.1.4 DN-3-RT CORNER WEIGHTS	42
1.1.5 Reheat	28	3.1.5 DN-5-RT CORNER WEIGHTS	42
1.2 MODEL SIZES	29	3.2 RECEIVING	43
1.3 AIRFLOWS	30	3.3 RIGGING	43
1.3.1 Airflow Inlet and Outlet Configurations	30	3.4 HANDLING AND STORAGE	43
1.3.2 Internal Airflow	31	4.0 UNIT PLACEMENT	43
1.4 HEATING	33	4.1 SOUND ATTENUATION OUTSIDE THE BUILDING	43
1.4.1 Gas Heat Module	33	4.2 PLACEMENT CAUTIONS	43
1.4.2 Electric Heat Module	33	4.3 SERVICE CLEARANCES	43
1.4.3 Water Coil/Steam Coil	33	5.0 INSTALLATION	44
1.5 COOLING	34	5.1 CURB ASSEMBLY/EQUIPMENT RAIL PLACEMENT	44
1.5.1 Split DX Coil	34	5.2 UNIT PLACEMENT	44
1.5.2 Chilled Water Coil	34	5.3 HOOD INSTALLATION	45
1.6 HOT GAS REHEAT	34	5.4 DUCT CONNECTIONS	45
2.0 COMPONENT DESCRIPTION	35	5.4.1 Indoor Sound Attenuation	45
2.1 CABINET CONSTRUCTION	35	5.5 ELECTRICAL REQUIREMENTS	46
2.1.1 Cabinet Paint	35	5.5.1 Factory-Recommended Electric Service Entry	46
2.2 FAN MOTORS	35	5.5.2 High-Voltage Electrical Connections	47
2.2.1 Fan Speed Control	35	5.5.3 Low Voltage Electrical Connections	47
2.3 DAMPERS	36	5.5.4 24VAC Class II Power Supply	49
2.4 ENTHALPIC CORES	37	5.6 WIRING SCHEMATICS	50
2.5 FILTERS	37	5.6.1 Typical Input Power	50
2.5.1 Filter Monitors	37	5.6.2 Typical Control Wiring	53
2.6 CONTROLS	37	5.6.3 Typical Field Wiring	54
2.6.1 Integrated Programmable Controls	37	5.7 PIPING CONNECTIONS	55
2.6.2 Variable Frequency Drive (Optional)	37	5.7.1 Coil Connections	55
2.7 GAS HEAT MODULE (OPTIONAL)	38	5.7.2 Drain Traps	57
2.8 ELECTRIC HEAT MODULE (OPTIONAL)	38	5.7.3 Drain Trap Construction	59
2.9 SPLIT DX COOLING (OPTIONAL)	38	5.7.4 Waterless Drain Traps	60
2.10 HOT GAS REHEAT (OPTIONAL)	39	5.8 GAS REQUIREMENTS	61
2.11 CHILLED WATER COOLING (OPTIONAL)	39		
2.11.1 Optional Overflow Switch	39		
2.11.2 Waterless Drain Traps	39		
2.12 HOT WATER/STEAM HEATING (OPTIONAL)	40		

6.0 OPERATION	62
6.1 PRINCIPLE OF OPERATION	62
6.2 PRE START-UP	62
6.2.1 Verify Voltage	62
6.2.2 Verify Transformer Wiring	62
6.2.3 Inspect Filters	62
6.2.4 Inspect Fans	62
6.2.5 Inspect and Clean the Interior	62
6.2.6 Inspect Ductwork Connections	62
6.3 BASIC OPERATIONAL CHECK	62
6.3.1 Quick-Start	62
6.3.2 Fan Rotation	62
6.3.3 Current Switches	63
6.4 FINAL UNIT SET-UP	63
7.0 MAINTENANCE	63
7.1 SCHEDULE	63
7.1.1 General Cleaning and Inspection (Quarterly)	63
7.1.2 Filters (Quarterly)	63
7.1.3 Filter Pressure Drop Tables	64
7.1.4 Cabinet Maintenance (Annual)	64
7.1.5 Electric Motor Maintenance (Annual)	64
7.1.6 VFDs (optional)	65
7.1.7 Enthalpic Core Maintenance (Annual)	65
7.1.8 OA Hood Maintenance (Annual)	66
7.1.9 Coil Maintenance (Annual)	67
7.1.10 Condensate Drain Maintenance (Annual)	67
7.1.11 Damper Maintenance (Annual)	68
7.1.12 Fan Maintenance (Annual)	68
7.1.13 Gas Heat Module Maintenance (Annual)	68
7.1.14 Electric Heat Module Maintenance (Annual)	68
7.1.15 Current Switch Adjustment	68
7.1.16 Door Latch Adjustment	69
7.1.17 Fan/Motor Removal	69
7.1.18 Coil Removal	70
7.1.19 Water Treatment	70
7.1.20 Winterization	70
7.2 MAINTENANCE RECORDS	71
7.3 SERVICE PARTS	72
8.0 TROUBLESHOOTING	73
9.0 FACTORY ASSISTANCE	73

TABLE OF ILLUSTRATIONS

Figure 1.2.0 DN DOAS Modules.....	29
Figure 1.2.1 DN DOAS with Alternate SA Fan Position.....	29
Figure 1.3.0 Airflow Configuration for Orientation H.....	30
Figure 1.3.1 Airflow Configuration for Orientation R.....	30
Figure 1.3.2 Airflow Configuration for Orientation F.....	31
Figure 1.3.3 Airflow Configuration for Orientation V.....	31
Figure 1.3.4 Plan View of Airflow During Energy Recovery Mode.....	31
Figure 1.3.5 Plan View of Airflow During Bypass Mode.....	32
Figure 1.3.6 Plan View of Airflow During Recirculation Mode.....	32
Figure 1.4.0 Gas Heat Module (typical).....	33
Figure 1.4.1 Electric Heat Module (typical).....	33
Figure 1.4.2 Water Coil (typical).....	33
Figure 1.5.0 DX Coil (typical).....	34
Figure 1.5.1 Hot Gas Reheat Coil.....	34
Figure 2.2.0 EC Fan Assembly (standard).....	35
Figure 2.2.1 Asynchronous Motor Fan Assembly (optional).....	35
Figure 2.3.0 EA Fan with Damper (behind).....	36
Figure 2.3.1 OA Damper and Actuator.....	36
Figure 2.3.2 Face and Bypass Dampers.....	36
Figure 2.3.3 Bypass Assy Viewed From Front.....	37
Figure 2.3.4 Recirculation Damper Inside Bypass Assembly.....	37
Figure 2.6.0 Integrated Controls Installed.....	38
Figure 2.11.0 Optional Overflow Switch.....	39
Figure 3.1.0 DN-2-RT Approximate Corner Weights.....	41
Figure 3.1.1 DN-3-RT Approximate Corner Weights.....	42
Figure 3.1.2 DN-5-RT Approximate Corner Weights.....	42
Figure 5.5.0 Factory-Recommended Electric Service Entry.....	46
Figure 5.5.1 Disconnect Switch (typical).....	47
Figure 5.5.2 Low Voltage Terminal Blocks Installed.....	47
Figure 5.5.3 Field Wiring.....	48
Figure 5.5.4 24VAC Power Supply Transformer.....	49
Figure 5.7.0 Suction Line for DX Coil.....	55
Figure 5.7.1 Cabinet Floor Piping Penetrations.....	56
Figure 5.7.2 Condensate Drain Location (typical).....	57
Figure 5.7.3 SA Fan Module Located Before the Coil Module.....	58
Figure 5.7.4 SA Fan Module Located After the Coil Module.....	58
Figure 5.7.5 Condensate Drain Trap Clearances.....	58
Figure 5.7.6 Typical Drain Trap Construction.....	59
Figure 5.7.7 Positive Pressure Drain Trap Construction.....	59
Figure 5.7.8 Negative Pressure Drain Trap Construction.....	60
Figure 5.7.9 Type "P" Positive Pressure Waterless Trap.....	61
Figure 5.7.10 Type "N" Negative Pressure Waterless Trap.....	61
Figure 7.1.0 End View of Core Support Assembly.....	66
Figure 7.1.1 OA Hood Access.....	66
Figure 7.1.2 Current Switch (typical).....	68
Figure 7.1.3 Door Latch Adjustment.....	69
Figure 7.1.4 Single Phase EC Motor Wiring Connections.....	69
Figure 7.1.5 Three Phase EC Motor Wiring Connections.....	69
Figure 7.1.6 Asynchronous Motor and Fan Assembly Correct Overlap is 14".....	70
Figure 7.3.0 DN Service Parts.....	73

TABLE OF WIRING SCHEMATICS

Figure 5.6.0 DN-2 Single Phase Power Wiring Schematic.....	50
Figure 5.6.1 DN-2, DN-3 Three Phase Power Wiring Schematic ..	51
Figure 5.6.2 DN-5 Three Phase Power Wiring Schematic.....	52
Figure 5.6.3 DN-2, DN-3, DN-5 Typical Control Wiring.....	53
Figure 5.6.4 DN-2, DN-3, DN-5 Typical Field Wiring.....	54

Note: Not all options are available on every model.

DIGIT NUMBER

D	N	-	-	J										-								-	-		
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	

Digit 16:	Cooling
" " = None "C" = Chilled Water "D" = Direct Expansion "H" = Heat Pump "P" = Heat Pump + Hot Gas Reheat (HGRH) "R" = Direct Expansion + Hot Gas Reheat (HGRH)	

Digit 25:	Safety Listing (See Restriction 17)
"L" = Listed "N" = Non-Listed	

Digits 3, 5, 15, 22, and 23 are not used in these models.

Restrictions:
1: Location Code "RT" only available with Orientation Codes "H", "V", "R" & "F".
2: Voltage Code "4" & "8" only available with Phase Code "3".
3: Heating Code "P" only available with Cooling Codes "H" or "P".
4: Heater Size Option only available with Heating Codes "E" & "G".
5: Fan Control Code "E" only available with Voltage Codes "3", "4", & "5".
6: Fan Control Code "V" only available with Phase Code "3".
7: Voltage Code "8" only available with Fan Control "V".
8: Heater Size Codes "8" & "9" are not available when Model Code is "DN-2-" and Heating Code is "E".
9: Heater Size Codes "8" & "9" are not available when Model Code is "DN-3-" or "DN-5-" and Unit Voltage Code is "3" or "5" and Fan Control Code is "V" and Heating Code is "E".
10: Heater Size Code "8" is not available when Model Code is "DN-5-" and Unit Voltage Code is "3" and Fan Control Code is "E" and Heating Code is "E".
11: Heater Size Code "9" is not available when Model Code is "DN-3-" or "DN-5-" and Unit Voltage Code is "3" or "5" and Fan Control Code is "E" and Heating Code is "E".
12: Heater Size Code "7" is not available when Model Code is "DN-5-" and Unit Voltage Code is "3" or "5" and Fan Control Code is "V" and Heating Code is "E".

MODEL NUMBER

[illegible]

DIGIT NUMBER

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25

Restrictions:

- 13: Heater Size Codes "5", "6", & "7" are not available when Model Code is "DN-2-" and Heating Code is "G".
14: Heater Size Codes "8" & "9" are not available when Model Code is "DN-2-" or "DN-3-" and Heating Code is "G".
15: Phase Code "1" is only available with Model Code "DN-2-".
16: Heating Code "E" is not available with Phase Code "1".
17: Some units with Customization Code "X" are not Safety Listed.
18: SA Fan Location Code "A" is not available when no coils are selected.
19: SA Fan Location Code "B" is not available when only coils are selected for Heating and Cooling and Orientation Codes are "B", "D", "F", "J", "K", "N", "P", or "V".
20: Refrigeration Type Code "P" is only available with Location Code "RT" and Cooling Codes "D" & "R" and Phase Code "3".
21: Heating Codes "H" & "S" are not available with Cooling Codes "H" or "P".

Fan Horsepower for VFD (See Restrictions 2, 4, & 5)
3 HP
5 HP
Vibration Isolation for VFD (See Restriction 3)
Spring
Neoprene (Standard)
GFCI Convenience Outlet
Yes
No
Drain Overflow Switch
Yes
No
Paint
None (Standard)
2500 Hour Salt Spray
Paint Color
White
Grey
Custom
Outside Air Hood Moisture Eliminator (See Restriction 18)
Yes
No
Recirculation Damper
Yes
No
Coil Tube Geometry (answered for each coil)
3/8" 1.000" x 0.866"
3/8" 1.250" x 1.0825"
1/2" 1.250" x 1.0825"
5/8" 1.500" x 1.299"
5/8" 1.500" x 1.500"
1.0" 3.000" x 2.000"
Coil Rows (answered for each coil)
1, 2, 3, 4, 5, 6
Coil Fins Per Inch (answer for each coil)
6, 7, 8, 9, 10, 11, 12, 13, 14
Coil Coating (answer for each coil)
None
Electrofin UV
Coil Position (answer for each coil) (See Restrictions 11, 12, 13, 14, 15, & 28)
Position 1 (First in direction of Airflow after fan/core)
Position 2 (Second in direction of Airflow after fan/core)
Position 3 (Third in direction of Airflow after fan/core)
Position 4 (Condenser Coil only)

Coil Style (Evaporator Coil Only) (See Restriction 10)
Standard
Interlaced 2 Circuits
Element Material (Electric Heater)
60-20-20 Ni-Cr-Fe with Nickel-Plate Terminal Pins (Standard)
80-20 Ni-Cr with Stainless Steel Terminal Pins (Corrosion Resistant)
Fuel Type (Gas Heat Module)
Natural Gas (Standard)
Propane
Tube Material (Gas Heat Module)
409 Stainless Steel (Standard)
304 Stainless Steel
Elevation Range (Gas Heat Module)
0-2000'
2001'-2999'
3000'-3999'
4000'-4999'
5000'-5999'
6000'-6999'
7000' and above
Control Type (Gas Heat Module)
Modulating 5:1 (Natural Gas)/3:1 (Propane) (Standard)
Modulating 10:1 (Natural Gas)/6:1 (Propane)
Gas Derated (Gas Heat Module) (See Restriction 9)
Yes
No
Combustion Inlet Type (Gas Heat Module) (See Restriction 17)
Separated Combustion (Separate combustion air intake and flue exhaust)
Exhaust flue venting only (Combustion air intake via intake louver on unit)
Compressor (See Restrictions 19 & 20)
1-Circuit: Qty. (1) Variable Speed
2-Circuit: Qty. (1) Variable Speed and Qty. (1) Fixed Speed
Hot Gas Reheat (See Restrictions 19 & 21)
Yes, with Suction Line Accumulator
No
Valves (See Restrictions 19, 20, 22, & 23)
1-Circuit: Qty. (1) Electronic Expansion Valve
2-Circuit: Qty. (2) Electronic Expansion Valves
Condensing Fan (see Restrictions 19, 24, 25, 26, & 27)
EC Axial Fan: Qty. (1) or (2)
AC Axial Fan with VFD: Qty. (1) or (2)
Condenser Coil Style (see Restriction 29)
Standard
Face Split 2-Circuits

*NOTE: Packaged Refrigeration components are dependent on operating conditions and are automatically selected.

Restrictions:

- 1: Fan kW is only available with Fan Control Code "E".
- 2: Fan Horsepower is only available with Fan Control Code "V".
- 3: Vibration Isolation is only available with Fan Control Code "V".
- 4: Fan Horsepower "3" is only available in Model Code "DN-2-".
- 5: Fan Horsepower "5" is only available in Model Codes "DN-3-" & "DN-5-".
- 6: 1.35kW is only available in Model Code "DN-2-" & with Phase Code "1".
- 7: 2.70kW is only available in Phase Code "3" and Voltage Code "3" or "5".
- 8: 3.70kW is only available in Phase Code "3" and Voltage Code "4".
- 9: Gas derating question only applies for elevations above 2000'.
- 10: Interlaced 2 Circuits Coil Style is only available with Direct Expansion Coil or Heat Pump Coil.
- 11: If only one coil is selected, it must be placed in position 1.
- 12: Coil Position 2 only available when 2 or 3 supply air coils have been specified.
- 13: Coil Position 3 only available when 3 supply air coils have been specified.
- 14: For Cooling Codes "P" & "R", the Hot Gas Reheat Coil must be in the position directly following the cooling coil.
- 15: For Cooling Codes "D" & "R", the Direct Expansion coil must be placed in position 1.

Restrictions:

- 16: One coil may be specified to act as both a hot water and chilled water coil. Only available when Cooling Code is C and Heating Code is H.
- 17: Combustion Inlet Type Separated Combustion only applies for Location Code "IN".
- 18: Outside Air Hood Moisture Eliminator only available in Location Code "RT".
- 19: Compressors, Hot Gas Reheat with Suction Line Accumulator, Valves, and Condensing Fans options are only available with Refrigerant Type Code "P".
- 20: 2-Circuit is only available with Model Codes "DN-3-" & "DN-5-", when 1-Circuit cannot meet the required capacity.
- 21: Hot Gas Reheat with Suction Line Accumulator is only available with Cooling Code "R"
- 22: Qty. (1) Electronic Expansion Valve only available with 1-Circuit.
- 23: Qty. (2) Electronic Expansion Valves only available with 2-Circuits.
- 24: Qty. (1) Condensing Fan is only available with Model Code "DN-2-".
- 25: Qty. (2) Condensing Fans are only available with Model Codes "DN-3-" & "DN-5-".
- 26: EC Axial Condensing Fans are only available with Voltage Codes "3", "4", & "5".
- 27: AC Axial Condensing Fans with VFD are only available with Voltage Code "8".
- 28: Coil Position 4 is only available with Refrigerant Type Code "P".
- 29: Face Split 2-Circuits Coil Style only available with Condenser Coil & 2-Circuits.

DN-Series Memo Field Questions and Answers



NOTE: This unit is a Dedicated Outdoor Air System, or DOAS. It is referred to throughout this manual as a DOAS. This manual is specifically for the rooftop version, as indicated by digits 7 & 8 of the configuration code, "RT".

There is also an indoor version of this DOAS, as indicated by digits 7 & 8 of the configuration code, "IN".

The indoor version of the DOAS has a separate manual.

1.0 OVERVIEW

1.1 DESCRIPTION

The DN-Series unit is a Dedicated Outdoor Air System (DOAS) that provides ventilation air to a conditioned space. The DN unit cools, heats, and/or dehumidifies the ventilation air depending on the options selected for the unit. The unit takes Outside Air (OA) and passes it through static plate enthalpic cores to recover energy from exhaust air. The air is then conditioned as required and provided to the occupied space. Cooling coils, heating coils, re-heat coils, electric heaters and gas heaters are all available options for conditioning the ventilation air. Standard equipment for every unit includes dedicated variable-speed plenum fans and a sophisticated on-board electronic control package offering many different control options.

The DN-Series unit is available in three different sizes and is ordered as an indoor or rooftop (outdoor) version. Each unit is constructed in the form of modules with each module performing a dedicated function. Each module has configurable options that are selected by the user. See illustrations on the next page.

1.1.1 Energy Recovery

Energy recovery between the Outside Air and Return Air is accomplished by means of integral static plate enthalpic cores. Stale return air from the occupied space and fresh outside air pass through the enthalpic cores. The airstreams are physically separated and never mix. Sensible and latent energy are transferred between the two airstreams.

1.1.2 Ventilation Air

Ventilation air is needed by the occupied space to replace stale air that is lost or exhausted from the building. Ventilation air is generally conditioned by heating or cooling the air before it is delivered to the occupied space.

IMPORTANT

The DOAS can contain optional chilled water coils, steam coils, hot water coils and DX coils, all of which are to be connected to owner-provided equipment. The DOAS does not include DX compressors. The DOAS will provide low-voltage digital and analog signals to call for operation and modulation of the owner-provided equipment. No refrigerant control valve (TXV) is provided and must be specified by the engineer of the overall system for separate sourcing.

1.1.3 Heating

Heating options include:

- Integral indirect gas-fired heat module, either natural gas or propane
- Integral electric heater
- Integral hot water coil, for connection to an external hot water source (by others)
- Integral coil for connection to an external heat pump (by others)
- Integral coil for steam heat (steam by others)

1.1.4 Cooling

Cooling options include:

- Integral DX coil, for connection to an external compressor (by others)
- Integral chilled water coil, for connection to an external chilled water source (by others)
- Integral water coil for connection to an external heat pump (by others)

1.1.5 Reheat

Reheat is accomplished by means of an optional Hot Gas Reheat (HGRH) coil. The HGRH coil is installed within the unit and is to be connected to an external compressorized refrigerant system, furnished by others. The HGRH coil and DX cooling coil need to be selected together to achieve the desired performance. Contact RenewAire for help in specifying an HGRH coil.

1.2 MODEL SIZES

The rooftop DOAS is available in three different sizes:

- Model DN-2: 1,650 CFM (small cabinet size)
- Model DN-3: 3,300 CFM (medium cabinet size)
- Model DN-5: 4,950 CFM (large cabinet size)



NOTE: For purposes of illustrating DN modules, a DN-IN (Indoor) unit is shown.

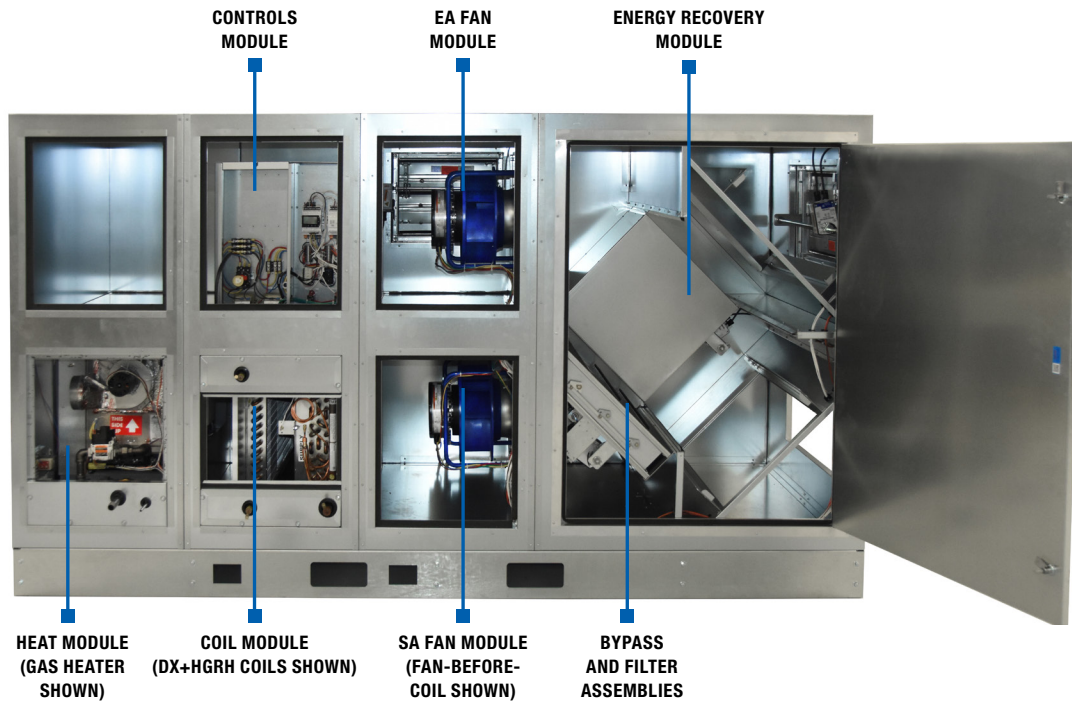


FIGURE 1.2.0 DN DOAS MODULES



FIGURE 1.2.1 DN DOAS WITH ALTERNATE SA FAN POSITION

1.3 AIRFLOWS

IMPORTANT

It is important to understand and use the equipment airstream terminology as it is used in this manual. The airstreams are defined as:

- **OUTSIDE AIR (OA):** Air taken from the external atmosphere and, therefore, not previously circulated through the system. Each DN unit has an OA air inlet, located on the end wall.
- **FRESH AIR (FA):** Air that is downstream of the enthalpic cores and is ready for conditioning.
- **SUPPLY AIR (SA):** Conditioned air that is supplied to an occupied space. Each DN unit has an SA outlet that may deliver either conditioned Return Air or fresh air. The Supply Air outlet is optionally located on either the end wall or the floor.
- **RETURN AIR (RA):** Air that is returned to a heating or cooling appliance from a conditioned space. When the DN unit operates in recirculation mode, RA is conditioned and returned to the occupied space in the form of SA. Each DN unit has an RA inlet, optionally located on either the floor or the end wall of the unit.
- **EXHAUST AIR (EA):** Air that is removed from a heating or cooling appliance and discharged. Each DN unit has an EA outlet with a damper. The Exhaust Air outlet is on the side wall of the unit.

1.3.1 Airflow Inlet and Outlet Configurations

The DN unit has many configurations available for airflow inlet and outlet. Inlets and outlets are selected for the unit either horizontally through the end walls or vertically through the floor. Each individual airflow location is selected from the unit pictures below. The number “1” represents horizontal airflow and the number “2” represents vertical airflow. Select a “1” or a “2” for each unit inlet and outlet and then apply all four locations to the matrix at right, selecting the one example that fits all criteria. The identifying letter beneath each figure is shown on the configuration code. See configuration code Digit 10.

KEY TO AIRFLOW CODES

OA	Outside Air Into Unit
RA	Room Air Into Unit
SA	Supply Air Into Occupied Space
EA	Exhaust Air Leaving Unit
1	Horizontal
2	Vertical

KEY TO CONFIGURATION CODES

OA	RA	SA	EA	CODE
1	1	1	1	H
1	1	2	1	F
1	2	1	1	R
1	2	2	1	V

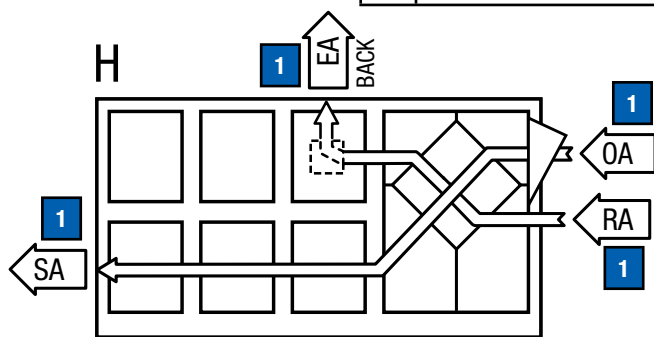


FIGURE 1.3.0 AIRFLOW CONFIGURATION FOR ORIENTATION H

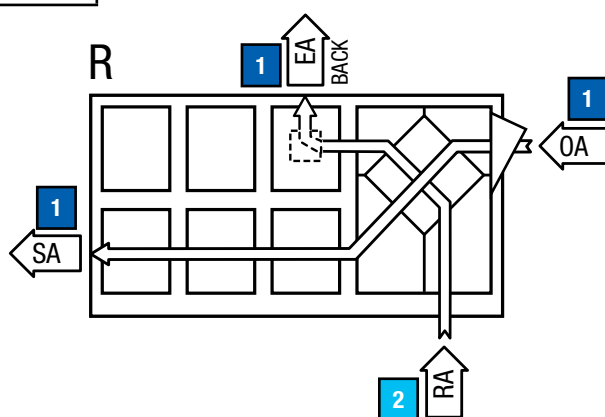


FIGURE 1.3.1 AIRFLOW CONFIGURATION FOR ORIENTATION R

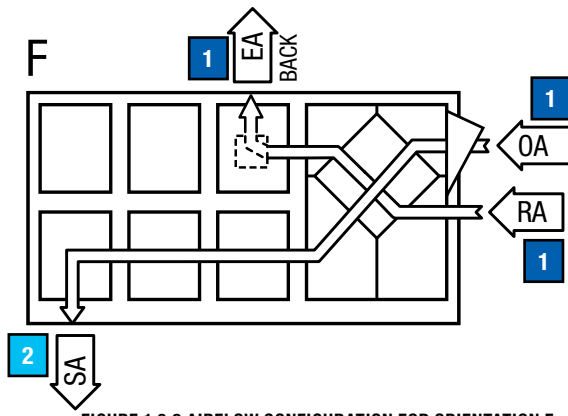


FIGURE 1.3.2 AIRFLOW CONFIGURATION FOR ORIENTATION F

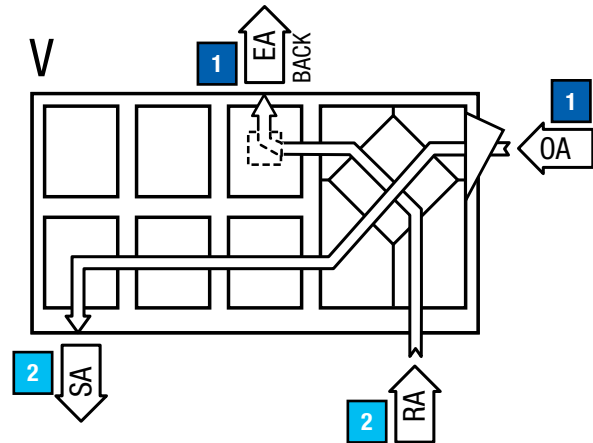


FIGURE 1.3.3 AIRFLOW CONFIGURATION FOR ORIENTATION V

1.3.2 Internal Airflow

Inside the DN DOAS unit, OA and RA airstreams are directed based on operating modes. There are three modes of operation: energy recovery, economizer/bypass and recirculation.

In Energy Recovery Mode, OA and RA airflow is through the enthalpic cores. The isolation dampers are open and both fans are operating. The economizer face damper is open, and the bypass damper is closed, allowing OA air to flow through the enthalpic cores only. Energy is recovered between the OA and RA airstreams.

Economizer/Bypass Mode, a standard feature, is activated when the Outside Air enthalpy is less than the Return Air enthalpy and free cooling is desired. OA airflow passes through the bypass compartment. The isolation dampers are open and both fans are operating. The economizer face damper and bypass damper modulate to meter Outside Air flow through the enthalpic cores and bypass compartment for no or limited energy recovery. Modulation of the face and bypass dampers allows the Fresh Air to maintain a desired air temperature without use of additional cooling. In full bypass mode, all Outside Air flows through the bypass compartment with the economizer damper fully closed and the bypass damper fully open. Return Air continues to pass through the cores.

Recirculation Mode, an optional feature, is typically used during the Unoccupied Mode. OA air does not enter the unit and RA airflow bypasses the enthalpic cores. The isolation dampers are closed and only the Supply Air fan is operating. The recirculation damper diverts Return Air through the bypass compartment and to the Supply Air fan. Additional heating or cooling can be added to the airstream before delivery back to the Occupied Space.



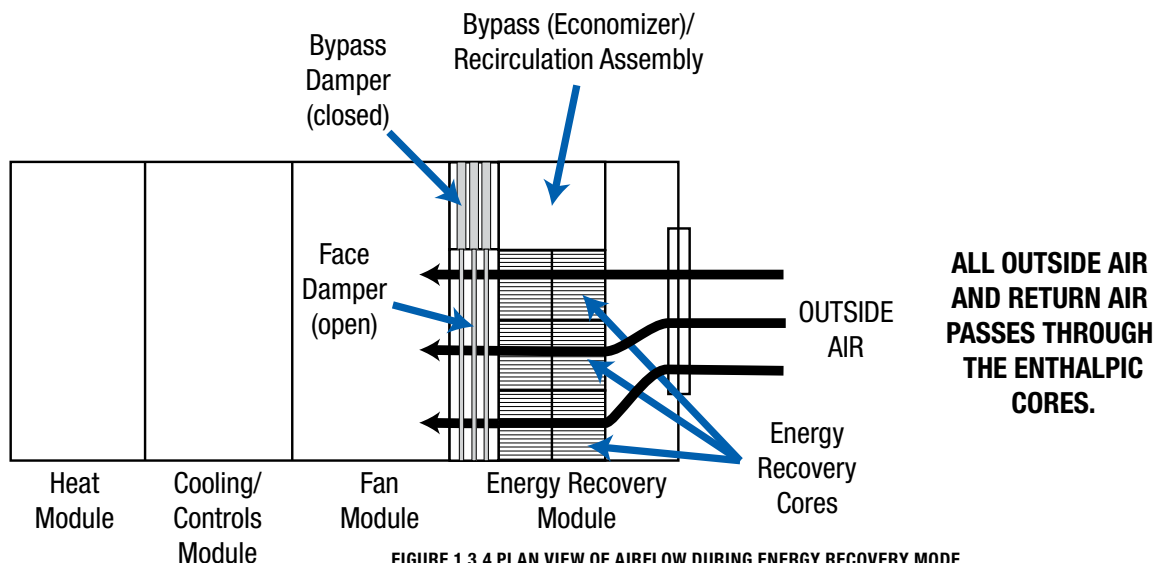


FIGURE 1.3.4 PLAN VIEW OF AIRFLOW DURING ENERGY RECOVERY MODE

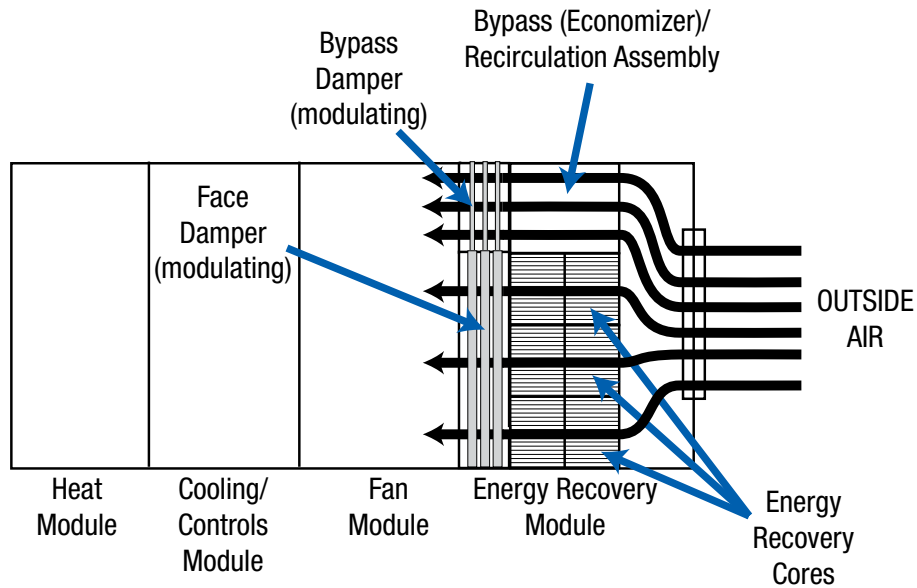

OUTSIDE AIR IS METERED THROUGH THE BYPASS ASSEMBLY AND THE ENTHALPIC CORES. ALL RETURN AIR PASSES THROUGH THE ENTHALPIC CORES.

FIGURE 1.3.5 PLAN VIEW OF AIRFLOW DURING BYPASS MODE

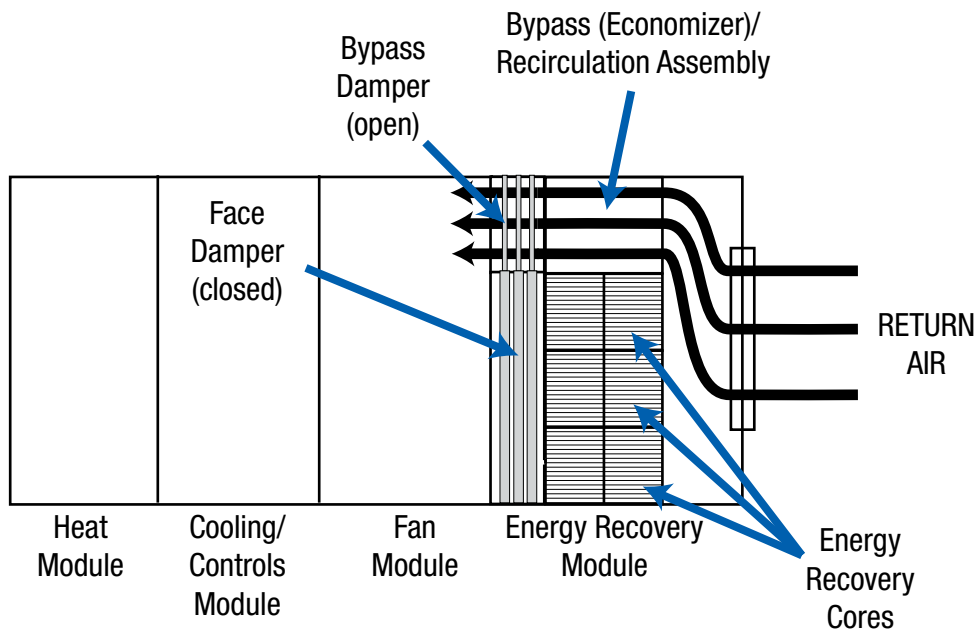

NO OUTSIDE AIR. ALL RETURN AIR PASSES THROUGH THE RECIRCULATION ASSEMBLY.

FIGURE 1.3.6 PLAN VIEW OF AIRFLOW DURING RECIRCULATION MODE

1.4 HEATING

1.4.1 Gas Heat Module

DN units can have an optional heat module with an Indirect Gas-Fired Heater. The gas heater is factory-installed complete and ready for field-connection to gas supply and exhaust piping. The gas heat module is available in 5:1 or 10:1 modulation and controlled by an analog signal from the controller. Each module has a condensate discharge tube that must be trapped in the field and may require winterization. See the *RenewAire Integral Indirect Gas-Fired Heat Module User Manual* for more information.

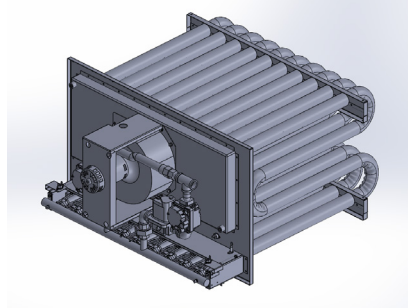


FIGURE 1.4.0 GAS HEAT MODULE (TYPICAL)

1.4.2 Electric Heat Module

DN units can have an optional heat module with an electric heater. The open coil-type electric heater is factory-installed complete with single-point power connection at the unit disconnect switch. Electric heaters are available in a number of different sizes and each heater has a control module that modulates the output of the heater. The heater control module is controlled by an analog signal from the controller. See illustration below. See the *RenewAire Electric Heat Module User Manual* for further information.

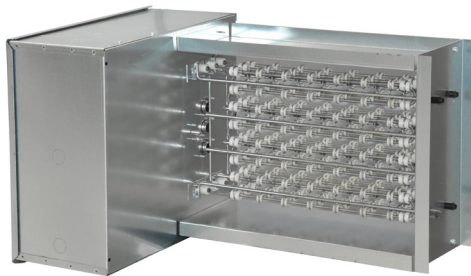


FIGURE 1.4.1 ELECTRIC HEAT MODULE (TYPICAL)

1.4.3 Water Coil/Steam Coil

DN units can have an optional heat module with a hot water coil or steam coil installed in the heating module.

The unit controller provides a digital “enable” signal to the user-provided hardware and then an analog signal to modulate the steam or water source.

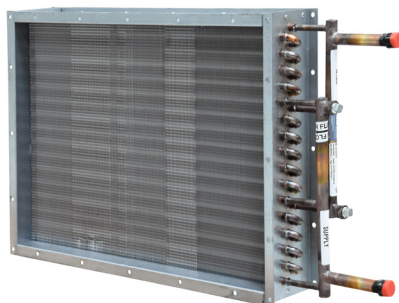


FIGURE 1.4.2 WATER COIL (TYPICAL)

1.5 COOLING

1.5.1 Split DX Coil

A DX refrigeration coil is offered as an option in the DN, for use as part of a split DX cooling system. The DX coil is engineered for R-410A refrigerant, but other refrigerants may be used. Consult your RenewAire sales representative for further information.



FIGURE 1.5.0 DX COIL (TYPICAL)

The refrigerant coil is installed at the factory. The DX coil is positioned above a condensate drain pan that must be trapped by the user/installer. The condensate trap may require winterization.

1.5.2 Chilled Water Coil

A chilled water coil is offered as an option in the DN. It may be used in conjunction with a user-supplied chilled water source.

It is the user's responsibility to assess supply water conditions and verify suitability for use. In addition, it is the user's responsibility to winterize the water lines as needed.

RenewAire does not make any recommendations regarding minimum quality of cooling water nor for any treatments that may be needed.

If a chilled water coil is installed, it is the installer's responsibility to provide and install a trap on the condensate drain pan. The trap is to be freeze-protected, as needed.

1.6 HOT GAS REHEAT

A Hot Gas Reheat (HGRH) coil is offered as an option. The HGRH coil is only available when a DX coil is also selected for the DN unit. The HGRH and DX coils must be selected together to achieve the desired performance of the system. The HGRH coil is connected in the field to a user-supplied refrigerant system.

There are primarily three different methods for accomplishing hot gas reheat. All three include a condenser reheat coil but require different equipment and are connected and piped differently, based on the method. Consult your RenewAire sales representative or the factory for further information and for help in specifying an HGRH coil.

HGRH COIL



FIGURE 1.5.1 HOT GAS REHEAT COIL

2.0 COMPONENT DESCRIPTION

2.1 CABINET CONSTRUCTION

- The DN is available in either single-thickness (1") wall or double-thickness (2" thick, with thermal break) wall construction. See Digit 11 of the Configuration Code.
- The sheet metal exterior of the unit is 20 gauge galvanized steel.
- Doors and removable panels are secured with quarter-turn latches.
- All units are equipped with lifting lugs for hoisting by a crane and all units have integral openings located in the unit base for use of a fork lift.

See the *DN-Series DOAS Shipping, Rigging, Hoisting and Assembly Manual* for rigging and handling instructions.

2.1.1 Cabinet Paint

Four options are offered for exterior finishes of the unit.

- None (galvanized)
- White paint
- Gray paint
- Custom paint

2.2 FAN MOTORS

Each DN unit is equipped with direct-drive plenum-type blower/motor packages. Premium efficiency Electronically Commutated (EC) motors are standard. EC motor assemblies are mounted on an air inlet cone which is then bolted to the cabinet. Fan speed control is accomplished by a variable analog signal from the Integrated Programmable Controller to the fan motor.

Optionally, Premium efficiency asynchronous motors can be ordered. Asynchronous motors are bolted to a sled to maintain position at the inlet cone. Fan speed control is accomplished by on-board Variable Frequency Drives (VFDs).

See Digit 19 of the Configuration Code.

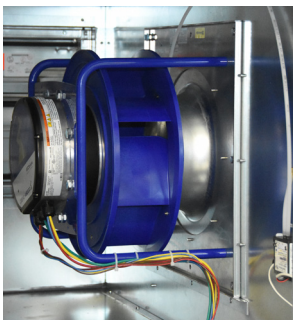


FIGURE 2.2.0 EC FAN ASSEMBLY (STANDARD)

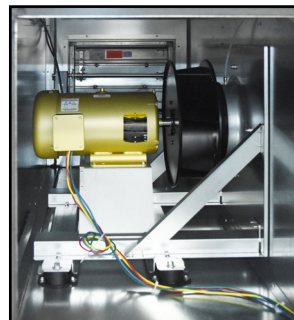


FIGURE 2.2.1 ASYNCHRONOUS MOTOR FAN ASSEMBLY (OPTIONAL)

2.2.1 Fan Speed Control

When the unit is equipped with EC motors, fan speed control is accomplished by a variable analog control signal from the microprocessor controller to the EC fan motor.

If asynchronous motors are ordered, fan speed control is accomplished by on-board VFDs.

See digit 19 of the Configuration Code. Also see Section 2.6.2 Variable Frequency Drive in this manual.

2.3 DAMPERS

AMCA Class 1A leakage-rated airfoil dampers are standard on all units. Standard motorized isolation dampers are located at the unit walls for Outside Air (OA) and Exhaust Air (EA). Standard face and bypass dampers are located internal to the unit in the energy recovery module. The optional recirculation damper is in the energy recovery module also.

All dampers are operated by 24VAC electric actuators. The actuators are mounted on the inside of the unit and are controlled by the Integrated Controls system. The OA and EA dampers are powered open, spring return close. The face and bypass damper actuator is powered modulation, spring return to the energy recovery position, i.e., face damper open, bypass damper closed. The optional recirculation damper is powered open, spring return close.

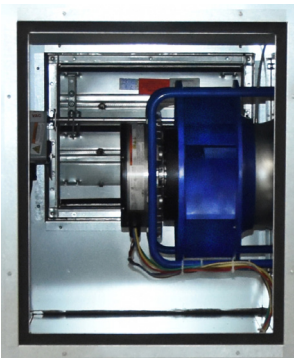


FIGURE 2.3.0 EA FAN WITH DAMPER (BEHIND)


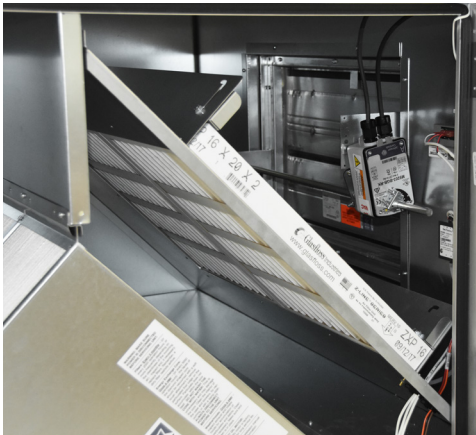


FIGURE 2.3.1 OA DAMPER AND ACTUATOR



NOTE: Also, see damper figures on the following page.

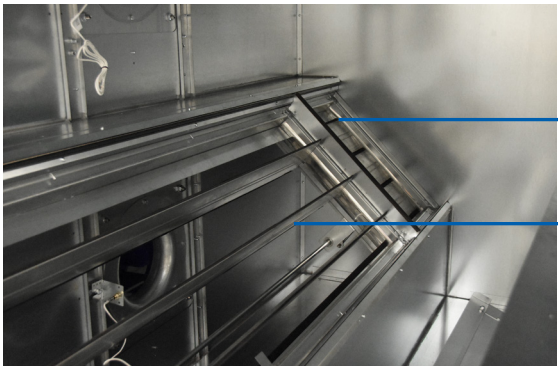

BYPASS DAMPER

FACE DAMPER

FIGURE 2.3.2 FACE AND BYPASS DAMPERS

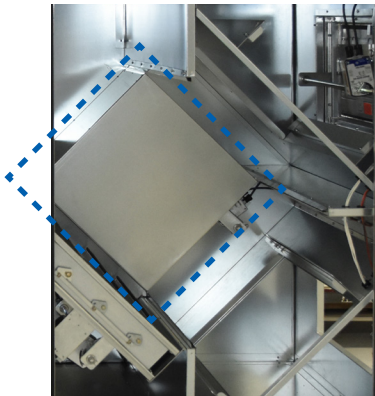


FIGURE 2.3.3 BYPASS ASSY VIEWED FROM FRONT

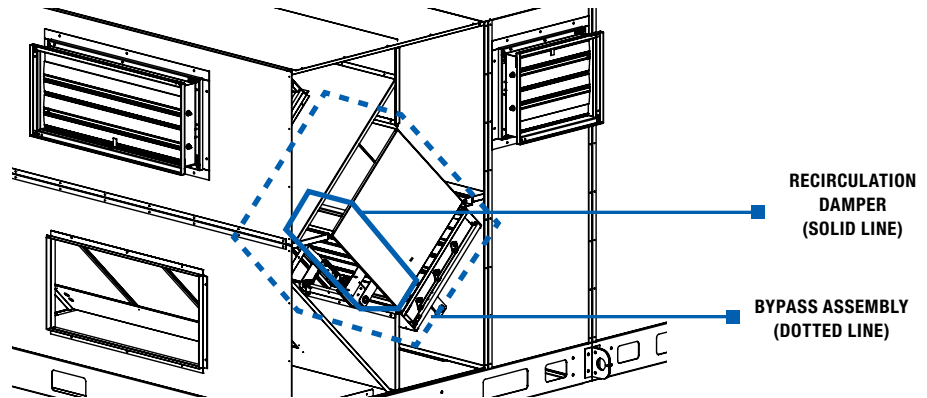


FIGURE 2.3.4 RECIRCULATION DAMPER INSIDE BYPASS ASSEMBLY

2.4 ENTHALPIC CORES

Every DN is equipped with enthalpic cores and the number of cores varies by DN model. All cores are similar in construction. See Digit 6 of the Configuration Code.

2.5 FILTERS

Filters are an essential part of the DN and the unit should never be operated without properly installed filters. Filters are typically shipped installed in the unit. The standard filter is a 2" thick MERV 8. Optionally available are 2" thick or 4" thick MERV 13 filters, and 2" or 4" thick MERV 14.

2.5.1 Filter Monitors

All DN units are equipped with filter monitors. When the monitor system detects filter pressure above a setpoint, the controller provides an indication that the air filters are clogged and require changing.

2.6 CONTROLS

RenewAire provides an integrated control package with or without a BACnet license. See Digit 21 of the Configuration Code.


The points list is found in the *DN-Series Integrated Programmable Controls Manual*.

2.6.1 Integrated Programmable Controls

The controller is a multi-function device that monitors operation of the DN unit and air conditions. It evaluates conditions such as temperatures, air pressures, air flows and air quality and then modulates the operation of the air handler to meet owner-specified set points. The controller can function as a stand-alone device or it can also be connected to a BMS. For detailed information on the integrated controller, see the *RenewAire DN-Series Integrated Programmable Controls User Manual*.

2.6.2 Variable Frequency Drive (OPTIONAL)

Optional Variable Frequency Drive (VFD) control of the asynchronous motors provides continuous modulation of fan speed. The VFD is used in conjunction with the Integrated Programmable Controller. On DN-2 and DN-3 models, the VFDs and their keypads are in the unit electrical box. For DN-5 models, the VFDs are in the EA fan compartment and the keypads are in the unit electrical box.

 **NOTE:** The cores used in all DNs are 5th generation, static plate enthalpic cores. They are commonly referred to in this manual as "cores".

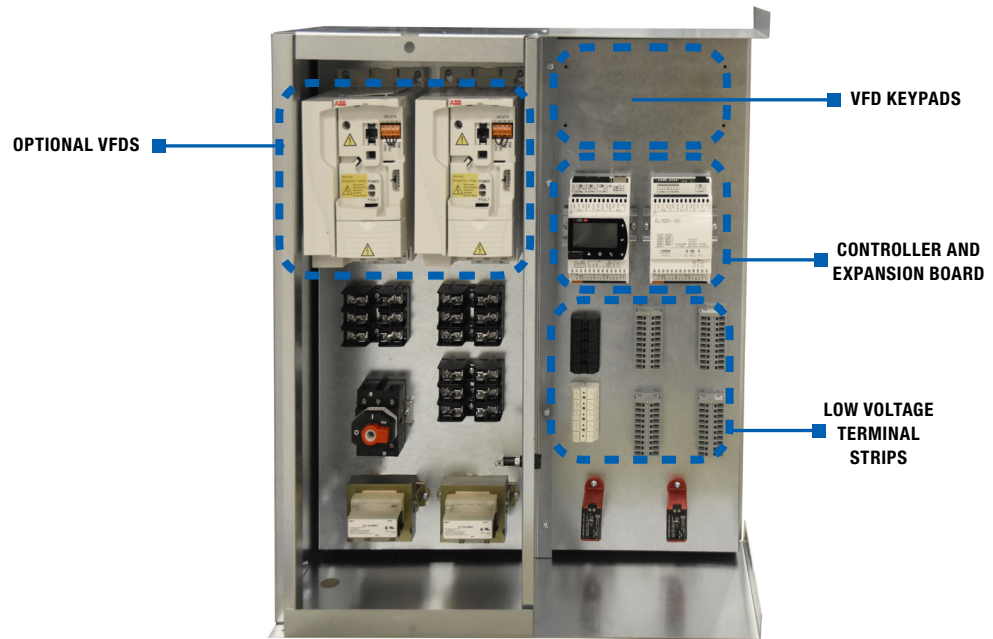


FIGURE 2.6.0 INTEGRATED CONTROLS INSTALLED

2.7 GAS HEAT MODULE (OPTIONAL)

A single indirect gas-fired heat module is provided, when ordered. The gas heat module may be configured for outdoor installations with exhaust flue vent. A variety of sizes are available. The optional heater module has an on-board control panel to modulate the heat output. An analog 0–10 VDC signal is produced by the integrated controller. The gas heat module is always installed in the lower part of the DN heat module and is always downstream of the fans. See Digit 18 of the DN Configuration Code. Also see the *RenewAire Integral Indirect Gas-Fired Heat Module User Manual*.

2.8 ELECTRIC HEAT MODULE (OPTIONAL)

The optional electric heat module has an on-board control panel with a Solid State Relay (SSR) module to modulate the heat output. An analog 0–10 volt signal is produced by the integrated controller. Electric heater modules are always installed in the lower part of the DN heat module and is always downstream of the fans. See Digit 18 of the DN configuration code. Also see the *RenewAire Electric Heat Module User Manual*.

2.9 SPLIT DX COOLING (OPTIONAL)

All units ordered with optional split DX cooling have a factory-installed DX coil. The DX coil has a liquid (supply) line connection on the leaving air side of the coil. A suction line connection is on the entering air side of the coil. Both connections are copper. The suction header is equipped with an external equalizer line connection. **No refrigerant control valve (TX valve) is provided and must be specified by the designer of the overall system for separate sourcing.** DX cooling coils are mounted above a condensate pan that must be trapped and winterized.

The coil must be connected to separate, external equipment provided by others. The DN unit Integral Controller provides a digital “enable” signal and an analog modulating signal to the external, field-provided condensing equipment.

See Digit 16 of the DN Configuration Code.

2.10 HOT GAS REHEAT (OPTIONAL)

For humidity control, the DN may be ordered with an integral Hot Gas Reheat (HGRH) coil. The HGRH coil has a supply line connection on the leaving air side of the coil and a return line connection on the entering air side of the coil. Both connections are copper. **No external equipment, piping or refrigerant control valves are provided and must be specified by the designer of the overall system for separate sourcing.**

See Digit 16 of the DN Configuration Code.

2.11 CHILLED WATER COOLING (OPTIONAL)

An optional chilled water coil may be ordered for the DN. The chilled water coil has a supply line connection on the leaving air side of the coil and a return line connection on the entering air side of the coil. Both connections are copper. The coils will vent and drain through the factory-installed vent and drain fittings when mounted level for horizontal flow. **No fluid control valve is provided and must be specified by the designer of the overall system for separate sourcing.** Chilled water cooling coils are mounted above a condensate pan that must be trapped and winterized.

The coil must be connected to separate, external equipment provided by others. It may be connected to either an external chilled water source or to a heat pump. If it is used with a heat pump, the coil serves for both heating and cooling. The DN unit integral controller provides a digital “enable” signal and an analog modulating signal to the external, field-provided equipment.

See Digit 16 of the DN Configuration Code.

2.11.1 Optional Overflow Switch

The optional overflow switch is factory-installed on the condensate pan and wired directly to the low voltage terminal strip in the DN. If the water level in the pan should rise to an unacceptable level, the magnetic reed switch will cause the unit to shut down the fans and return the dampers to their normally-closed positions. The overflow switch is factory-wired to the controller “enable” function so the DN will simply shut down whenever the water level rises too high and will then resume operation when the water level drops. If the overflow switch causes an override of the “enable” function, the controller will show ENABLE OFF and it will not register as an ALARM condition. The overflow switch can also be used with DX cooling.



FIGURE 2.11.0 OPTIONAL OVERFLOW SWITCH

2.11.2 Waterless Drain Traps

Waterless drain traps are offered as an accessory for field-installation in the condensate drain lines. They are offered in two different versions, one for negative pressure and one for positive pressure. For further information and images, see Section 5.7.4 Waterless Drain Traps Accessory in this manual. The waterless drain traps can also be used with DX cooling.

2.12 HOT WATER/STEAM HEATING (OPTIONAL)

The DN unit may be ordered with either a hot water coil or a steam coil. The hot water coil has a supply line connection on the leaving air side of the coil and a return line connection on the entering air side of the coil. The steam coil has a supply line connection at the middle of its header and a return line connection at the bottom of its header. All connections are copper. The coils will vent and drain through the factory-installed vent and drain fittings when mounted level for horizontal flow. **No fluid control valve is provided and must be specified by the designer of the overall system for separate sourcing.** Heating coils are mounted above a drain pan that must be trapped and winterized.

The coil must be connected to separate, external equipment provided by others. The DN unit integral controller provides a digital “enable” signal and an analog modulating signal to the external, field-provided equipment.

See Digit 17 of the DN Configuration Code.

3.0 SHIPPING/RECEIVING/HANDLING

All DN units are palletized and then shipped by common carrier. It is the installer’s/customer’s responsibility to coordinate delivery and properly handle the shipment during unloading and storage. RenewAire also provides a model-specific manual for shipping, rigging, lifting and assembly that is available online at RenewAire.com.

3.1 UNIT WEIGHTS/DIMENSIONS

3.1.1 Unit Dimensions and Weight

The unit weights and dimensions vary based on configuration of the unit and options selected. Sections 3.1.1 and 3.1.2 list weights and dimensions for maximum size units. Sections 3.1.3, 3.1.4 and 3.1.5 provide weights and dimensions of additional unit configurations.

Unit dimensions and weight:

DOAS Model DN-2 with 1" thick walls:	151 5/8" L x 76.75" W x 73 1/8" H
DOAS Model DN-2 with 2" thick walls:	154 1/8" L x 78 5/8" W x 75 1/8" H
Typical unit weight with 1" thick walls:	1500–2700 pounds
Typical unit weight with 2" thick walls:	1600–2825 pounds
DOAS Model DN-3 with 1" thick walls:	174 7/8" L x 106 1/8" W x 75 1/8" H
DOAS Model DN-3 with 2" thick walls:	176 7/8" L x 108 3/4" W x 77 1/8" H
Typical unit weight with 1" thick walls:	2000–3950 pounds
Typical unit weight with 2" thick walls:	2125–4150 pounds
DOAS Model DN-5 with 1" thick walls:	205 1/8" L x 126 3/8" W x 92 1/8" H
DOAS Model DN-5 with 2" thick walls:	207 1/8" L x 128 3/8" W x 94 1/8" H
Typical unit weight with 1" thick walls:	2975–5500 pounds
Typical unit weight with 2" thick walls:	3100–5700 pounds

3.1.2 Shipping Dimensions and Weight

DOAS Model DN-2 with 1" thick walls:	140" L x 90" W x 79" H
DOAS Model DN-2 with 2" thick walls:	140" L x 90" W x 81" H
Typical shipping weight with 1" thick walls:	1700–2900 pounds
Typical shipping weight with 2" thick walls:	1800–3025 pounds
DOAS Model DN-3 with 1" thick walls:	160" L x 90" W x 81" H
DOAS Model DN-3 with 2" thick walls:	160" L x 90" W x 83" H
Typical shipping weight with 1" thick walls:	2225–4175 pounds
Typical shipping weight with 2" thick walls:	2350–4375 pounds
DOAS Model DN-5 with 1" thick walls:	180" L x 101 1/2" W x 98" H
DOAS Model DN-5 with 2" thick walls:	180" L x 101 1/2" W x 100" H
Typical shipping weight with 1" thick walls:	3225–5750 pounds
Typical shipping weight with 2" thick walls:	3350–5950 pounds

3.1.3 DN-2-RT CORNER WEIGHTS

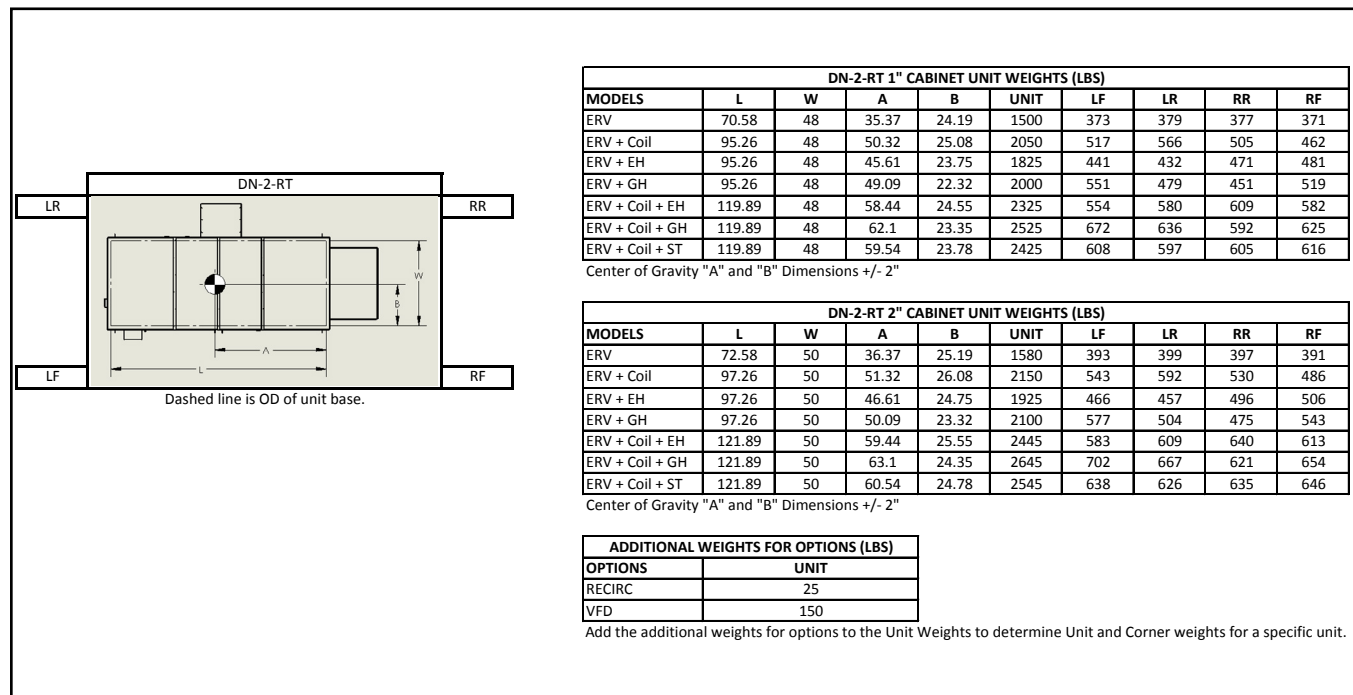


FIGURE 3.1.0 DN-2-RT APPROXIMATE CORNER WEIGHTS

3.1.4 DN-3-RT CORNER WEIGHTS

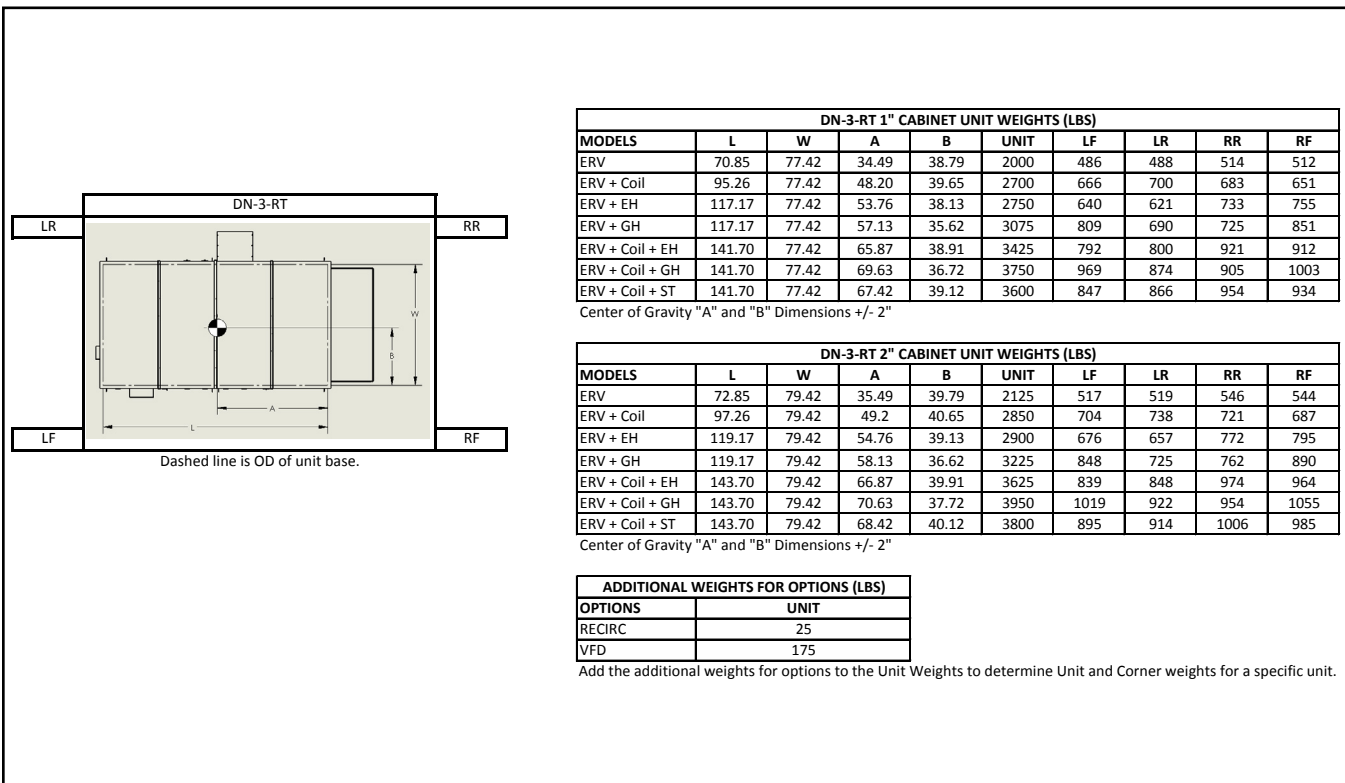


FIGURE 3.1.1 DN-3-RT APPROXIMATE CORNER WEIGHTS

3.1.5 DN-5-RT CORNER WEIGHTS

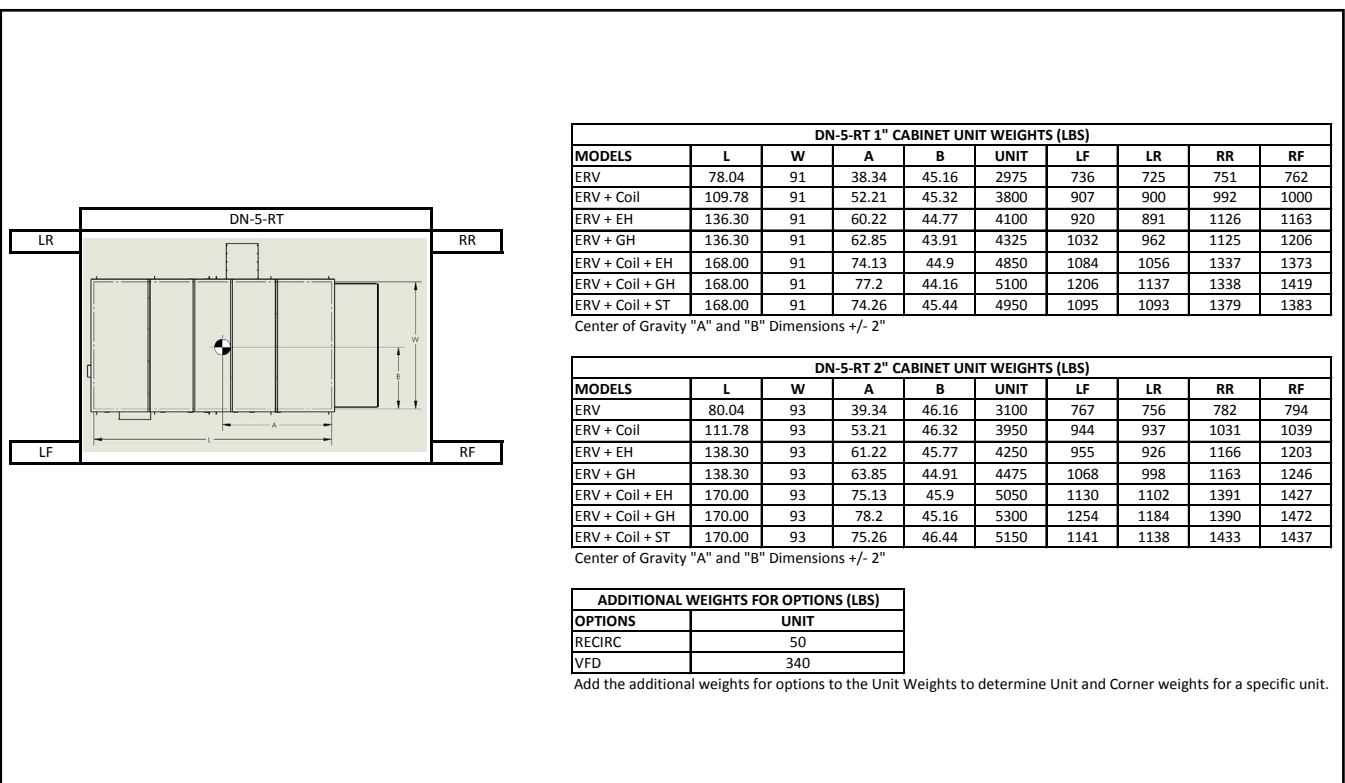


FIGURE 3.1.2 DN-5-RT APPROXIMATE CORNER WEIGHTS

3.2 RECEIVING

Upon delivery of the DN unit, inspect it carefully for shipping damage and completeness. Verify the presence of any accessories that are to be field-installed or filters that are shipped loose. If shipping damage is discovered, take digital pictures and note the visible damage on the shipping manifest. Notify your RenewAire dealer immediately.

3.3 RIGGING

For rigging instructions, refer to the model-specific manual for shipping, rigging, lifting and assembly that is available online at [RenewAire.com](https://renewaire.com).

3.4 HANDLING AND STORAGE

Upon delivery to a job site, the DN should ideally be placed and installed immediately. If the unit cannot be installed immediately, it should be protected from the weather, either by moving it indoors or by covering with tarps. When placing the DN unit on the ground, the placement area should be flat and level. Take care to avoid twisting or wracking of the unit.

4.0 UNIT PLACEMENT

4.1 SOUND ATTENUATION OUTSIDE THE BUILDING

The exhaust hood is the primary source of noise outside the building. When practical, orient the exhaust air hood to point away from houses or public areas.

4.2 PLACEMENT CAUTIONS

Air handlers are typically placed in a location specified by others. There are a number of situations that may demand relocation:

- ♦ The outside air intake must be at least 10' away from exhausts such as dryer vents, chimneys, furnace and water heater exhausts or other sources of contamination or carbon monoxide.
- ♦ Do not locate outside air intake where vehicles may be serviced or left idling.
- ♦ Never locate the outside air inlet inside a structure.
- ♦ Do not install the unit inside a garage or parking structure.

NOTICE

This DN unit must be installed in compliance with SMACNA guidelines and all applicable local building codes.

4.3 SERVICE CLEARANCES

See Dimensional Drawings at the front of this manual for required service clearances.

5.0 INSTALLATION

5.1 CURB ASSEMBLY/EQUIPMENT RAIL PLACEMENT

Rooftop units are typically placed on either an optional curb or on owner-provided equipment rails. Curbs must be used if either the Return Air inlet or Supply Air outlet is in the base of the unit. Equipment rails may be used if both the Return Air inlet and the Supply Air outlet are in the sides of the unit.

RenewAire recommends a minimum 14" curb or rail height from the structural roof. However, consider local codes and practice with respect to snow buildup.

Curb or rail must be located so the building structure can support it and the unit. Consider both static loads of the equipment, seismic loads, and wind loads.

Confirm the curb/rail location allows for proper connection of the ducts, electrical power and control wires, coil and condensate pipes, and provides necessary service access.

Since the curb or rails attach the unit to the building structure they must themselves be attached to the building sufficiently well to transfer wind and seismic loads which can be lateral, upward, and downward. RenewAire strongly recommends that rooftop units are properly secured to the curb or equipment rails, and thus to the building structure. Strong winds, tornados, and hurricanes can and do displace or remove rooftop equipment from rails or curbs. When this happens, the equipment, adjacent roof structure, and even vehicles parked near the building can be damaged, and rain typically enters the building. The equipment is put out of service and the collateral damage can be very expensive.

At a minimum, observe locally applicable codes, but note that even if local codes require some attachment means that may not be enough to withstand common wind occurrences.

RenewAire offers optional curbs and curb clip kits for the DN-Series. The curb assembly from RenewAire has assembly instructions included. The Curb Clip Kits are designed for winds up to 90 MPH. The available curb clip kits include clips and hardware. Clips must be installed per the instructions before the DN unit is placed on the curb, using the supplied hardware. For further information on curbs and curb clip kits used with ON-Series units see the following RenewAire manuals:

- *DN Shipping, Rigging, Hoisting, and Assembly Manual*
- *DN Curb Clips Manual*

Prior to installing the unit, the sides of the curb must be insulated per the manufacturer's instructions or as per standard practice. The curb or rails must also have roofing and counter-flashing applied as per standard practice. Gasket tape provide with the curb must be installed. The gasket tape is required between the unit and a curb. The gasket tape should be installed at the entire perimeter of the curb and on the top surface of the flanges for the ducts installed in the curb.

5.2 UNIT PLACEMENT

Unit location is normally specified by others but installers must also verify that the installation is in accordance with all local codes and building regulations.

Place the DN unit in its final location and level it by installing shims under the unit base. Shims should be placed at all four corners of the unit and not more than four feet apart on the sides and ends. Shims should be made of galvanized sheet metal.

The DN unit must be within 1/8" of level in any four-foot distance or slightly pitched from back to front of the unit to allow for proper drainage of the condensate drain pan at the front of the DN unit.

5.3 HOOD INSTALLATION

Outside Air (OA) and Exhaust Air (EA) hoods are shipped loose and field installed. Installation of the hoods is performed after all rigging and hoisting is complete to reduce the chance of damage by rigging equipment. For information on installation of hoods on the DN DOAS see the *DN-Series Shipping, Rigging, Hoisting, and Assembly Manual*.

5.4 DUCT CONNECTIONS

All ductwork is field-supplied and installed. In general, duct construction should follow SMACNA guidelines for duct construction and airtightness. Follow duct design specified in construction documents to achieve design system airflows.

If any ducts connected to the DN unit pass through unconditioned spaces, they must be insulated with vapor barrier on both inside and outside of the insulation.

Ducts are installed in the curb prior to unit installation. Ducts for vertical RA and SA openings should connect to the bottom of the unit and must be installed into the curb and through the roof before the unit is placed on the curb. Do not cut out the entire area of the roof enclosed by the curb. Openings in the roof for ductwork, electrical power and control wiring, and refrigerant or water piping, should be as small as practical so they may be sealed against air leakage after installation.

Ducts for horizontal RA and SA openings may be fastened to the duct flange provided on the unit or they may be oversized for direct attachment to the DOAS cabinet.

5.4.1 Indoor Sound Attenuation

DUCT STIFFNESS:

Make sure the ductwork at the unit openings is stiff enough to resist the flexing and resulting booming noise associated with system start-up and shutdown, as well as the turbulent flow conditions at the unit outlets.

In general, provide smooth transitions from the unit openings to the duct. The ducts connecting to the openings should be straight for a sufficient distance, with gradual transitions to the final duct size. These guidelines are consistent with SMACNA recommended duct layout practices for efficient and quiet air movement.

RADIATED NOISE:

Ducts can be significant sources of radiated sound. The SA duct should be insulated for sound control. This insulation should start at the unit. At a minimum, the first ten feet of duct should be insulated.

5.5 ELECTRICAL REQUIREMENTS

⚠ WARNING

ARC FLASH AND ELECTRIC SHOCK HAZARD

Arc flash and electric shock hazard. Disconnect all electric power supplies, verify with a volt-meter that electric power is off and wear protective equipment per NFPA 70E before working within electric control enclosure. Failure to comply can cause serious injury or death.

Customer must provide earth ground to unit, per NEC, CEC and local codes, as applicable.

Before proceeding with installation, read all instructions, verifying that all the parts are included and check the nameplate to be sure the voltage matches available utility power.

The line side of the disconnect switch contains live high-voltage.

The only way to ensure that there is NO voltage inside the unit is to install and open a remote disconnect switch and verify that power is off with a volt meter. Refer to unit electrical schematic.

Follow all local codes.

Unit electrical requirements are found on the unit label located on the left end panel of the unit. Determine the voltage, phase, and ampacity of the power supply for the unit. Before bringing power to the unit, check unit rating label to confirm it matches the voltage and phase of the power being supplied. Minimum wire size for supply power should be determined using the Minimum Circuit Ampacity (MCA) rating on the unit rating label. Wire insulation must have minimum 75°C rating. Wire insulation must have minimum 600V rating. Use conduit, strain reliefs, etc. as required to secure field wiring. Field connections must be accessible for inspection. It is the installer's responsibility to provide all supply wiring in accordance with local codes and installation in accordance with Industry Best Practices.

All internal electrical components have been wired at the factory. It is only necessary to bring supply voltage, control wires, and wires to external equipment supplied by others to the unit.

5.5.1 Factory-Recommended Electric Service Entry

The left end of the DN cabinet is the closest entry point to the electrical box for high-voltage supply power and low-voltage control wiring. Wiring must be secured within the unit as needed, and according to all local codes.

RECOMMENDED ENTRY FOR
HIGH VOLTAGE POWER AND LOW
VOLTAGE CONTROL WIRING

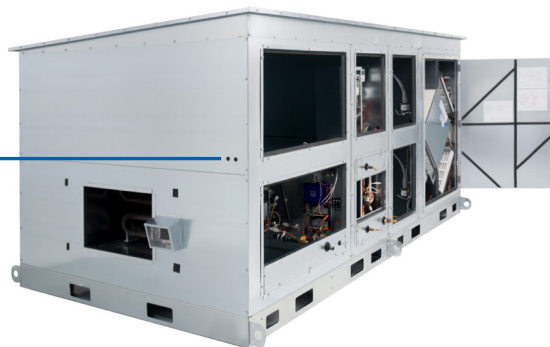


FIGURE 5.5.0 FACTORY-RECOMMENDED ELECTRIC SERVICE ENTRY

5.5.2 High-Voltage Electrical Connections

This DN uses a single-point high voltage electrical supply connection. All wires are to be terminated at the same point on the top of the disconnect switch. See photo below. Depending on the ampacity of the unit, different disconnect switches may be used, but high voltage supply wiring is always terminated at the top of the disconnect switch.

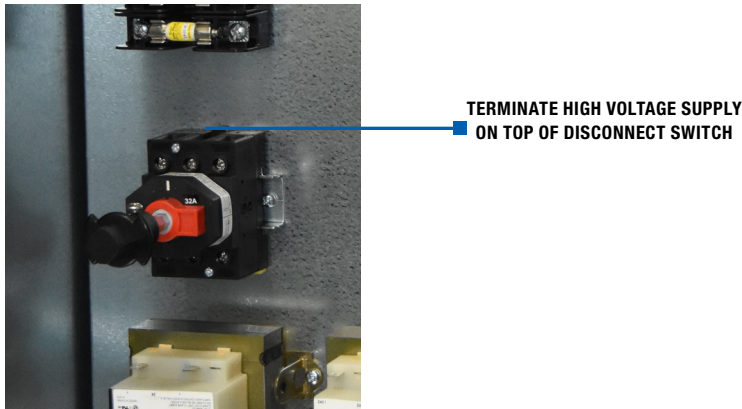


FIGURE 5.5.1 DISCONNECT SWITCH (TYPICAL)

High voltage wiring is to go through the side of the electrical box and be terminated on the terminals located on the top of the disconnect switch.

All electrical wiring installed by others in the field is to be secured as needed and according to all local codes and in accordance with Industry Best Practices.

5.5.3 Low Voltage Electrical Connections

The right side of the electrical box is used for low-voltage electrical connections. Any low-voltage control wires installed by others in the field should terminate in the right side of the electrical box.

There are six low voltage terminal blocks located in the electrical Box; 4 gray, 1 white and 1 black. Only the gray terminal blocks are used to terminate optional control sensors. See figures below and on following page.

NOTE: Every DN has an electrical box, commonly referred to as an “E-Box”. Each E-Box is divided into a high voltage side and a low voltage side.


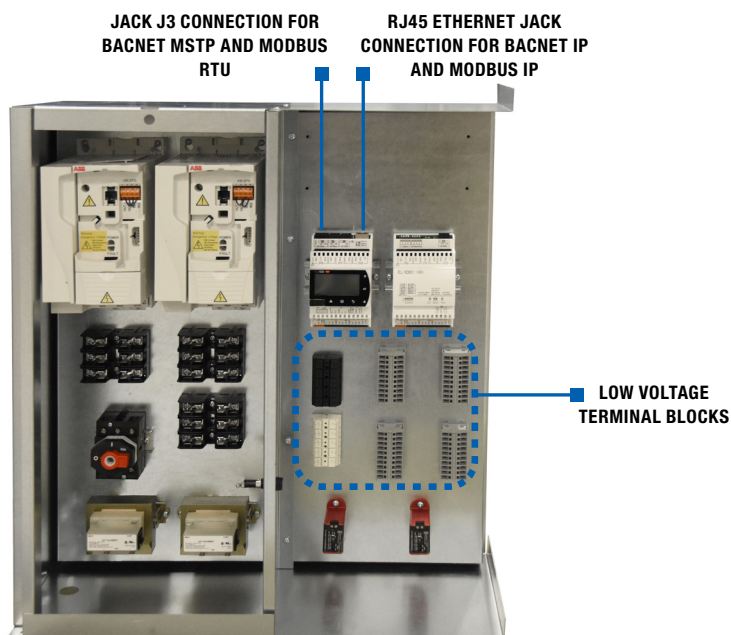


FIGURE 5.5.2 LOW VOLTAGE TERMINAL BLOCKS INSTALLED

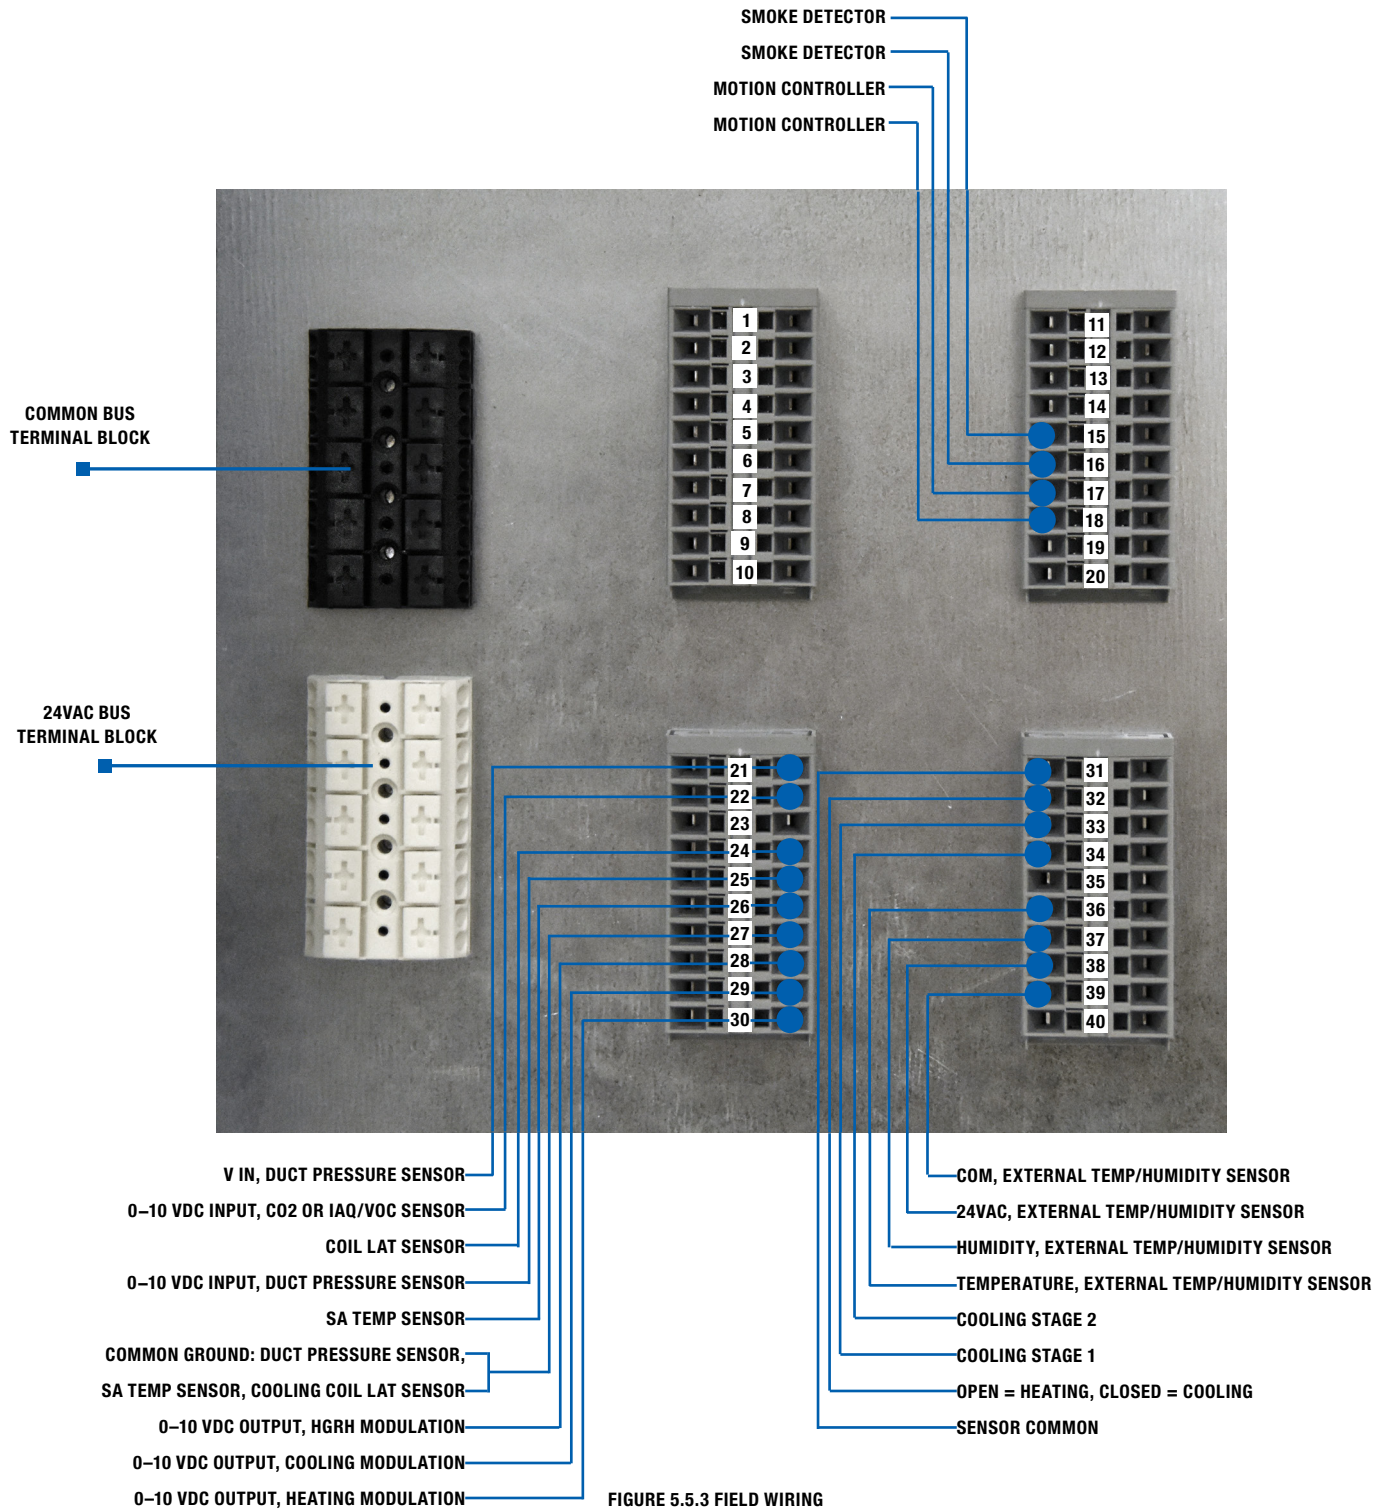

5.5.4 24VAC Class II Power Supply

This unit is equipped with 2 Class II 24VAC power supply transformers (see image below). One transformer provides power for the integrated controller and the second transformer provides power for optional sensors.

A built-in circuit breaker on the 24VAC transformer prevents damage to the transformer and other low voltage components in the event of a short-circuit or overload. The transformer itself is designed to fail safely in extreme cases.

⚠ CAUTION

RISK OF DAMAGE TO POWER SUPPLY AND CONNECTED COMPONENTS

UNITS WITH 230VAC POWER SOURCE:

The DOAS is shipped from the factory with the transformers set for 208VAC primary power. If the actual power source is 230VAC, move the black primary-side lead from the transformer's "208V" terminal to the transformer's "230V" terminal.

Connect only to components intended for use with a 24VAC power supply.

Do not interconnect the unit's Class II power supply with an external Class II power supply.

Do not use undersized low voltage wiring to connect this device. Observe the wire gauge/wire length chart below.

Do not overload the power supply.

CIRCUIT BREAKER
RESET BUTTON

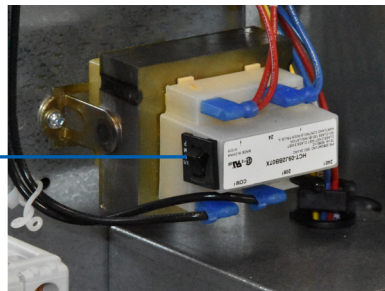


FIGURE 5.5.4 24VAC POWER SUPPLY TRANSFORMER

Transformer Specifications:

Nominal output voltage under load: 24VAC

Typical output voltage at no load: 29–31V

Minimum contact rating for connected control device: 50 mA (1.2VA)

Circuit breaker trip point: 3.75 A

Limits of Class II Power Output:

Control devices drawing a total of 8 VA may be connected. More than one device may be connected. Observe the following wire guidelines:

Wire Gauge	#22	#20	#18	#16	#14	#12
Circuit Length	100'	150'	250'	400'	700'	1000'

Resetting the Circuit Breaker:

If the transformer is subjected to excessive load or a short circuit, the integral circuit breaker will trip.

Shut off the primary-side power to the unit and remove the excessive load or the short circuit. The circuit breaker can be reset about 15 seconds after it trips.



NOTE: This wiring schematic is TYPICAL of single phase, 230VAC input for model DN-2. This drawing is for a unit that includes gas heat and EC motors. A unit-specific electrical schematic is found inside the access door to the core module.

Also see additional wiring schematics on following pages for TYPICAL control wiring and TYPICAL field wiring.

5.6 WIRING SCHEMATICS

5.6.1 Typical Input Power

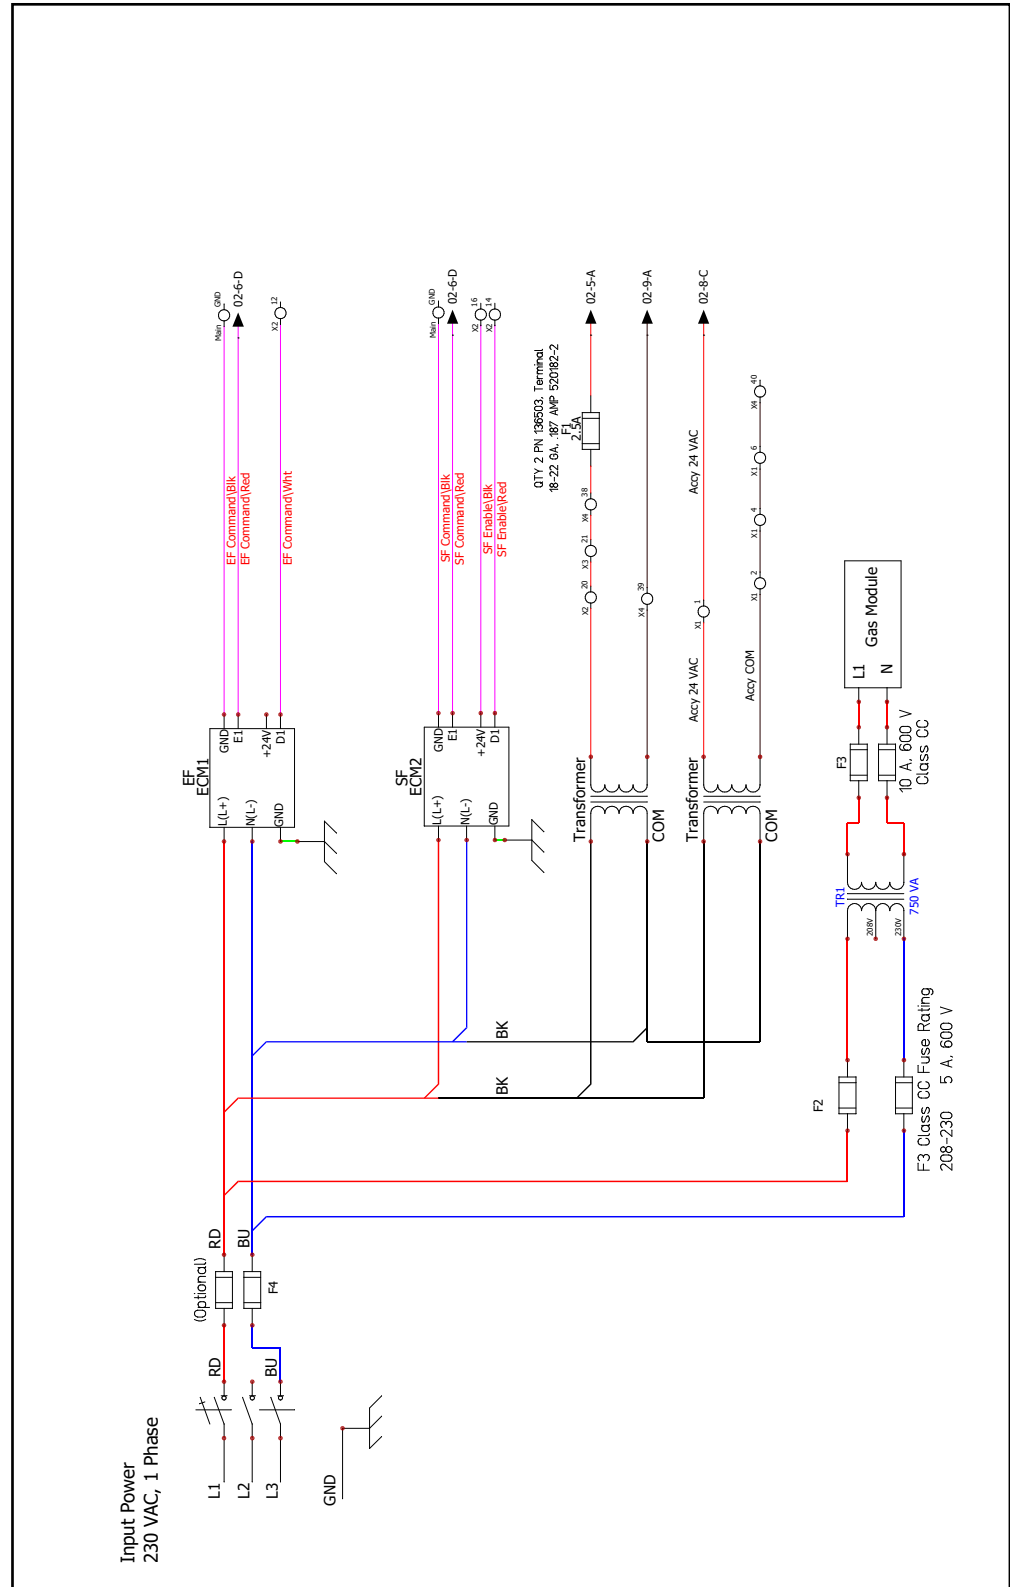


FIGURE 5.6.0 DN-2 SINGLE PHASE POWER WIRING SCHEMATIC

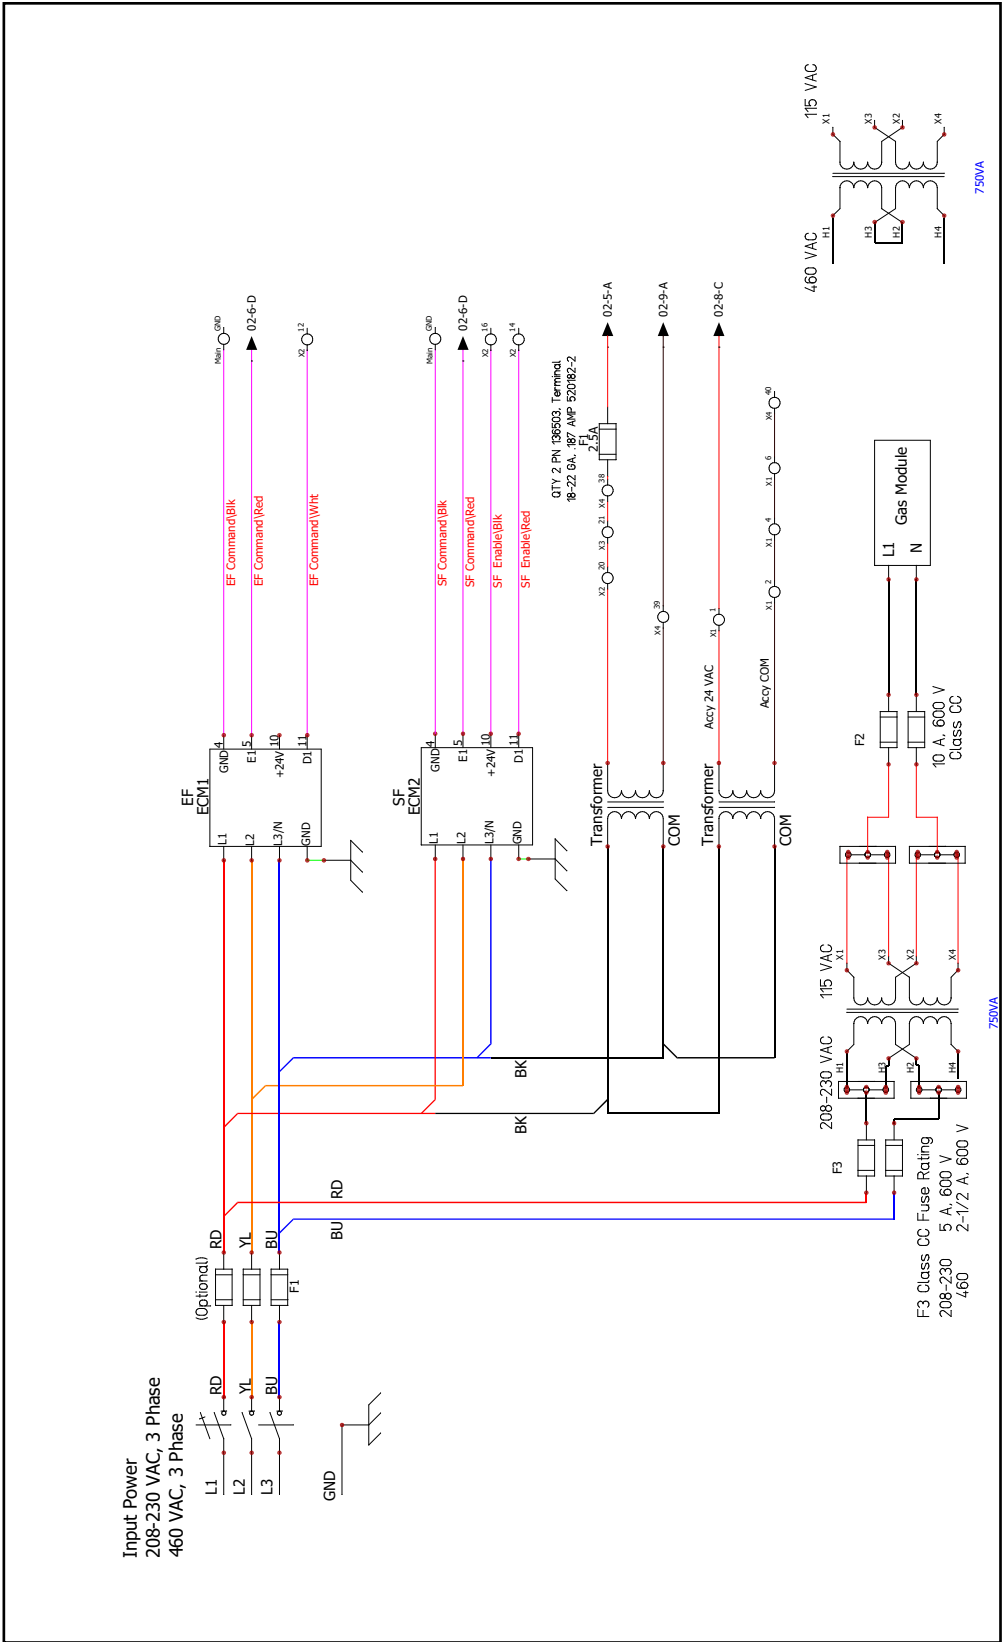



FIGURE 5.6.1 DN-2, DN-3 THREE PHASE POWER WIRING SCHEMATIC

 NOTE: This wiring schematic is TYPICAL of three phase, 208–230VAC and 460VAC input for model DN-2 and DN-3. This drawing is for a unit that includes gas heat and EC motors. A unit-specific electrical schematic is found inside the access door to the core module. Also see additional wiring schematics on following pages for TYPICAL control wiring and TYPICAL field wiring.



NOTE: This wiring schematic is TYPICAL of three phase, 208-230 and

460VAC input for model DN-5. This drawing is for a unit that includes gas heat and EC motors. A unit-specific electrical schematic is found inside the access door to the core module.

Also see additional wiring schematics on following pages for TYPICAL control wiring and TYPICAL field wiring.

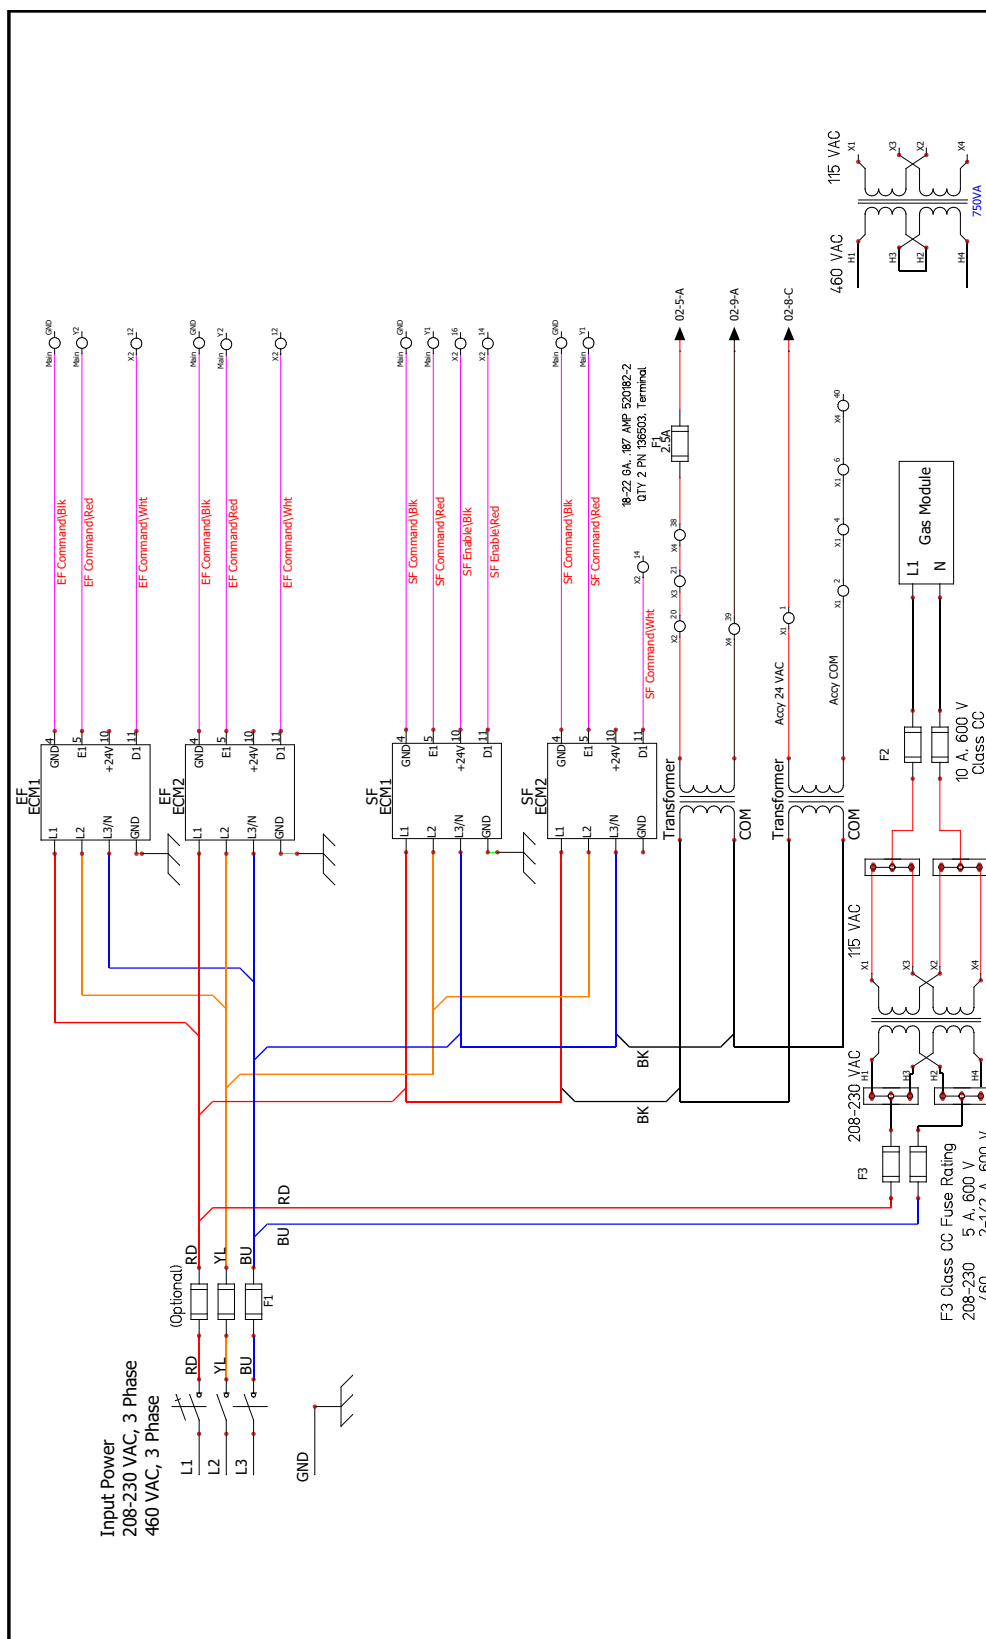


FIGURE 5.6.2 DN-5 THREE PHASE POWER WIRING SCHEMATIC

5.6.2 Typical Control Wiring

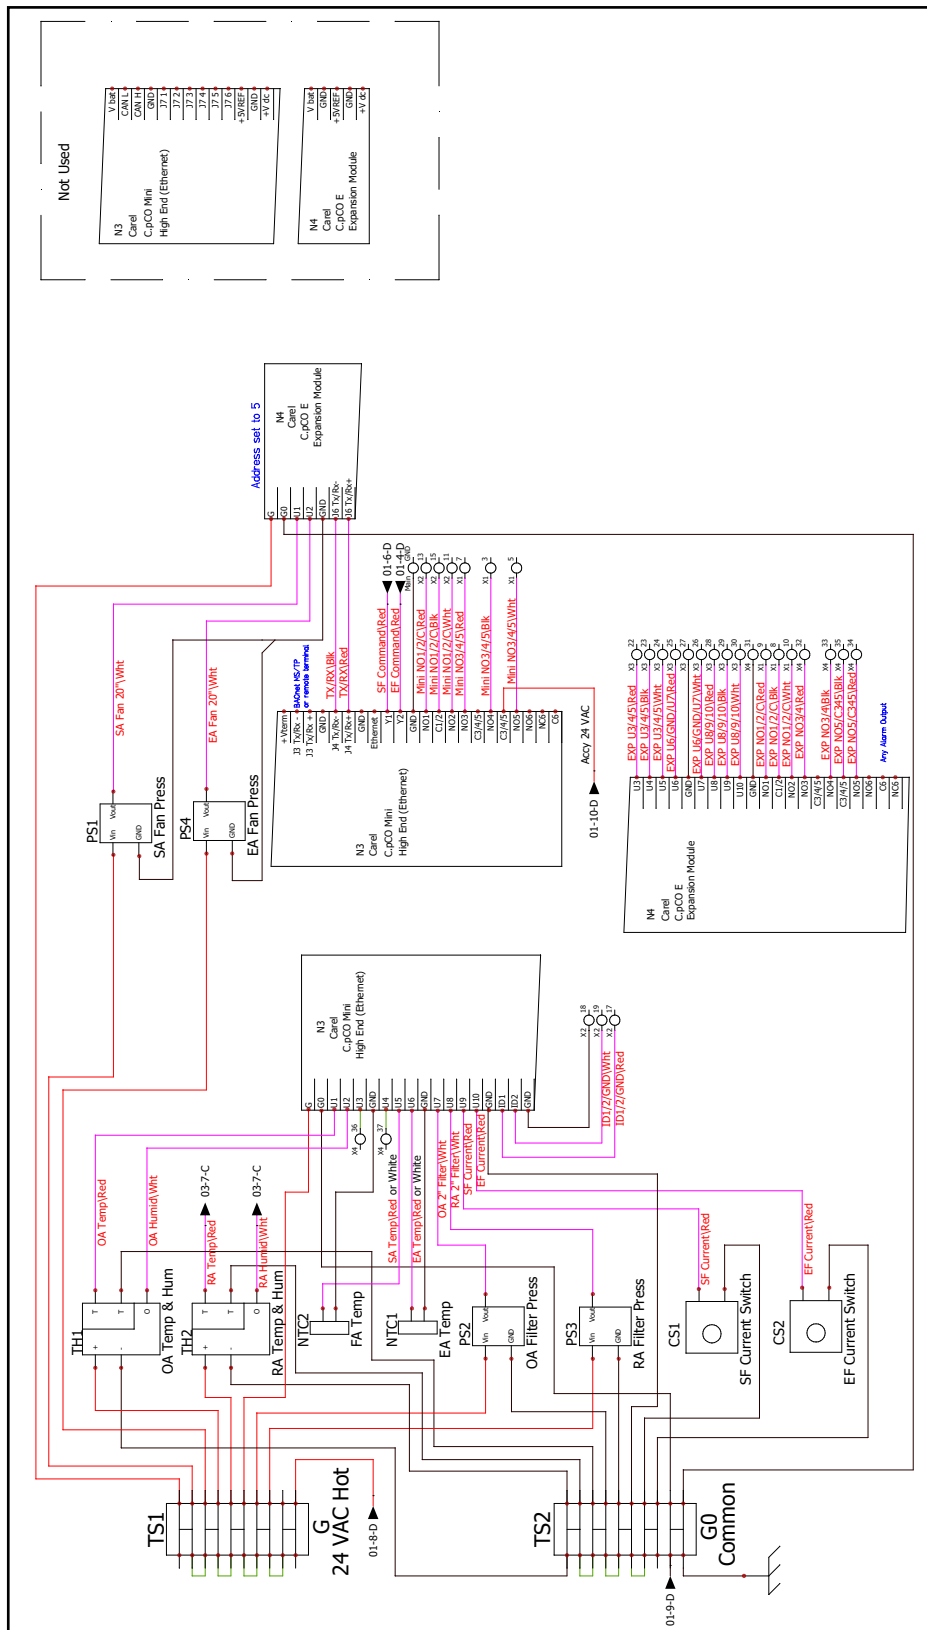



FIGURE 5.6.3 DN-2, DN-3, DN-5 TYPICAL CONTROL WIRING

 **NOTE:** This wiring schematic is TYPICAL control wiring for a three phase, 208–230 and 460VAC input for models DN-2, DN-3, and DN-5. This drawing is for a unit that includes gas heat and EC motors. A unit-specific electrical schematic is to be found inside the access door to the unit core module.

Also see additional wiring schematic on following page for TYPICAL field wiring.

5.6.3 Typical Field Wiring



NOTE: This wiring schematic is TYPI-
CAL of three phase,
208-230 and
460VAC input for models
DN-2, DN-3, and DN-5.
This drawing is for a unit
that includes gas heat and
EC motors. A unit-specific
electrical schematic is to
be found inside the access
door to the unit
core module.

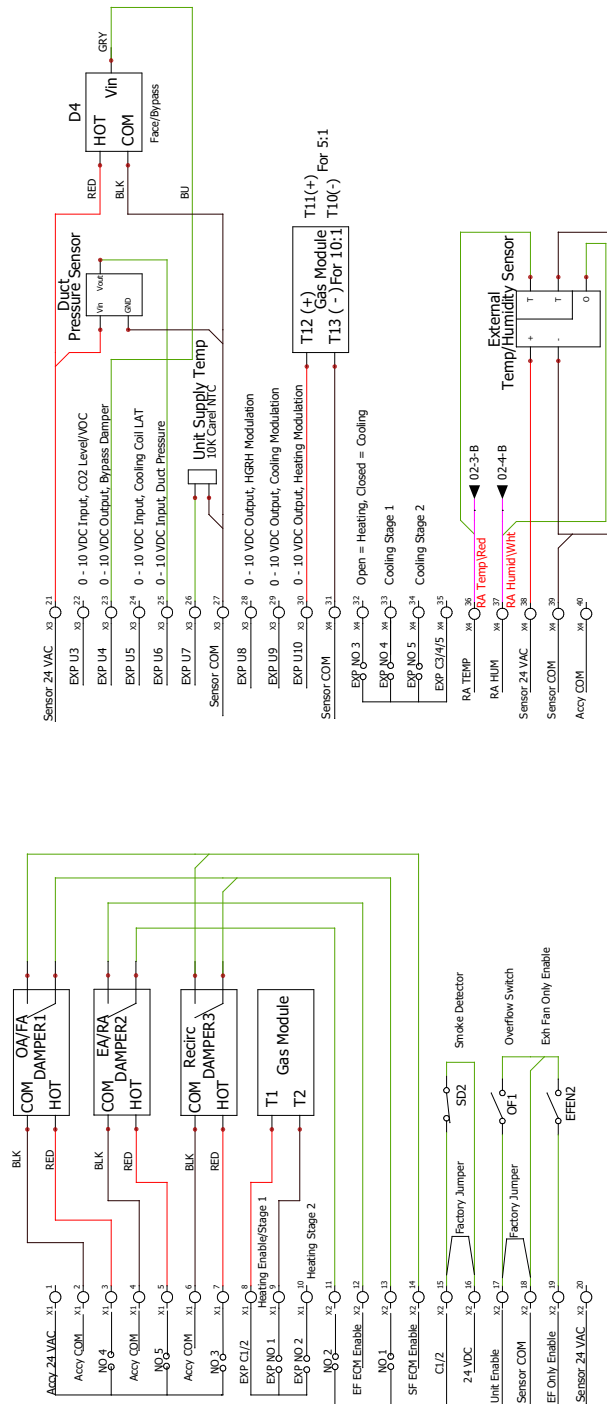


FIGURE 5.6.4 DN-2, DN-3, DN-5 TYPICAL FIELD WIRING

5.7 PIPING CONNECTIONS

5.7.1 Coil Connections

Piping connections to DN coils may be water coil (either heating or cooling), steam coil or refrigerant for a DX cooling coil or an HGRH coil. The coils must be connected to equipment provided by others. All connecting lines should be supported independently of the unit. Do not rely on the connection to the coil to support the pipes.

Fluid coils are located in the coil module which may be either upstream or downstream of the SA fan module. Coils are always positioned vertically. The coil connections are inside the unit at the back for field connections through the floor of the unit. Care must be taken when making penetrations through the floor of the unit to not damage any of the unit base structure. Coil header connections should be insulated inside the unit. Fluid coils must typically be flushed at time of connection to an external water source. Fluid coils are dry when shipped, with connections capped.


Optional DX coils are installed in the coil module which may be either upstream or downstream of the SA fan. The coil connection for the suction line of the DX coils is stubbed through the fixed portion of the access panel at the back of the unit. Coil header connections should be insulated inside the unit. DX coils are dry when shipped, with connections capped.

IMPORTANT

Do not release refrigerant into the atmosphere! If required service procedures include the adding or removal of refrigerant, the service technician must comply with all federal, state and local laws. The procedures discussed in this manual should only be performed by a qualified, EPA Certified technician.



FIGURE 5.7.0 SUCTION LINE FOR DX COIL

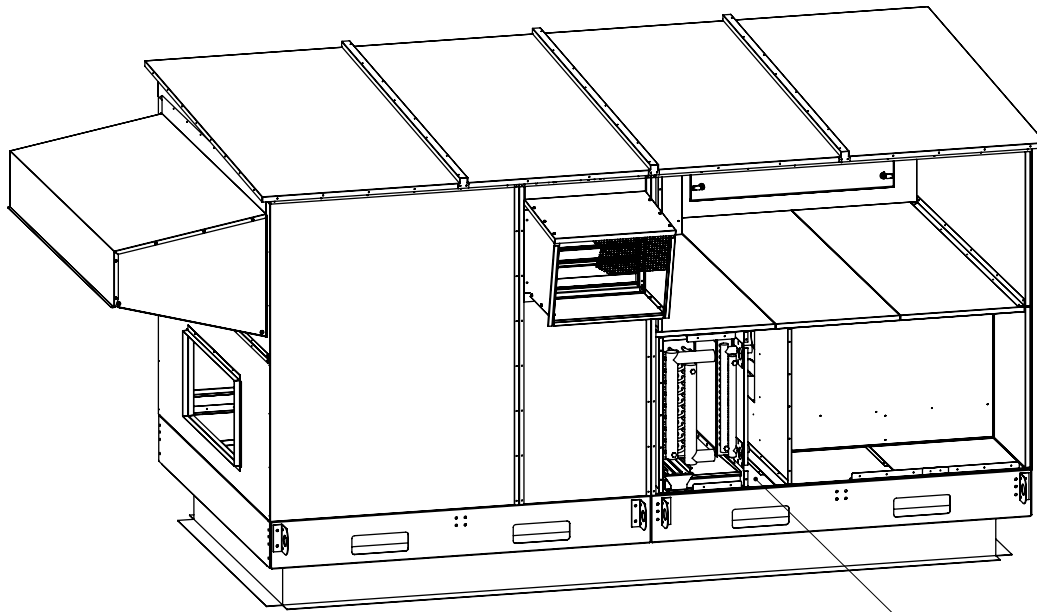

BACK VIEW

PANELS REMOVED FOR CLARITY.
COIL PIPING MAY EXIT BACK OR BOTTOM OF UNIT.

THIS AREA AVAILABLE FOR
PIPING PENETRATIONS
DOWN THROUGH CURB

COIL CONNECTIONS
CAN EXIT UNIT HERE
DEPENDING ON
CONFIGURATION

THIS AREA AVAILABLE FOR PIPING
PENETRATIONS THROUGH BASE OF UNIT

OPENING FOR
SA DUCT
(RTV AND RTF)

OPENING FOR
RA DUCT
(RTV AND RTR)

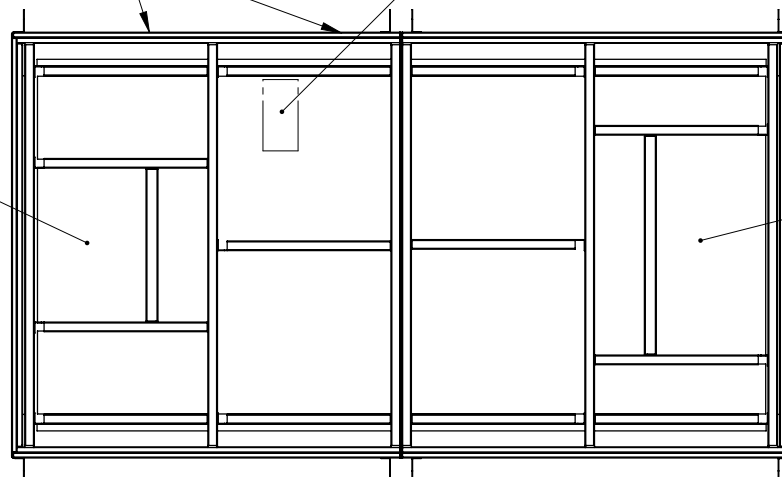


FIGURE 5.7.1 CABINET FLOOR PIPING PENETRATIONS

5.7.2 Drain Traps

Condensate drains are found as part of a condensate drain pan assembly in a cooling section of the DN and on integral gas heat modules. **All condensate drains must be trapped.** Depending on the configuration of the unit as ordered, there may be condensate drains for DX coils, chilled water coils and gas heat modules. DX coils and chilled water coils are installed above condensate drain pans and the drains from those pans must be trapped and, if necessary, winterized. If a gas heat module is installed, the condensate discharge tube from the module must also be trapped and winterized, as needed.

Cooling module drain pans have a sloped bottom and an integral drain fitting at the low end. The drain fitting is 1" diameter stainless steel with female NPT. The drain fitting for all DN-RT units is located at the front of each unit.

For instructions on designing both positive and negative pressure drain traps, see Section 5.7.3 Drain Trap Construction in this manual. A poorly designed and installed drain trap can restrict condensate flow and may cause the condensate to overflow.

For specific information on trapping a gas heat module condensate drain, see the *RenewAire Integral Indirect Gas-Fired Heat Module User Manual*.



FIGURE 5.7.2 CONDENSATE DRAIN LOCATION (TYPICAL)



NOTE: For the purposes of showing module locations, this illustration is a DN-IN unit. The condensate pan drain is located at the front of the unit, as shown. Coil connections are actually located at the back of the DN-RT unit.

When the SA fan module is located upstream of the cooling module, the resulting pressure sensed at the condensate pan will be POSITIVE. See below.

NOTE: For purposes of illustrating DN Modules, a DN-IN (Indoor) unit is shown.

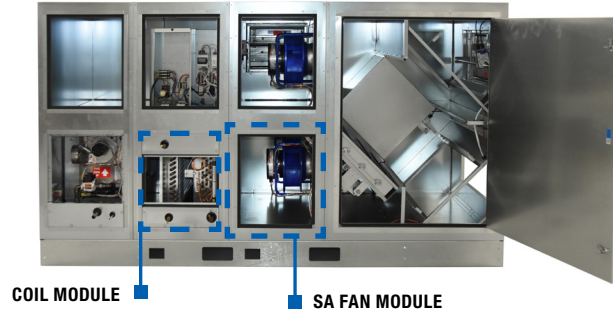


FIGURE 5.7.3 SA FAN MODULE LOCATED BEFORE THE COIL MODULE

When the SA fan module is located downstream of the cooling module, the resulting pressure sensed at the condensate pan will be NEGATIVE. See below.

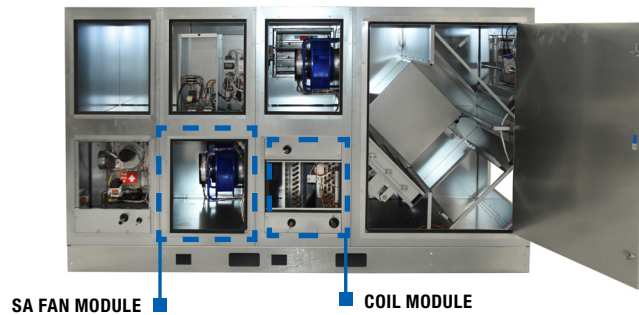


FIGURE 5.7.4 SA FAN MODULE LOCATED AFTER THE COIL MODULE

Condensate drain trap clearances

The unit base has an access port for the condensate drain pipe, centered vertically. The access port is 3" tall and the condensate drain pipe must exit the unit through it.

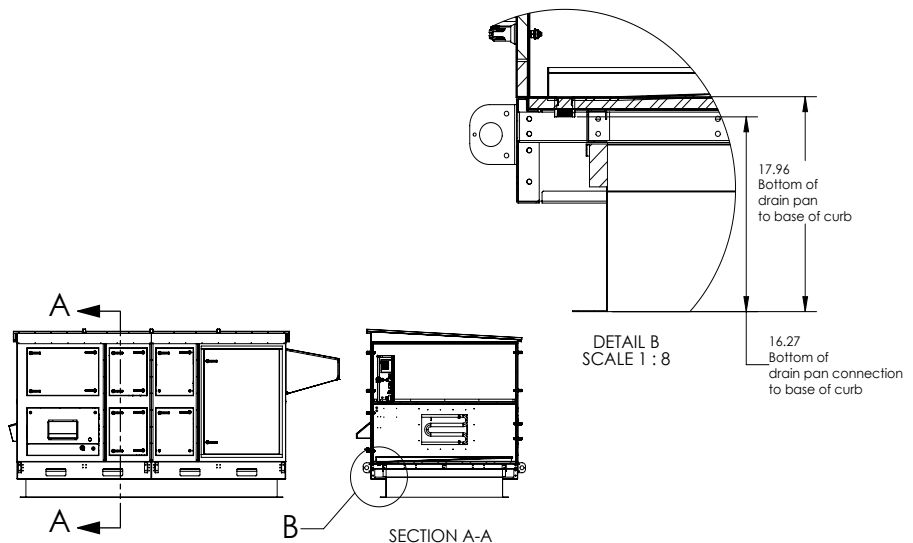


FIGURE 5.7.5 CONDENSATE DRAIN TRAP CLEARANCES

5.7.3 Drain Trap Construction

Drain traps should be constructed in accordance with local building codes, using Industry Best Practices. Drain traps are essential to allow water to flow out of the drain pan(s). More important, though, when there is negative internal static within the unit, the trap prevents outdoor air from being pulled into the unit and consequently splashing water inside the unit. Drain trap design is dependent on the static pressure at the drain location and also whether the pressure is negative or positive. For all drain traps, RenewAire recommends the installation of threaded plugs at several locations to permit periodic cleaning and filling of the trap. Also recommended is the use of a vacuum breaker if water is being discharged from the trap into a drain pipe. The vacuum breaker can be omitted if the condensate is being drained directly onto the ground. See illustration below.

NOTE LOCATIONS OF RECOMMENDED CLEAN-OUT PORTS

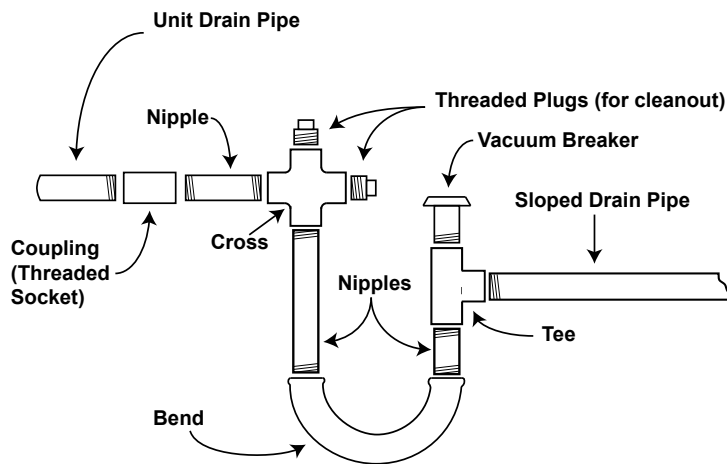


FIGURE 5.7.6 TYPICAL DRAIN TRAP CONSTRUCTION

In order to properly design drain traps, certain information must be obtained. First, carefully check the drawings to find the number and locations of all drain traps. Also from the drawings, determine if the drain traps will be positive or negative pressure.

If a positive pressure trap is needed, fabricate the trap as shown in the drawing below.


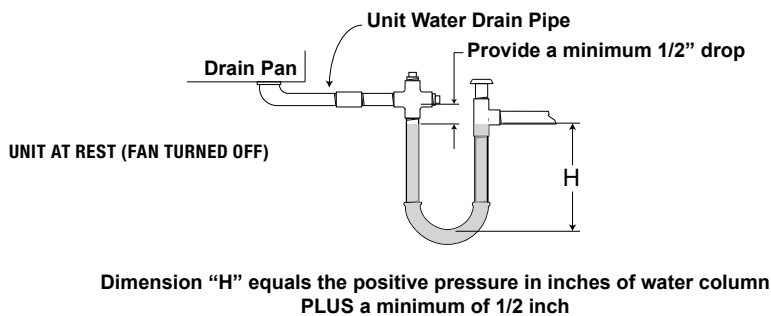


FIGURE 5.7.7 POSITIVE PRESSURE DRAIN TRAP CONSTRUCTION

When fabricating a positive pressure drain trap, dimension “H” equals the Static Pressure in inches of water column plus a minimum of 1/2 inch.

Be sure that the offset distance between the height of the condensate inlet and the condensate outlet is at least 1/2 inch.

If a negative pressure trap is needed, fabricate the trap as shown in the following drawing.

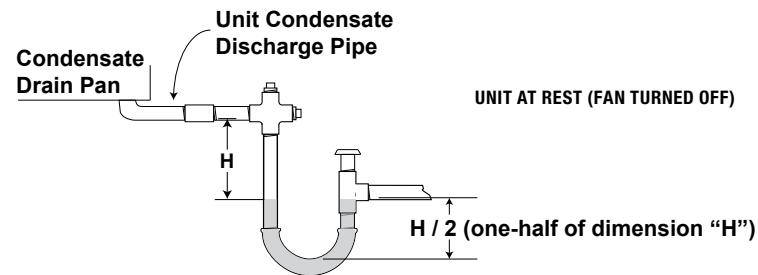

Dimension “H” equals the negative pressure in inches of water column PLUS a minimum of one inch

FIGURE 5.7.8 NEGATIVE PRESSURE DRAIN TRAP CONSTRUCTION

When fabricating a negative pressure drain trap, dimension “H” equals the Static Pressure in inches of water column plus a minimum of one inch. The outlet side of the drain trap should have a water column equal to one-half of dimension “H”.

Specific materials and fittings are to be used as local conditions dictate. Since the trap is to be kept filled with either water or glycol solution at all times, it may be necessary to fabricate the trap from metal so that an electric heat tape can be installed to prevent freezing.

Condensate may be drained directly onto the ground only if local codes permit it. If allowed to drain directly, a pad must be provided for the condensate to drip onto.

5.7.4 Waterless Drain Traps Accessory

As an alternative to a field-fabricated and installed condensate P-trap, RenewAire offers an HVAC waterless trap as an accessory. The advantages to a waterless trap are that they may require less vertical clearance for (negative pressure) installations, they generally do not require winterization and they do not require priming at the beginning of the cooling season.

Two different models are offered, both the N-type for negative pressure applications and the P-type for positive pressure applications. Both models are rated for a maximum of 12 In. W.C.. All waterless traps have a cleanout port for annual maintenance. RenewAire recommends that waterless traps be installed with a screen union kit to permit removal of the trap for maintenance, which consists of back-flushing with water or compressed air. RenewAire also recommends installation of a condensate pan overflow switch to shut down the DOAS if the condensate level should rise to unacceptable levels.

Type “P” waterless traps are typically installed vertically and require a 1" sweep on both the top and bottom. If screen-unions are used (recommended), that will increase the overall height clearance of the device slightly.

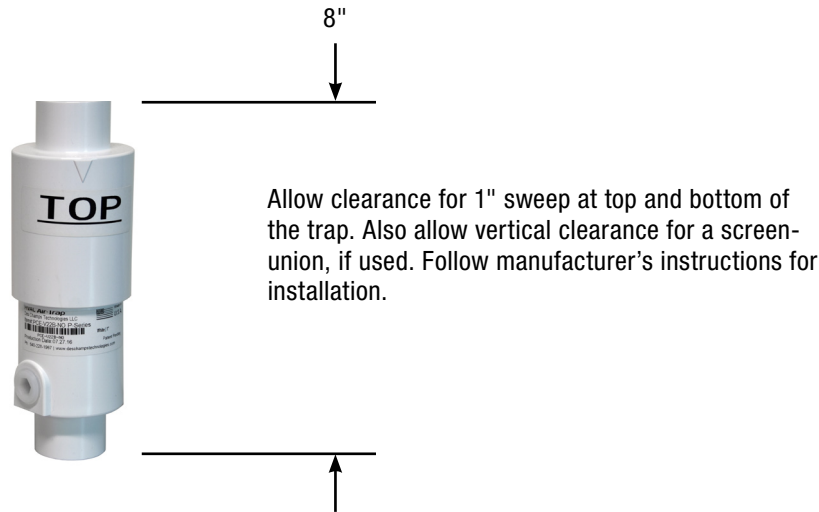


FIGURE 5.7.9 TYPE "P" POSITIVE PRESSURE WATERLESS TRAP

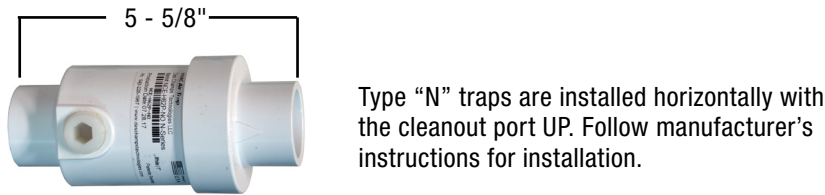


FIGURE 5.7.10 TYPE "N" NEGATIVE PRESSURE WATERLESS TRAP

	Maximum- positive- pressure	Maximum negative- pressure	Clearance required for positive pressure P-trap	Clearance required for negative pressure P-trap	Clearance required for positive pressure waterless trap	Clearance required for negative pressure waterless trap
DN-2	3–5 In. W.C.	3–5 In. W.C.	4.75"	7.75"	8.25"	4.25"
DN-3	3–5 In. W.C.	3–5 In. W.C.	4.75"	7.75"	8.25"	4.25"
DN-5	3–5 In. W.C.	3–5 In. W.C.	4.75"	7.75"	8.25"	4.25"

Maximum pressure is the In. W.C. detected at the condensate drain outlet. This pressure may vary, depending on factors such as airflow, fan position, and external static.

Clearance is the distance to be allowed BELOW the bottom of the DN unit base. This clearance represents typical P-trap construction based on provided guidelines or waterless trap construction, based on manufacturer's instructions.

5.8 GAS REQUIREMENTS

All DN units equipped with an indirect-fired gas heat module are to have gas supply connected in accordance with the instructions in the *RenewAir Indirect Gas-Fired Heat Module User Manual* supplied with this unit.

6.0 OPERATION

6.1 PRINCIPLE OF OPERATION

DN-Series units operate automatically based on the programming of the integrated controller. The unit receives a call for ventilation. Its isolation dampers open and turn on the fans. The unit determines the operating mode by continuously monitoring the air streams for temperature and enthalpy.

6.2 PRE START-UP

Prior to operating the unit for the first time, perform the following steps:

6.2.1 Verify Voltage

Using a voltmeter, test the input voltages as supplied to the disconnect switch. Refer to Digit 13 of the unit Configuration Code to find the rated voltage. The supplied voltage must be within +/- 10% of the rated voltage.

6.2.2 Verify Transformer Wiring

Units with 230VAC power source are shipped with the transformer wired for 208VAC. If the unit is receiving 230VAC, make sure the black primary-side wire on the transformer's 208V terminal has been moved to the 230V terminal.

6.2.3 Inspect Filters

Filters must be installed prior to fan start-up. Filters must be clean and butted tightly against each other, allowing no air bypass around them.

6.2.4 Inspect Fans

Prior to start-up, the fans should be rotated by hand to make sure that the impeller is not rubbing anywhere and that it turns freely.

6.2.5 Inspect and Clean the Interior

During the construction and installation phases of a project, dust, dirt and debris will often accumulate inside a unit. Thoroughly clean the inside of the unit by vacuuming and/or wiping with a damp rag.

6.2.6 Inspect Ductwork Connections

Ducts attached to the DOAS must be firmly attached, sealed and supported in accordance with installation instructions and SMACNA guidelines.

6.3 BASIC OPERATIONAL CHECK

Prior to connection and activation of any external controls, the DN is to be tested for correct operation. Verify that all Pre Start-Up steps as described above have been performed.

6.3.1 Quick-Start

See the *DN-Series Quick-Start Guide* for a complete set of instructions to verify damper operation and correct fan rotation. The basic steps are:

- Turn ON the unit disconnect switch located on the face of the E-box. The controller will boot-up and the display illuminates.
- From the controller Main Menu, switch the Unit Enable status to ON. The isolation dampers open and then the fans start turning.
- Once the fans begin moving, change the Unit Enable status to OFF. Verify the fans are turning the correct direction.

6.3.2 Fan Rotation

The first time the unit is started, verify the fans are turning the correct direction. If a fan is turning the wrong direction, it is likely due to a three-phase power source has been improperly connected.



NOTE: All dampers should be tested at start-up to verify that the dampers will open fully. See the *DN Quick-Start Guide*.

6.3.3 Current Switches

Current switches are calibrated at the factory for the default fan mode of fixed speed, 25% of maximum. Whenever new fan speed parameters are entered, the current switches must be recalibrated. See the instructions in Section 7.1.15 of this manual.

6.4 FINAL UNIT SET-UP

After completing the Quick-Start, the unit is ready for final set up. Set up the unit and the integrated controller based on the equipment and options installed and the application. Refer to the *DN-Series Integral Programmable Controls User Manual* for controller programming and operation. Make final connections for any external controls.

7.0 MAINTENANCE

RenewAire units are built to operate with minimal maintenance. Experience on the part of the service person is the most important issue in establishing a maintenance schedule. Maintenance is performed on a quarterly and annual basis.

24 hours after unit installation and initial start-up, perform the following:

- If the unit has DX or cooling coils, inspect the condensate pan to make sure condensate is draining properly.
- Check air filters since they collect dust, dirt and debris at time of start-up.

7.1 SCHEDULE

Maintenance of this unit is broken down into quarterly and annual tasks. The schedule should be adjusted for heating and cooling. If there is a cooling system in the unit, the annual maintenance should be scheduled for the start of the cooling season. If there is a heating system in the unit, the annual maintenance for the heating system should be scheduled for the start of the heating season. For some installations, it may be necessary to perform these tasks more often.

7.1.1 General Cleaning and Inspection (Quarterly)

Perform general cleaning and inspection when changing filters.

- Remove foreign objects from unit.
- Remove paper, leaves, etc. from inlet and outlet screens.
- Inspect for insect nests in unit, inlets and outlets.
- Check drain pans for overflowing and pooling.
- Check all motor and blower wheel mounting bolts are tight.

7.1.2 Filters (Quarterly)

Filter cleanliness and replacement is the most important and frequent maintenance issue. Dirty filters will cause an immediate reduction in operating efficiency of the DOAS. Normally, filter condition should be checked frequently by checking pressure drop data on the integrated microprocessor controller. The controller constantly monitors air pressure within the unit and will provide an alarm when pressure drop across the filters exceeds a user-assigned setpoint. Paper filters are not to be cleaned, they are to be replaced. In general, if a filter looks dirty, replace it.

Filter sizes and quantities:

DN-2: 16" x 20" x 2" nominal. Quantity: 4

DN-3: 20" x 20" x 2" nominal. Quantity: 6

DN-5: 16" x 20" x 2" nominal. Quantity: 14

DN-5 filter quantities include (10) for enthalpic cores and (4) for bypass.



NOTE: For information on programming and operating the Integrated Programmable Controller, see the *DN-Series Integral Programmable Controls User Manual*.

7.1.3 Filter Pressure Drop Tables

2" MERV 8 Clean Filter Pressure Drop (In. W. G.)															
Airflow (CFM)	375	500	750	1000	1125	1500	1650	2000	2500	3000	3300	3500	4000	4500	4950
DN-2	0.04	0.05	0.09	0.12	0.13	0.19	0.21								
DN-3			0.04	0.06	0.07	0.09	0.10	0.13	0.16	0.20	0.22				
DN-5					0.05	0.07	0.07	0.09	0.12	0.14	0.16	0.17	0.20	0.23	0.26

2" MERV 13 Clean Filter Pressure Drop (In. W.G.)															
Airflow (CFM)	375	500	750	1000	1125	1500	1650	2000	2500	3000	3300	3500	4000	4500	4950
DN-2	0.05	0.06	0.10	0.15	0.17	0.25	0.29								
DN-3			0.05	0.07	0.08	0.11	0.12	0.16	0.21	0.27	0.31				
DN-5					0.06	0.08	0.09	0.11	0.15	0.19	0.21	0.23	0.27	0.32	0.37

4" MERV 13 Clean Filter Pressure Drop (In. W.G.)															
Airflow (CFM)	375	500	750	1000	1125	1500	1650	2000	2500	3000	3300	3500	4000	4500	4950
DN-2	0.04	0.05	0.08	0.12	0.14	0.22	0.25								
DN-3			0.04	0.05	0.06	0.09	0.10	0.13	0.18	0.23	0.27				
DN-5					0.04	0.06	0.07	0.09	0.12	0.16	0.18	0.20	0.24	0.28	0.33

2" MERV 14 Clean Filter Pressure Drop (In. W.G.)															
Airflow (CFM)	375	500	750	1000	1125	1500	1650	2000	2500	3000	3300	3500	4000	4500	4950
DN-2	0.11	0.16	0.26	0.37	0.44	0.65	0.75								
DN-3			0.12	0.17	0.19	0.28	0.31	0.40	0.55	0.71	0.81				
DN-5					0.14	0.19	0.22	0.28	0.37	0.48	0.54	0.59	0.72	0.85	0.98

4" MERV 14 Clean Filter Pressure Drop (In. W.G.)															
Airflow (CFM)	375	500	750	1000	1125	1500	1650	2000	2500	3000	3300	3500	4000	4500	4950
DN-2	0.08	0.11	0.18	0.27	0.31	0.47	0.54								
DN-3			0.08	0.12	0.13	0.20	0.22	0.29	0.39	0.51	0.59				
DN-5					0.10	0.14	0.15	0.20	0.27	0.34	0.39	0.43	0.52	0.62	0.72

7.1.4 Cabinet Maintenance (Annual)

Once each year the entire cabinet should be thoroughly inspected for dirt build-up, corrosion or scratches to the finish (whether galvanized or painted). If dirt build-up is found, it should be cleaned and the source corrected. If scratches or corrosion are found, the surface should be cleaned and a protective coating should be applied.

Annual inspection:

- Inspect all door seals to make sure they are still pliable and function properly. Replace any seals that are hardened, cracked or ineffective.
- Inspect doors for proper alignment and door handle tension. See Section 7.1.16 in this manual.
- Inspect all caulked joints to verify that caulking is in good repair. Any joint caulk that is cracked or ineffective should be removed and replaced with fresh caulking.
- Look for rust, corrosion or dirt build-up. If found, clean the area and apply a proper sealant. Correct the source of any dirt.

7.1.5 Electric Motor Maintenance (Annual)

The most important issue in motor maintenance is motor cleanliness. Removing dust and grease buildup on the motor housing assists proper cooling. Never wash-down the motor.

7.1.6 VFDs (OPTIONAL)

Power electronics have limited life and may exhibit changed characteristics or performance deterioration after years of use under normal conditions. Periodic inspection and maintenance of the drive unit is required.

Drives contain a variety of power electronics such as power transistors, semiconductors, capacitors, resistors, fans, and relays. The electronics in the drive serve a critical role in maintaining proper motor control.

The VFD manual that was shipped with the unit has a maintenance and inspection schedule.

The drive will require more frequent inspection if it is placed in harsh environments, such as:

- High ambient temperatures
- Frequent starting and stopping
- Fluctuations in the AC supply or load
- Excessive vibrations or shock loading
- Poor storage conditions

Perform the first equipment inspection 3 months after installation.

The cooling fan on a VFD has an expected life of 2–3 years, while the main circuit capacitors have an expected life of 10 years.

Inspect all VFDs annually to verify that cooling fans are not blocked and are operating properly without causing overheating of either the VFD or the driven motor.

VFDs have a Performance Life Monitor built in so that the owner can use the keypad on the VFD to check for expected remaining life.

7.1.7 Enthalpic Core Maintenance (Annual)

⚠ CAUTION

RISK OF DAMAGE TO ENTHALPIC CORES

Whenever working within the DOAS cabinet, protect the enthalpic cores from accidental damage. The core media is subject to damage from dropped tools or other foreign objects.

The enthalpic core media is a fibrous material that must be kept clean at all times. As a minimum, cores should be cleaned once per year.

- DO NOT WASH OR ALLOW THE ENTHALPIC CORES TO GET WET.
- DO NOT EXPOSE THE ENTHALPIC CORES TO HIGH HEAT OR FLAMES.
- DO NOT DIRECT COMPRESSED AIR AT THE CORE MEDIA.
- DO NOT REMOVE THE ENTHALPIC CORES FROM THE UNIT UNLESS NECESSARY.
- USE CAUTION WHEN WORKING AROUND THE ENTHALPIC CORES. DO NOT DROP TOOLS OR OTHER OBJECTS ON THE CORES, DO NOT BUMP OR TWIST THE CORES.

To access enthalpic cores for cleaning, remove the air filters.

To clean enthalpic cores, all exposed surfaces must be vacuumed with an attachment having long, soft bristles. The greatest buildup of dirt and dust will normally be on the leading 1–2 inches of the inlet side (closest to the air filters).



NOTE: When cores are removed from the unit, they should be immediately protected from accidental damage, water, high heat, or flames.

Removal of Enthalpic Cores

Before removing enthalpic cores, switch the main disconnect to OFF. Open the door to the Energy Recovery Module and simply pull each core straight out of its guides.



FIGURE 7.1.0 END VIEW OF CORE SUPPORT ASSEMBLY

Reinstallation of Enthalpic Cores

Many DN units use a combination of what are referred to as “full size” and “half size” cores. When a half size core is used, it is positioned next to the access door. Full size cores are located behind any half size core. Cores have foam gasketing on one end of each core. The core should be reinstalled so that the foam gasketing is toward the back of the DN unit and the core label is facing toward the front. See illustration above.

7.1.8 OA Hood Maintenance (Annual)

OA hoods are equipped with a swing-open screen/mist eliminator assembly. OA hoods should be inspected periodically for dirt and debris. To access the interior of the OA hood, remove the machine screw at each of the front corners on the hood and swing the screen assembly down.



FIGURE 7.1.1 OA HOOD ACCESS

7.1.9 Coil Maintenance (Annual)

⚠ CAUTION**RISK OF INCIDENTAL DAMAGE TO DOAS COMPONENTS**

Many cleaning agents that are commonly used on coils may be damaging to other components such as enthalpic core media. Use protective sheeting to prevent accidental spread of chemicals. Thoroughly wash down the area when finished.

The primary maintenance issue with coils is “housekeeping”. Periodic inspection of all coils is needed to search for bent fins which will impede air flow and inspect for cleanliness which reduces the efficiency of the coil.

Coils must be cleaned to maintain maximum performance. Check coils once per year under normal operating conditions and if dirty, brush or vacuum clean. Soiled fins reduce the capacity of the coil, demand more energy from the fan and create an environment for odor and bacteria to grow and spread through the conditioned zone. Low pressure water spray may be used for cleaning the fins. In all cases, TEST THE SPRAY PRESSURE over a small corner of the coil to determine if the fins will withstand the spray pressure. Bent fins should be straightened as needed.

The RTFP coil uses round copper tubing with many thin aluminum plates that go from tube to tube. The aluminum plates can easily be bent and when that happens, the plates need to be straightened. Use a common “fin comb” to straighten the plates. If there is dirt build-up on the fins, the ability of the coil to transfer heat is greatly reduced. Dirt can be cleaned off by using a commercial cleaning agent and then hosing it down with fresh water.

For coils with fragile fins or high fin density, foaming chemical sprays and washes are available. Many coil cleaners use harsh chemicals, so they must be used with caution by qualified personnel only. Care must be taken not to damage the coils, including the fins, while cleaning.

Caution: fin edges are sharp!



NOTE: Whenever using cleaning agents inside an unit, thoroughly wash down the area with fresh water when finished. Make sure that all residue, including cleaning chemicals, has been removed from the unit.



CAUTION: Use of glycol or polypropylene in ratios other than originally specified will affect thermal exchange properties.

7.1.10 Condensate Drain Maintenance (Annual)

Every DN unit having either a chilled water coil or a DX coil will have a drain pan. A drain pan is a tray or pan inside the unit that is designed to collect condensation resulting from normal operation of cooling coils.

Drain traps are located outside the air handler and are connected to a drain pan. A drain trap gives a path for discharge of condensation but its primary function is to provide a water column that prevents outside air from being drawn into the unit.

Drain pans and drain traps are places that are subject to bacteria growth. Each month, drain pans and drain traps should be inspected and drain traps should be filled. Inspect both the traps and the pans for evidence of bacteria or algae. If there is any evidence, clean thoroughly and treat with an appropriate growth inhibitor. If evidence of algae or bacterial growth is found, inspect and treat weekly until the problem is solved.

At the start of each heating season, drain traps should be filled with a glycol solution and if there is an electric heater (heat tape) on the trap or drain trap discharge pipe, it should be tested to make sure it functions properly.

7.1.11 Damper Maintenance (Annual)

IMPORTANT

Damper linkages are to be lubricated with a graphite lubricant that does not contain petroleum or silicone. Petroleum lubricants are known to cause build-up of dirt and grime, while silicone lubricants can cause contamination spread in facilities where finishing of products with lacquers and paints is performed.

Dampers are to be inspected annually for correct operation. Make sure they open and close fully. Inspect the side linkages for excessive looseness and lubricate the linkages with graphite lubricant.

7.1.12 Fan Maintenance (Annual)

All DN units use 2 direct-drive plenum fans. Blow or wipe any accumulated dust off the blower wheel. Inspect the wheel for cracks or other damage. Observe the fans during operation, checking for vibration or noise. Rotate the impellers by hand, checking for any rubbing of the impeller against the inlet cone.

7.1.13 Gas Heat Module Maintenance (Annual)

See the gas heat module maintenance requirements as shown in the *Indirect Gas-Fired Heat Module User Manual*.

7.1.14 Electric Heat Module Maintenance (Annual)

See the electric heat module maintenance requirements as shown in the *Integrated Electric Heat Module User Manual*.

7.1.15 Current Switch Adjustment

Current switches are installed in the low voltage side of the electrical box. They work by sensing current passing through one or more high voltage power lines that pass through the center of the switch module.

Each switch has two indicator LEDs, showing “trip off” or “trip on”. The switch functions as an alarm condition indicator for the unit controller. If the switch goes into alarm, the controller alarm will reset itself when the alarm condition is satisfied. The controller will not reset itself and will continue to show an alarm in the circuit or system being monitored. **Current switches are to be field-adjusted when the unit is running at its minimum speed.**



FIGURE 7.1.2 CURRENT SWITCH (TYPICAL)

On the top of the sensor, there are an adjusting screw and two LED lights, one red and one blue. The adjusting screw will turn 15 turns. To set the sensor:

- Verify the BLUE LED is on.
- Slowly adjust the screw clockwise until the RED LED just turns on. This sets the trip point at the normal operating load current.
- If the RED LED is on after initial power-up, slowly adjust the screw counter-clockwise until the BLUE LED turns on and then slowly adjust the screw clockwise until the RED LED just turns on.

7.1.16 Door Latch Adjustment

With age and use, the door gaskets may become compressed and no longer provide a complete seal against air leakage. The door latches can be easily adjusted by changing the position of the swing arm on the inside of the door. See photo below.



FIGURE 7.1.3 DOOR LATCH ADJUSTMENT

7.1.17 Fan/Motor Removal

Each EC motor and fan are part of an assembly that is mounted on an air inlet cone. If a fan or EC fan motor should require servicing or replacement, the entire assembly should be removed from the DN. The assembly is bolted to the plenum wall with 8 bolts and the assembly rests on a bracket. See the Service Parts illustration in Section 7.3. Also see photographs on following page.

Each asynchronous motor and fan are part of an assembly that is mounted on a sled. If a fan or fan motor should require servicing or replacement, the fan and motor should be unbolted from the sled in order to remove it from the DN. See the Service Parts illustration in Section 7.3 of this manual. Also see photographs below. When reinstalling the motor and fan, verify correct clearances from the fan to the inlet cone.



FIGURE 7.1.3 SINGLE PHASE EC MOTOR WIRING CONNECTIONS

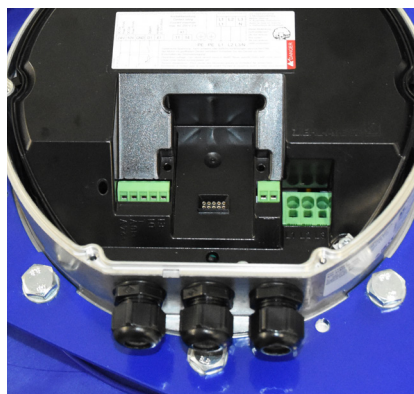


FIGURE 7.1.4 THREE PHASE EC MOTOR WIRING CONNECTIONS

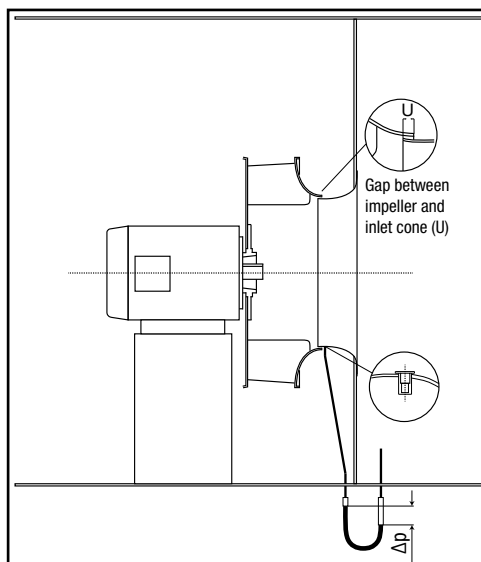


FIGURE 7.1.6 ASYNCHRONOUS MOTOR AND FAN ASSEMBLY, CORRECT OVERLAP IS .14"

7.1.18 Coil Removal

If it becomes necessary to remove any water or DX coil from a DOAS, it will have to be pulled straight forward through the front access panel opening. Any DX coil that is in the coil compartment will have to be evacuated. All coil tubes that extend through the access door must be cut off to allow removal of the door. Coils rest on either a bracket or rails and each coil has a positioning bracket at the rear of each coil, holding it in place. There are also two retaining bolts at the front of each coil, positioned toward the front of the DOAS.

7.1.19 Water Treatment

RenewAire does not make any recommendations regarding minimum water quality for user-supplied water in the DN coils. If the user is employing a water treatment system, observe the instructions provided with the specific treatment system.

7.1.20 Winterization

Winterization normally applies to “wet” areas of an air handler that will be exposed to freezing temperatures. This includes any water-filled coils and/or water supply piping and water drains, such as from condensate pans and P-traps. Prior to the first hard frost of the year, all air handler components should be examined and a plan put in place to either remove all water from the device or else to protect water-laden components. It is the user’s responsibility to determine possible freezing risks and implement a plan to protect the unit from freeze damage.

Also see the User Manuals for any included options such as gas heat and electric heat.

ENTER DATES OF SERVICE

7.3 SERVICE PARTS

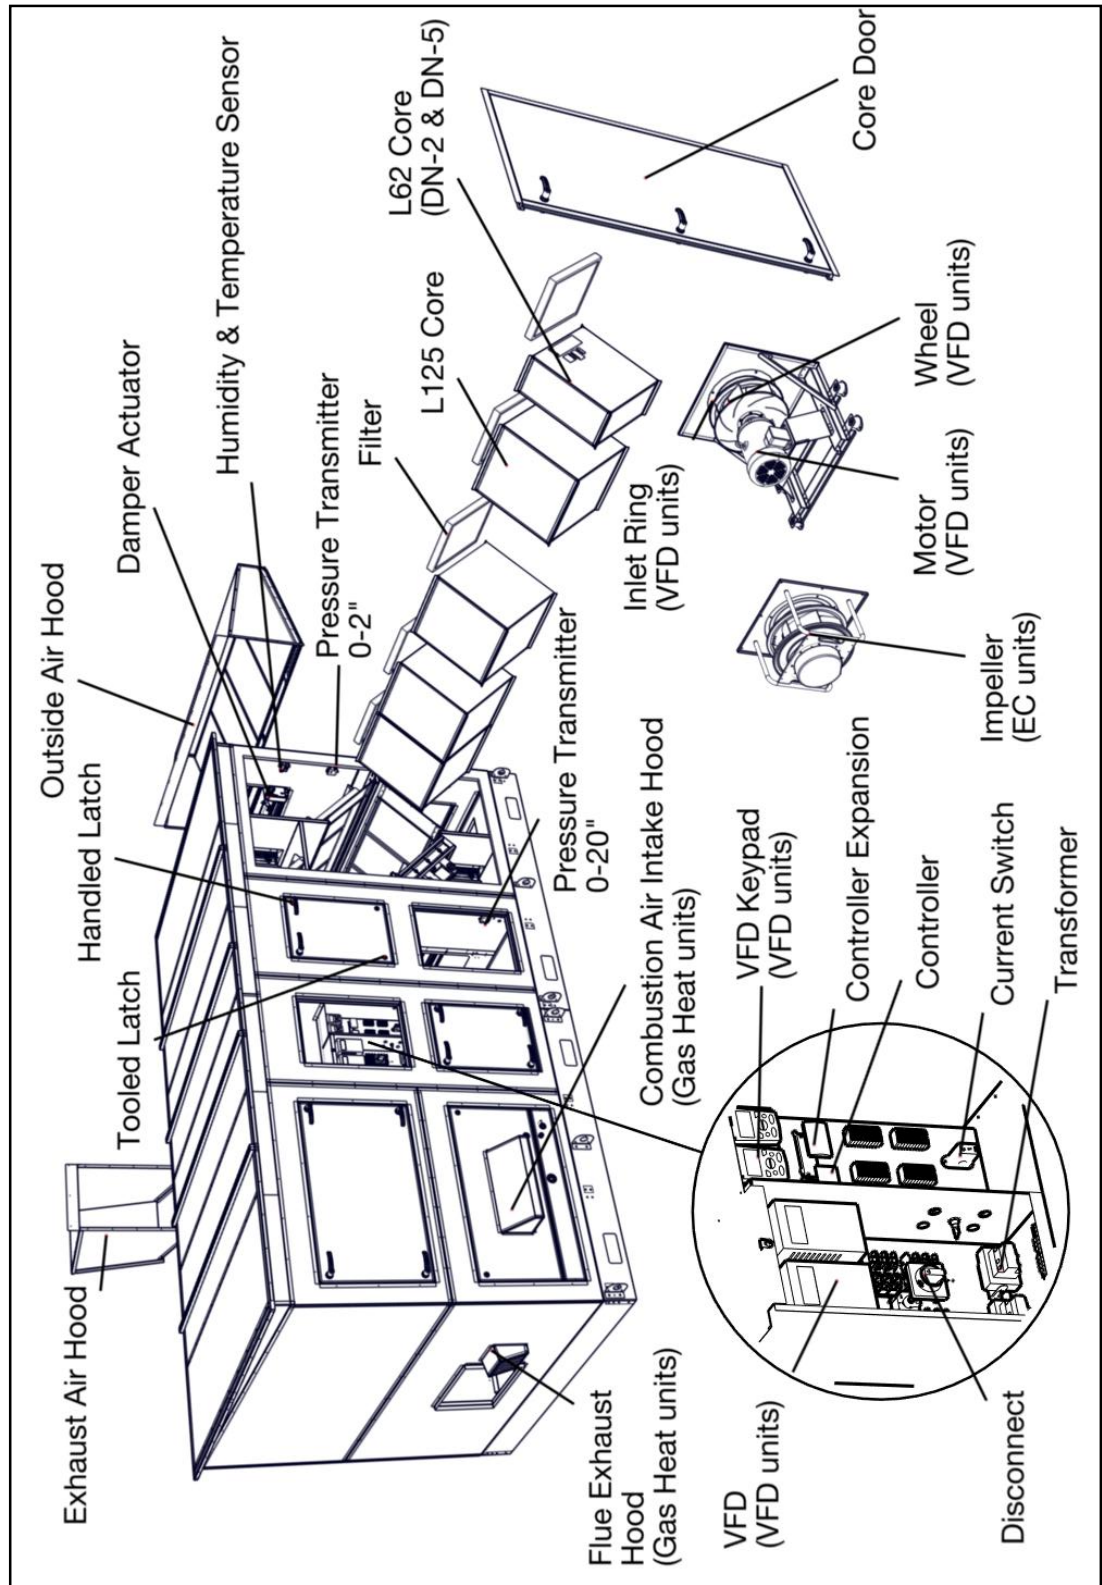


FIGURE 7.3.0 DN SERVICE PARTS

8.0 TROUBLESHOOTING

The DN unit was tested at the factory prior to shipment. After installation, the Integrated Controller should be set up at the site for the specific application. Over time, components can wear out or become inoperable.

Before calling the factory, perform the following checks:

- Check there is voltage at the disconnect switch. A remote disconnect switch or circuit breaker may be turned off.
- Check there is voltage across the fuses, if any. If a fuse is blown, remove the cause of the short circuit and replace the fuse.
- Check that the integrated controller display is lit. If it is not, check the controller fuse. Check the 24VAC transformer circuit breakers. If fuse is blown or if circuit breakers tripped, remove excessive load causing short circuit. Replace fuse or reset transformer circuit breakers.
- Verify there is a call for the unit to operate. The OA and EA dampers should be open. If the dampers are not open, troubleshoot the dampers. If dampers are open but fans are not operating, then the current switches may need adjustment. See Section 7.1.15 Current Switch Adjustment.

Any faults in the operation of the DN unit are normally recorded by the Integrated Controller. The first step in troubleshooting is to view the Alarm screens. Press the Alarm button on the face of the controller to see all current alarms and what function or component is causing the alarm. In some cases, the Alarm pre-set may need to be adjusted or an offset may need to be changed.

BEFORE MAKING ANY CHANGES TO THE CONTROLLER PROGRAMMING, BE CERTAIN TO HAVE AN UPDATED BACKUP FILE SO THAT CURRENT SETTINGS CAN BE EASILY RESTORED, IF NEEDED.

Problems are sometimes strictly mechanical, in which a fan or damper or some other component simply stops working. Mechanical problems are easily traced to specific components by using the prompts provided by the Alarm function button on the face of the controller.

In other cases, problems may be caused by the unit trying to overcome a pre-set or operating parameter that has been set by the user. In these cases, a simple adjustment of the pre-set or an offset may correct the Alarm condition.

9.0 FACTORY ASSISTANCE

In the unlikely event that you need assistance from the factory for a specific issue, make sure that you have the information called for in the Unit Records page in the Owner Information section of this manual. The person you speak with at the factory will need that information to properly identify the unit and the installed options.

To contact RenewAire Customer Service:

Call 800-627-4499

Email: RenewAireSupport@RenewAire.com

Remember that RenewAire Customer Service can only assist with the products sold by RenewAire, it cannot resolve engineering issues that result from air handling system design by others, nor can it provide instructions for connecting to an owner-supplied BMS. There is a complete points list found in the *RenewAire DN-Series Integrated Programmable Controls User Manual*, provided with the unit and also available on the RenewAire.com website.



About RenewAire

For over 30 years, **RenewAire** has been a pioneer in enhancing indoor air quality (IAQ) in commercial and residential buildings of every size. This is achieved while maximizing sustainability through our fifth-generation, static-plate, enthalpic-core **Energy Recovery Ventilators (ERVs)** that optimize energy efficiency, lower capital costs via load reduction and decrease operational expenses by minimizing equipment needs, resulting in significant energy savings. Our ERVs are competitively priced, simple to install, easy to use and maintain and have a quick payback. They also enjoy the industry's best warranty with the lowest claims due to long-term reliability derived from innovative design practices, expert workmanship and **Quick Response Manufacturing (QRM)**.

As the pioneer of static-plate core technology in North America, RenewAire is the largest ERV producer in the USA. We're **committed to sustainable manufacturing** and lessening our environmental footprint, and to that end our Waunakee, WI plant is 100% powered by wind turbines. The facility is also one of the few buildings worldwide to be LEED® Gold and Green Globes certified, as well as having achieved ENERGY STAR Building status. In 2010, RenewAire joined the Soler & Palau (S&P) Ventilation Group in order to provide direct access to the latest in energy-efficient air-moving technologies. For more information, visit: renewaire.com

201 Raemisch Road | Waunakee, WI | 53597 | 800.627.4499 | RenewAire.com