ABBREVIATIONS

EA: Exhaust Air to outside

OA: Outside Air intake RA: Room Air to be exhausted


SA: Supply Air to inside


INSTALLATION ORIENTATION Unit must be installed in orientation shown.

NOTE

1. UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE ROUNDED TO THE NEAREST EIGHTH OF AN INCH.

- 2. SPECIFICATIONS MAY BE SUBJECT TO CHANGE WITHOUT NOTICE.
- 3. UNIT AND UNIT DOORS CANNOT BE MIRRORED.
- 4. FOR CURB DETAILS REFER TO CURB DRAWING.
- 5. FOR PROJECT SPECIFIC DRAWINGS REFER TO PROJECT SUBMITTAL.

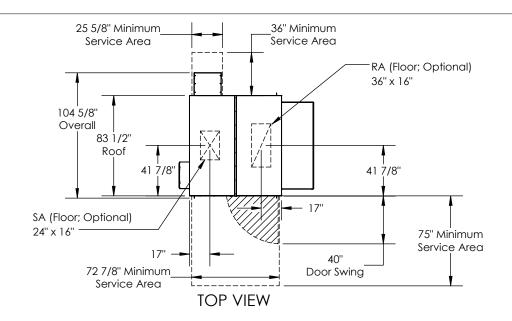

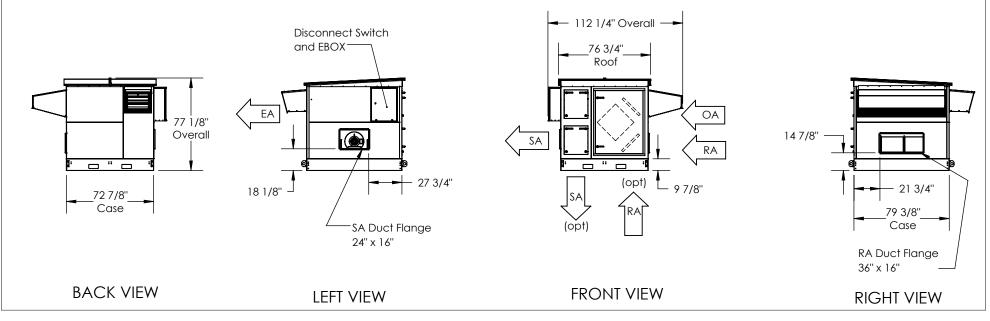

Model: DN-3JRT ERV 2"

Drawing Type: Unit Dimension Version: DEC18

ERV Only No Coils, No Heat

