



TOP VIEW

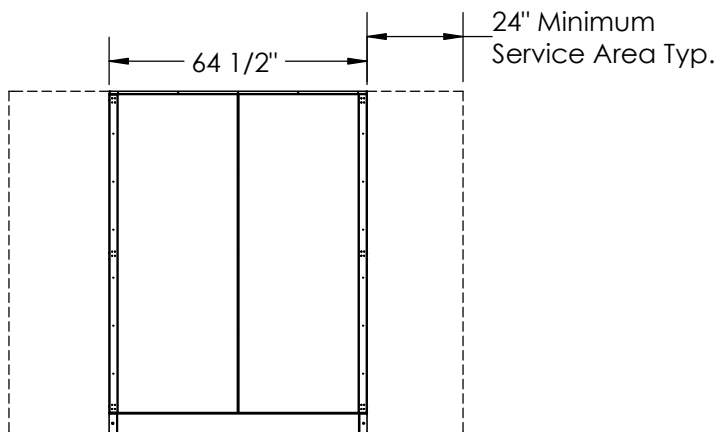

SIDE VIEW

AIRFLOW ORIENTATIONS (SIDE VIEW)

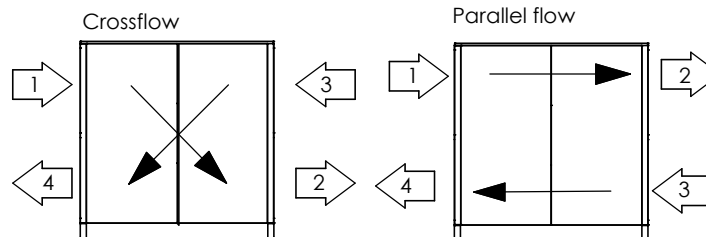


Performance:
Crossflow airflow orientations have best thermal performance compared to parallel flow airflow. See IOM for details.

- 1 = OA: Outside Air intake
- 2 = SA: Supply Air to inside
- 3 = RA: Room Air to be exhausted
- 4 = EA: Exhaust Air to outside

INSTALLATION ORIENTATION
Unit must be installed in orientation shown.

- NOTE:**
- 1. UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE ROUNDED TO THE NEAREST EIGHTH OF AN INCH.
 - 2. SPECIFICATIONS MAY BE SUBJECT TO CHANGE WITHOUT NOTICE.
 - 3. FILTERS REQUIRED ON UPSTREAM SIDE OF CORES.
 - 4. UNIT WILL SHIP DISASSEMBLED AND REQUIRES ON-SITE ASSEMBLY.
 - 5. DUCT WORK SUPPLIED BY OTHERS.
 - 6. RA/EA AIRSTREAM CAN BE SWITCHED TO OA/SA AIRSTREAM. EACH AIRSTREAM IS REVERSIBLE.

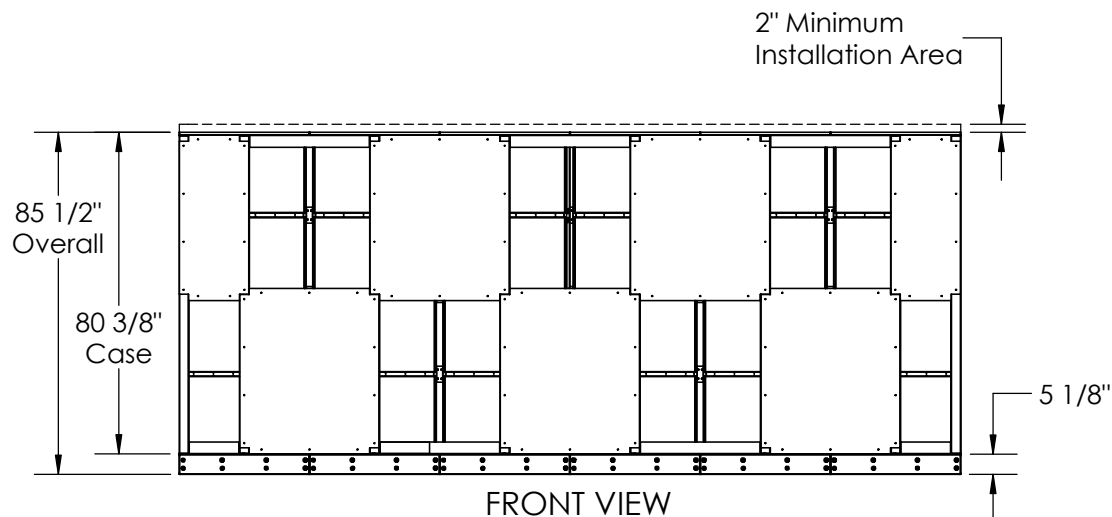

FRONT VIEW