1 = OA: Outside Air intake 2 = SA: Supply Air to inside **AIRFLOW** 3 = RA: Room Air to be exhausted 4 = EA: Exhaust Air to outside **ORIENTATIONS** (SIDE VIEW) **INSTALLATION ORIENTATION** Unit must be installed in orientation shown. Parallel flow Crossflow NOTE: 1. UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE ROUNDED TO THE 1 3 NEAREST EIGHTH OF AN INCH. 2. SPECIFICATIONS MAY BE SUBJECT TO CHANGE WITHOUT NOTICE. 4 2 260 1/2" 3. FILTERS REQUIRED ON UPSTREAM SIDE OF CORES. 4. UNIT WILL SHIP DISASSEMBLED AND REQUIRES ON-SITE ASSEMBLY. Performance: Crossflow airflow orientations have best thermal performance 5. DUCT WORK SUPPLIED BY OTHERS. compared to parallel flow airflow. See IOM for details. 6. RA/EA AIRSTREAM CAN BE SWITCHED TO OA/SA AIRSTREAM. EACH AIRSTREAM IS REVERSIBLE. **TOP VIEW** 2" Minimum Installation Area 24" Minimum - 64 1/2" -Service Area Typ. 165 1/4" Overall 160 1/8" Case FRONT VIEW SIDE VIEW

Model: SA8H8W

Drawing Type: Unit Dimension Version: SEP21

