

**ABBREVIATIONS** EA: Exhaust Air to outside OA: Outside Air intake RA: Room Air to be exhausted SA: Supply Air to inside CA: Condenser Air

INSTALLATION ORIENTATION Unit must be installed in orientation shown.

1. UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE ROUNDED TO THE NEAREST EIGHTH OF AN INCH.

- 2. SPECIFICATIONS MAY BE SUBJECT TO CHANGE WITHOUT NOTICE.
- 3. FOR PIPE CONNECTION DETAILS REFER TO CORES OR UNIT SELECTION SUBMITTAL.
- 4. UNIT, UNIT DOORS, AND COILS CANNOT BE MIRRORED.
- 5. FOR CURB DETAILS REFER TO CURB DRAWING.
- 6. FOR PROJECT SPECIFIC DRAWINGS REFER TO PROJECT SUBMITTAL.
- 7. SCREEN SWING AREA VARIES DEPENDING ON HORIZONTAL OR VERTICAL DUCT CONNECTIONS.

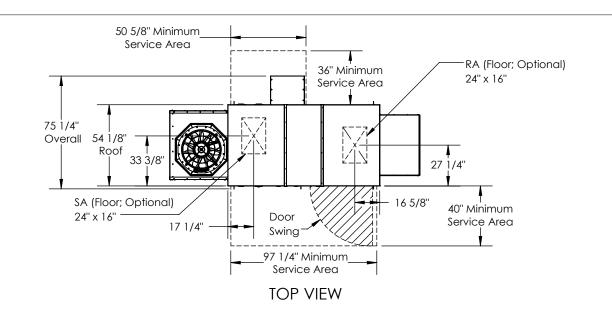

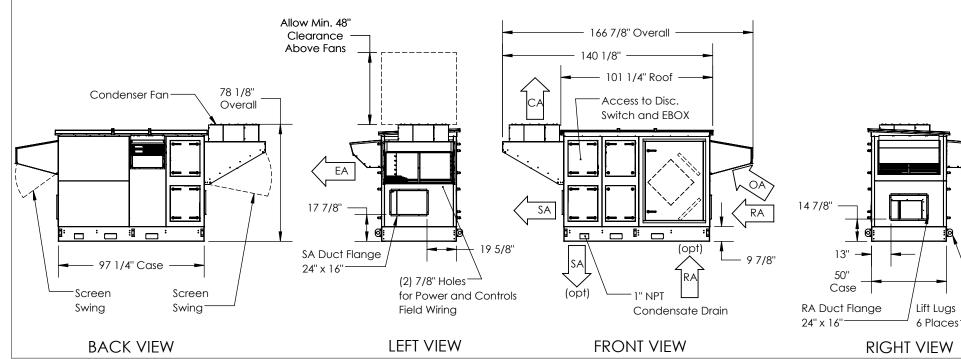



Drawing Type: Unit Dimension Version: JUN20

