ABBREVIATIONS
EA: Exhaust Air to outside
OA: Outside Air intake
RA: Room Air to be exhausted
FA: Fresh Air to inside
RTF: Rooftop Vertical FA Only
RTH: Rooftop Horizontal RA & FA

INSTALLATION ORIENTATION
Unit must be installed in orientation shown.

NOTE
1. UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE ROUNDED TO THE NEAREST EIGHTH OF AN INCH.

2. SPECIFICATIONS MAY BE SUBJECT TO CHANGE WITHOUT NOTICE.

CURB LE10X

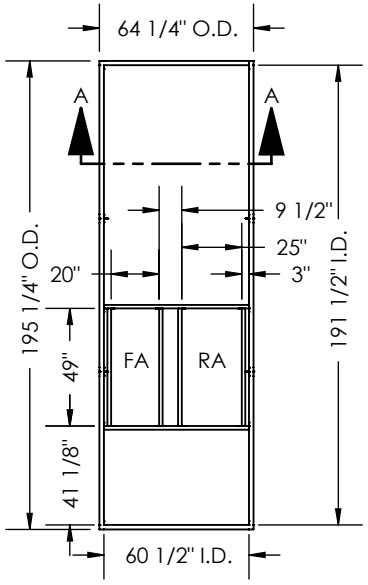

TOP VIEW

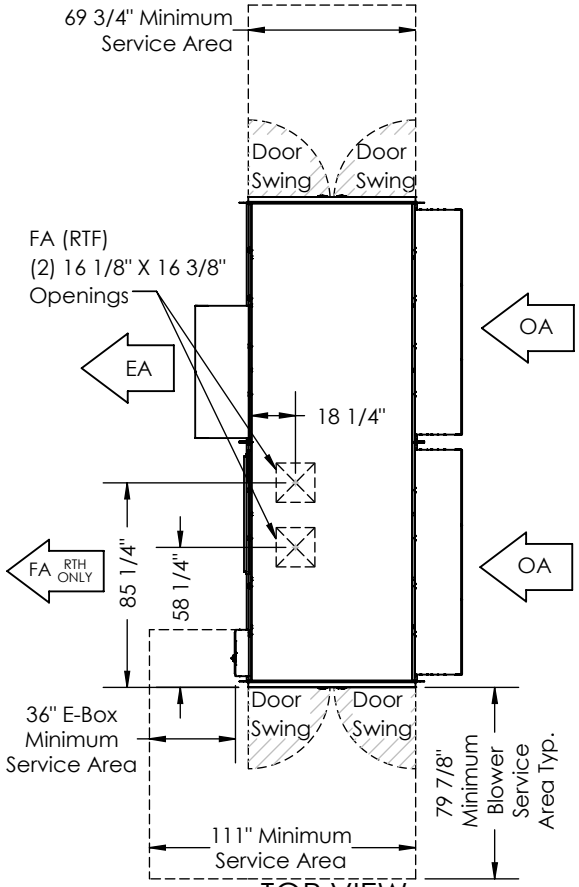

TOP VIEW

CURB CROSS-SECTION A-A (TYP.)

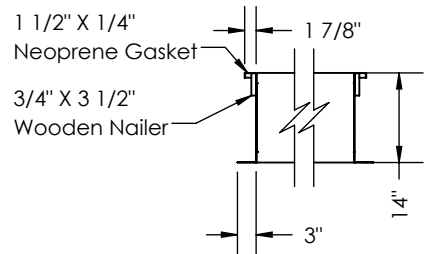

SECTION A-A

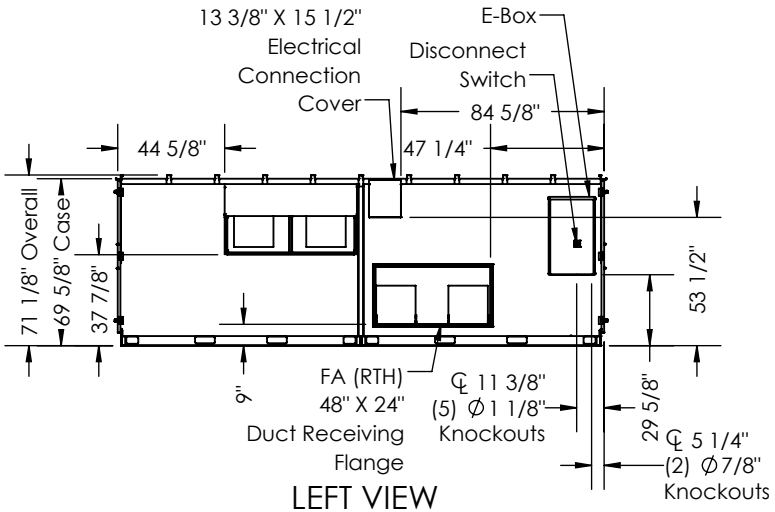

LEFT VIEW

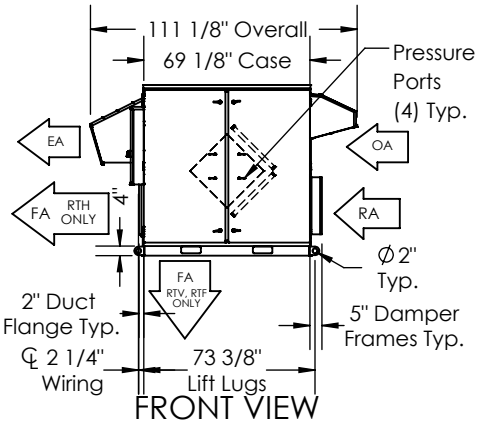

FRONT VIEW

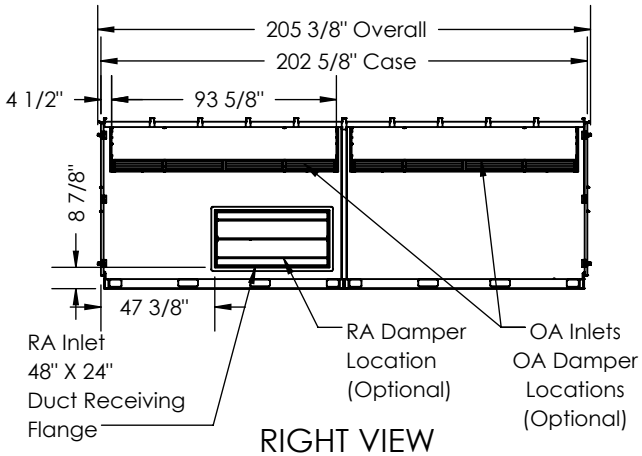

RIGHT VIEW

Model: LE10X RTH/RTF
Drawing Type: Unit Dimension
Version: MAY18

RenewAire®
Energy Recovery Ventilation