ABBREVIATIONS
EA: Exhaust Air to outside
OA: Outside Air intake
RA: Room Air to be exhausted
FA: Fresh Air to inside

INSTALLATION ORIENTATION
Unit must be installed in orientation shown.

NOTE
1.UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE ROUNDED TO THE NEAREST EIGHTH OF AN INCH.

2.SPECIFICATIONS MAY BE SUBJECT TO CHANGE WITHOUT NOTICE.

3.MIN. DUCT CLEARANCE FROM DAMPER BLADES WHEN FULLY OPENED TO BE 2". SMACNA RULES APPLY.

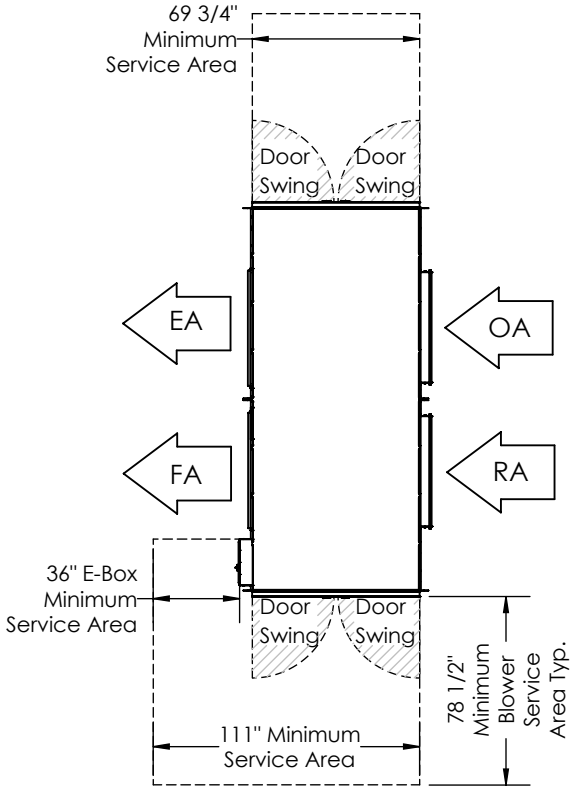

TOP VIEW

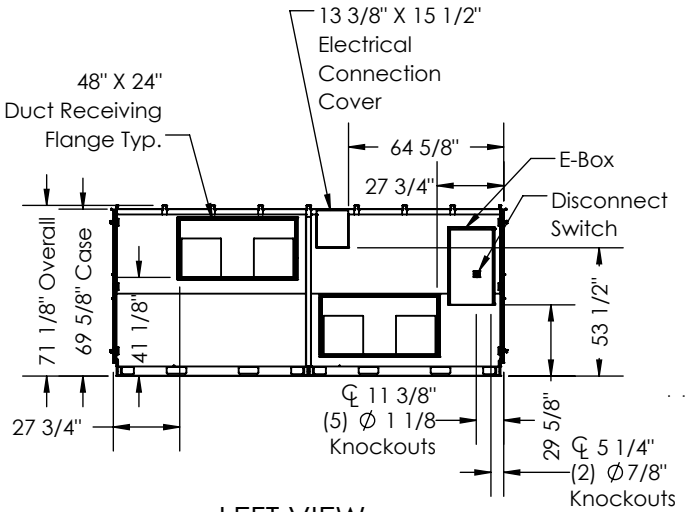

LEFT VIEW

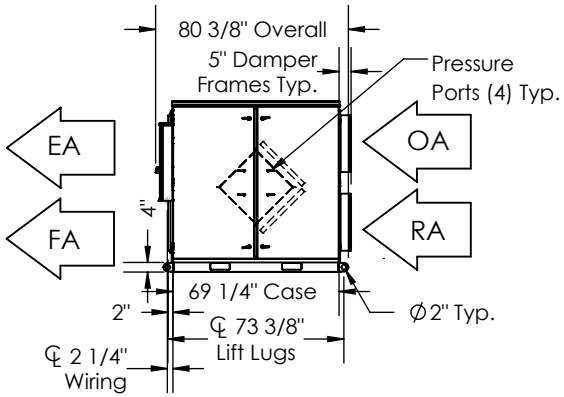

FRONT VIEW

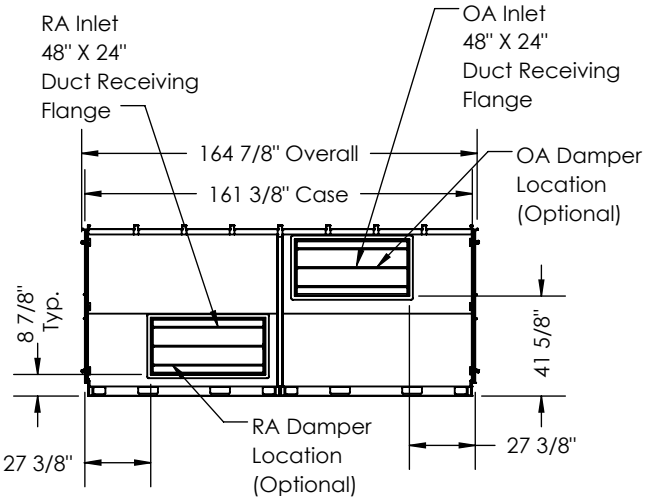

RIGHT VIEW

Model: LE8XINH
Drawing Type: Unit Dimension
Version: MAY18

RenewAire®
Energy Recovery Ventilation