

RESIDENTIAL DOOR LATCH HARDWARE KIT

Replacement Guide

Replacement doors from RenewAire include upgraded latches that are to replace the older style latches. These new latches are to be field-installed when installing replacement doors. A hardware kit that contains a complete set of new style door latches and mounting hardware is provided.



OLD LATCH ASSEMBLY



NEW LATCH ASSEMBLY

TOOLS REQUIRED:

- Electric drill
- 1/8" drill bit
- Center punch
- Pop rivet tool

PROCEDURE:

- Use the electric drill and bit to drill out the pop rivets that secured the old door latch hardware from the cabinet front. Remove the old hardware.
- **USE THIS SHEET AS A TEMPLATE** and reference the existing holes to locate the position of the new holes that are to be drilled.
- Use the center punch to prick the metal where the new holes are to be drilled. Drill 1/8" diameter holes for the mounting rivets.
- Install the new hardware using the provided 1/8" pop rivets.




NOTE:
Hold the template over the two existing holes and then use a pointed object such as a pencil to fix the position of the template. Tape the template in place while marking the two new holes.

CABINET DOOR:

Replacement cabinet doors as shipped from the factory have the new door catches installed. If it is necessary to replace old style hardware on other units, use the template below to replace the door catches. Position the template over the two existing holes and mark, centerpunch and drill two new holes as shown.

TOP OF DOOR

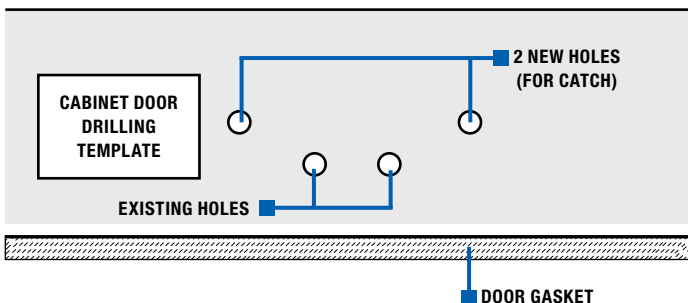

CABINET FRONT:

There are two existing holes where the old latch was installed. Use the template below to locate the two new holes needed for the new latch. Position the template over the two existing holes and mark, centerpunch and drill the two new holes as shown.

TOP OF CABINET

